



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
C30	2009	TCM	MPS6	●	●	●	●	●	○		
C30	2009	ECM	D5244T9	●	●	●	●	●	●		
C30	2009	ECM	D5244T8	●	●	●	●	●	●		
C30	2009	ECM	D5244T13	●	●	●	●	●	●		
C30	2009	ECM	D4204T	●	●	●	●	●	●	71, 9, 141, 69	
C30	2009	ADM	D4204T	●	●	●	●	●	○		
C30	2009	ECM	D4204T	●	●	●	●	●	●	71, 9, 141, 69	
C30	2009	ADM	D4164T	●	●	●	●	●	○		
C30	2009	ECM	D4164T	●	●	●	●	●	●	69, 141	
C30	2009	ECM	B5254T7	●	●	●	●	●	●	74	
C30	2009	ECM	B5244S4	●	●	●	●	●	●	9	
C30	2009	ECM	B4204S3	●	●	●	●	●	●	9	
C30	2009	ECM	B4184S8	●	●	●	●	●	●	9	
C30	2009	ECM	B4184S11	●	●	●	●	●	●	9	
C30	2009	ECM	B4164S3	●	●	●	●	●	●	9	
C30	2009	TCM	AW55-50/51SN	●	●	●	●	●	●	83, 111, 1, 140, 4, 100, 101	
C30	2009	AEM		●	●	●	●	●	●	146	
C30	2009	KVM		●	●	●	●	●	●	147	
C30	2009	RDAR		●	●	●	●	●	○		
C30	2009	PHM		●	●	●	●	●	○		
C30	2009	CPM		●	●	●	●	●	●		
C30	2009	AUD		●	●	●	●	○	○		
C30	2009	BPM		●	●	●	●	●	○		
C30	2009	PAM		●	●	●	●	●	○		
C30	2009	SRS		●	●	●	●	●	○	95	
C30	2009	DDM		●	●	●	●	●	●	149, 150	
C30	2009	PDM		●	●	●	●	●	●	149, 150	
C30	2009	AUU		●	●	●	●	●	○		
C30	2009	BCM		●	●	●	●	●	○	146, 111	
C30	2009	CCM		●	●	●	●	○	○	30, 113, 152, 32, 153	
C30	2009	SWM		●	●	●	●	●	○		
C30	2009	TRM		●	●	●	●	●	○		
C30	2009	EPS		●	●	●	●	●	○		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
C30	2009	IAM		●	●	●	●	●	●		
C30	2009	PSL		●	●	●	●	●	●	145	
C30	2009	PSR		●	●	●	●	●	●	145	
C30	2009	CEM		●	●	●	●	●	●	154, 156, 94, 158, 35, 95, 159, 160,	
C30	2009	DIM		●	●	●	●	●	●	48, 161, 46, 165, 118, 51	
C30	2009	ICM		●	●	●	●	●	●	166, 167, 168	
C30	2009	MMM		●	●	●	●	○	○		
C30	2008	TCM	MPS6	●	●	●	●	●	○		
C30	2008	ECM	D5244T9	●	●	●	●	●	●		
C30	2008	ECM	D5244T8	●	●	●	●	●	●		
C30	2008	ECM	D5244T13	●	●	●	●	●	●		
C30	2008	ECM	D4204T	●	●	●	●	●	●	71, 9, 141, 69	
C30	2008	ADM	D4204T	●	●	●	●	●	○		
C30	2008	ECM	D4204T	●	●	●	●	●	●	71, 9, 141, 69	
C30	2008	ADM	D4164T	●	●	●	●	●	○		
C30	2008	ECM	D4164T	●	●	●	●	●	●	69, 141	
C30	2008	ECM	B5254T7	●	●	●	●	●	●	74	
C30	2008	ECM	B5244S4	●	●	●	●	●	●	9	
C30	2008	ECM	B4204S3	●	●	●	●	●	●	9	
C30	2008	ECM	B4184S8	●	●	●	●	●	●	9	
C30	2008	ECM	B4184S11	●	●	●	●	●	●	9	
C30	2008	ECM	B4164S3	●	●	●	●	●	●	9	
C30	2008	TCM	AW55-50/51SN	●	●	●	●	●	●	83, 111, 1, 140, 4, 100, 101	
C30	2008	BCM		●	●	●	●	●	○	146, 111	
C30	2008	KVM		●	●	●	●	●	●	147	
C30	2008	RDAR		●	●	●	●	●	○		
C30	2008	CPM		●	●	●	●	●	●		
C30	2008	AUD		●	●	●	●	○	○		
C30	2008	PAM		●	●	●	●	●	○		
C30	2008	SRS		●	●	●	●	●	○	95	
C30	2008	DDM		●	●	●	●	●	●	149, 150	
C30	2008	PDM		●	●	●	●	●	●	149, 150	
C30	2008	PSL		●	●	●	●	●	●	145	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
C30	2008	PSR		●	●	●	●	●	●	145	
C30	2008	AUU		●	●	●	●	●	○		
C30	2008	CCM		●	●	●	●	●	○	30, 113, 152, 32, 153	
C30	2008	PHM		●	●	●	●	●	○		
C30	2008	CEM		●	●	●	●	●	●	154, 156, 94, 158, 159, 160, 35, 162	
C30	2008	DIM		●	●	●	●	●	●	48, 161, 46, 165, 118, 51	
C30	2008	SWM		●	●	●	●	●	○		
C30	2008	TRM		●	●	●	●	●	○		
C30	2008	EPS		●	●	●	●	●	○		
C30	2008	IAM		●	●	●	●	●	●		
C30	2008	ICM		●	●	●	●	●	●	166, 167, 168	
C30	2008	MMM		●	●	●	●	○	○		
C30	2007	ECM	D5244T9	●	●	●	●	●	●		
C30	2007	ECM	D5244T8	●	●	●	●	●	●		
C30	2007	ADM	D4204T	●	●	●	●	●	○		
C30	2007	ECM	D4204T	●	●	●	●	●	●	71, 9, 141, 69	
C30	2007	ADM	D4164T	●	●	●	●	●	○		
C30	2007	ECM	D4164T	●	●	●	●	●	●	69, 141, 169	
C30	2007	ECM	B5254T3	●	●	●	●	●	●	74	
C30	2007	ECM	B5244S4	●	●	●	●	●	●	9	
C30	2007	ECM	B4204S3	●	●	●	●	●	●	9	
C30	2007	ECM	B4184S8	●	●	●	●	●	●	9	
C30	2007	ECM	B4184S11	●	●	●	●	●	●	9	
C30	2007	ECM	B4164S3	●	●	●	●	●	●	9	
C30	2007	TCM	AW55-50/51SN	●	●	●	●	●	●	83, 111, 1, 140, 4, 100, 101	
C30	2007	DIM		●	●	●	●	●	●	48, 161, 46, 165, 118	
C30	2007	GPS		●	●	●	●	●	○		
C30	2007	BCM		●	●	●	●	●	○	146, 111	
C30	2007	TMC		●	●	●	●	●	○		
C30	2007	SWM		●	●	●	●	●	○		
C30	2007	KVM		●	●	●	●	●	●	147	
C30	2007	PHM		●	●	●	●	●	○		
C30	2007	CEM		●	●	●	●	●	●	154, 156, 94, 158, 159, 160, 162, 95	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
C30	2007	MMM		●	●	●	●	○	○		
C30	2007	RDAR		●	●	●	●	●	○		
C30	2007	CPM		●	●	●	●	●	●		
C30	2007	IAM		●	●	●	●	●	●		
C30	2007	AUD		●	●	●	●	○	○		
C30	2007	PAM		●	●	●	●	●	○		
C30	2007	SRS		●	●	●	●	●	○	95	
C30	2007	DDM		●	●	●	●	●	●	149, 150	
C30	2007	PDM		●	●	●	●	●	●	149, 150	
C30	2007	PSL		●	●	●	●	●	●	145	
C30	2007	PSR		●	●	●	●	●	●	145	
C30	2007	CCM		●	●	●	●	●	○	30, 113, 152, 32, 153	
C30	2007	TRM		●	●	●	●	●	○		
C30	2007	ICM		●	●	●	●	●	●	166, 167	
C30	2007	EPS		●	●	●	●	●	○		
C70 (06-)	2009	TCM	MPS6	●	●	●	●	●	○		
C70 (06-)	2009	ECM	D5244T9	●	●	●	●	●	●		
C70 (06-)	2009	ECM	D5244T8	●	●	●	●	●	●		
C70 (06-)	2009	ECM	D5244T13	●	●	●	●	●	●		
C70 (06-)	2009	ECM	D4204T	●	●	●	●	●	●	71, 9, 141, 69	
C70 (06-)	2009	ADM	D4204T	●	●	●	●	●	○		
C70 (06-)	2009	ECM	D4204T	●	●	●	●	●	●	71, 9, 141, 69	
C70 (06-)	2009	ECM	B5254T7	●	●	●	●	●	●	74	
C70 (06-)	2009	ECM	B5244S5	●	●	●	●	●	●	9	
C70 (06-)	2009	ECM	B5244S4	●	●	●	●	●	●	9	
C70 (06-)	2009	TCM	AW55-50/51SN	●	●	●	●	●	●	83, 111, 1, 140, 4, 100, 101	
C70 (06-)	2009	AEM		●	●	●	●	●	●	146	
C70 (06-)	2009	KVM		●	●	●	●	●	●	147	
C70 (06-)	2009	RDAR		●	●	●	●	●	○		
C70 (06-)	2009	PHM		●	●	●	●	●	○		
C70 (06-)	2009	CPM		●	●	●	●	●	●		
C70 (06-)	2009	AUD		●	●	●	●	○	○		
C70 (06-)	2009	BPM		●	●	●	●	●	○		

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
C70 (06-)	2009	PAM		●	●	●	●	●	○		
C70 (06-)	2009	SRS		●	●	●	●	●	○	95	
C70 (06-)	2009	DDM		●	●	●	●	●	●	149, 150	
C70 (06-)	2009	PDM		●	●	●	●	●	●	149, 150	
C70 (06-)	2009	AUU		●	●	●	●	●	○		
C70 (06-)	2009	BCM		●	●	●	●	●	○	146, 111	
C70 (06-)	2009	CCM		●	●	●	●	○	○	30, 113, 152, 32, 153	
C70 (06-)	2009	CRM		●	●	●	●	●	○	174, 176	
C70 (06-)	2009	SWM		●	●	●	●	●	○		
C70 (06-)	2009	TRM		●	●	●	●	●	○		
C70 (06-)	2009	EPS		●	●	●	●	●	○		
C70 (06-)	2009	SUB		●	●	●	●	○	○		
C70 (06-)	2009	IAM		●	●	●	●	●	●		
C70 (06-)	2009	PSL		●	●	●	●	●	●	145	
C70 (06-)	2009	PSR		●	●	●	●	●	●	145	
C70 (06-)	2009	CEM		●	●	●	●	●	●	154, 156, 94, 158, 159, 160, 35, 162	
C70 (06-)	2009	DIM		●	●	●	●	●	●	48, 161, 118, 46, 165, 51	
C70 (06-)	2009	ICM		●	●	●	●	●	●	166, 167, 168	
C70 (06-)	2009	MMM		●	●	●	●	○	○	159	
C70 (06-)	2008	ECM	D5244T9	●	●	●	●	●	●		
C70 (06-)	2008	ECM	D5244T8	●	●	●	●	●	●		
C70 (06-)	2008	ECM	D5244T13	●	●	●	●	●	●	94	
C70 (06-)	2008	ADM	D4204T	●	●	●	●	●	○		
C70 (06-)	2008	ECM	D4204T	●	●	●	●	●	●	71, 9, 141, 69	
C70 (06-)	2008	ECM	B5254T7	●	●	●	●	●	●	74	
C70 (06-)	2008	ECM	B5244S5	●	●	●	●	●	●	9	
C70 (06-)	2008	ECM	B5244S4	●	●	●	●	●	●	9	
C70 (06-)	2008	TCM	AW55-50/51SN	●	●	●	●	●	●	83, 111, 1, 140, 4, 100, 101	
C70 (06-)	2008	BCM		●	●	●	●	●	○	146, 111	
C70 (06-)	2008	AEM		●	●	●	●	●	●	146	
C70 (06-)	2008	KVM		●	●	●	●	●	●	147	
C70 (06-)	2008	RDAR		●	●	●	●	●	○		
C70 (06-)	2008	CPM		●	●	●	●	●	●		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
C70 (06-)	2008	AUD		●	●	●	●	○	○		
C70 (06-)	2008	PAM		●	●	●	●	●	○		
C70 (06-)	2008	SRS		●	●	●	●	●	○	95	
C70 (06-)	2008	DDM		●	●	●	●	●	●	149, 150	
C70 (06-)	2008	PDM		●	●	●	●	●	●	149, 150	
C70 (06-)	2008	PSL		●	●	●	●	●	●	145	
C70 (06-)	2008	PSR		●	●	●	●	●	●	145	
C70 (06-)	2008	AUU		●	●	●	●	●	○		
C70 (06-)	2008	CCM		●	●	●	●	●	○	30, 113, 152, 32, 153	
C70 (06-)	2008	PHM		●	●	●	●	●	○		
C70 (06-)	2008	CRM		●	●	●	●	●	○	174, 176	
C70 (06-)	2008	CEM		●	●	●	●	●	●	154, 156, 94, 158, 159, 160, 35, 162	
C70 (06-)	2008	DIM		●	●	●	●	●	●	48, 161, 118, 46, 165, 51	
C70 (06-)	2008	SWM		●	●	●	●	●	○		
C70 (06-)	2008	TRM		●	●	●	●	●	○		
C70 (06-)	2008	EPS		●	●	●	●	●	○		
C70 (06-)	2008	SUB		●	●	●	●	○	○		
C70 (06-)	2008	IAM		●	●	●	●	●	●		
C70 (06-)	2008	ICM		●	●	●	●	●	●	166, 167, 168	
C70 (06-)	2008	MMM		●	●	●	●	○	○		
C70 (06-)	2007	ECM	D5244T9	●	●	●	●	●	●		
C70 (06-)	2007	ECM	D5244T8	●	●	●	●	●	●		
C70 (06-)	2007	ECM	B5254T3	●	●	●	●	●	●	74	
C70 (06-)	2007	ECM	B5244S5	●	●	●	●	●	●	9	
C70 (06-)	2007	ECM	B5244S4	●	●	●	●	●	●	9	
C70 (06-)	2007	TCM	AW55-50/51SN	●	●	●	●	●	●	83, 111, 1, 140, 4, 100, 101	
C70 (06-)	2007	DIM		●	●	●	●	●	●	48, 161, 46, 165	
C70 (06-)	2007	GPS		●	●	●	●	●	○		
C70 (06-)	2007	BCM		●	●	●	●	●	○	146, 111	
C70 (06-)	2007	TMC		●	●	●	●	●	○		
C70 (06-)	2007	SWM		●	●	●	●	●	○		
C70 (06-)	2007	KVM		●	●	●	●	●	●	147	
C70 (06-)	2007	AEM		●	●	●	●	●	●	146	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
C70 (06-)	2007	PHM		●	●	●	●	●	○		
C70 (06-)	2007	TRM		●	●	●	●	●	○		
C70 (06-)	2007	CEM		●	●	●	●	●	●	154, 156, 94, 158, 159, 160, 162, 95	
C70 (06-)	2007	MMM		●	●	●	●	○	○		
C70 (06-)	2007	RDAR		●	●	●	●	●	○		
C70 (06-)	2007	CPM		●	●	●	●	●	●		
C70 (06-)	2007	SUB		●	●	●	●	○	○		
C70 (06-)	2007	IAM		●	●	●	●	●	●		
C70 (06-)	2007	AUD		●	●	●	●	○	○		
C70 (06-)	2007	PAM		●	●	●	●	●	○		
C70 (06-)	2007	SRS		●	●	●	●	●	○	95	
C70 (06-)	2007	DDM		●	●	●	●	●	●	149, 150	
C70 (06-)	2007	PDM		●	●	●	●	●	●	149, 150	
C70 (06-)	2007	PSL		●	●	●	●	●	●	145	
C70 (06-)	2007	PSR		●	●	●	●	●	●	145	
C70 (06-)	2007	CCM		●	●	●	●	●	○	30, 113, 152, 32, 153	
C70 (06-)	2007	CRM		●	●	●	●	●	○	174, 176	
C70 (06-)	2007	ICM		●	●	●	●	●	●	166, 167	
C70 (06-)	2007	EPS		●	●	●	●	●	○		
C70 (06-)	2006	ECM	B5254T3	●	●	●	●	●	●	74	
C70 (06-)	2006	ECM	B5244S5	●	●	●	●	●	●	9	
C70 (06-)	2006	ECM	B5244S4	●	●	●	●	●	●	9	
C70 (06-)	2006	TCM	AW55-50/51SN	●	●	●	●	●	●	83, 111, 1, 140, 4, 100, 101	
C70 (06-)	2006	DIM		●	●	●	●	●	●	48, 161, 46, 165	
C70 (06-)	2006	GPS		●	●	●	●	●	○		
C70 (06-)	2006	BCM		●	●	●	●	●	○	146, 111	
C70 (06-)	2006	TMC		●	●	●	●	●	○		
C70 (06-)	2006	SWM		●	●	●	●	●	○		
C70 (06-)	2006	KVM		●	●	●	●	●	●	147	
C70 (06-)	2006	AEM		●	●	●	●	●	●	146	
C70 (06-)	2006	ICM		●	●	●	●	●	●	166	
C70 (06-)	2006	IAM		●	●	●	●	●	●		
C70 (06-)	2006	AUD		●	●	●	●	○	○		

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
C70 (06-)	2006	PHM		●	●	●	●	●	○		
C70 (06-)	2006	TRM		●	●	●	●	●	○		
C70 (06-)	2006	PSL		●	●	●	●	●	●	145	
C70 (06-)	2006	CEM		●	●	●	●	●	●	154, 156, 94, 158, 159, 160, 162, 95	
C70 (06-)	2006	MMM		●	●	●	●	○	○		
C70 (06-)	2006	CPM		●	●	●	●	●	●		
C70 (06-)	2006	SUB		●	●	●	●	○	○		
C70 (06-)	2006	PSR		●	●	●	●	●	●	145	
C70 (06-)	2006	DDM		●	●	●	●	●	●	149	
C70 (06-)	2006	PDM		●	●	●	●	●	●	149	
C70 (06-)	2006	CCM		●	●	●	●	●	○	30, 113, 152, 32, 153	
C70 (06-)	2006	PAM		●	●	●	●	●	○		
C70 (06-)	2006	SRS		●	●	●	●	●	○	95	
C70 (06-)	2006	CRM		●	●	●	●	●	○	174, 176	
C70 (06-)	2006	EPS		●	●	●	●	●	○		
C70 Conv	2005	Petrol	B5204T4	●	●	●	●	●	●	1, 2, 3, 50	
C70 Conv	2005	Petrol	B5234T9	●	●	●	●	●	●	1, 2, 3, 50	
C70 Conv	2005	Petrol	B5244T7	●	●	●	●	●	●	1, 2, 3, 50	
C70 Conv	2005	Combined instrument	Combined instrument	●	●	●	○	●	●	72, 73, 37, 32	
C70 Conv	2005	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
C70 Conv	2005	RTI	RTI	●	●	●	○	●	●		
C70 Conv	2005	TCM	AW55-50/51SN	●	●	●	○	●	●	10, 11	
C70 Conv	2005	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
C70 Conv	2005	Cab control system	Cab control system	●	●	●	○	●	○		
C70 Conv	2005	CCM	CCM	●	●	●	○	●	○		
C70 Conv	2005	CPM	CPM	●	●	●	○	●	○		
C70 Conv	2005	Power seat module, left	Power seat module, left	●	●	●	○	●	●		
C70 Conv	2005	Power seat module, right	Power seat module, right	●	●	●	○	●	●		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
C70 Conv	2005	Rollover protection	Rollover protection	●	●	●	○	●	●		
C70 Conv	2005	SRS	SRS	●	●	●	○	●	○		
C70 Conv	2004	Petrol	B5204T4	●	●	●	●	●	●	1, 2, 3, 50	
C70 Conv	2004	Petrol	B5234T9	●	●	●	●	●	●	1, 2, 3, 50	
C70 Conv	2004	Petrol	B5244T7	●	●	●	●	●	●	1, 2, 3, 50	
C70 Conv	2004	Combined instrument	Combined instrument	●	●	●	○	●	●	72, 73, 37, 32	
C70 Conv	2004	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
C70 Conv	2004	RTI	RTI	●	●	●	○	●	●		
C70 Conv	2004	TCM	AW55-50/51SN	●	●	●	○	●	●	10, 11	
C70 Conv	2004	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
C70 Conv	2004	Cab control system	Cab control system	●	●	●	○	●	○		
C70 Conv	2004	CCM	CCM	●	●	●	○	●	○		
C70 Conv	2004	CPM	CPM	●	●	●	○	●	○		
C70 Conv	2004	Power seat module, left	Power seat module, left	●	●	●	○	●	●		
C70 Conv	2004	Power seat module, right	Power seat module, right	●	●	●	○	●	●		
C70 Conv	2004	Rollover protection	Rollover protection	●	●	●	○	●	●		
C70 Conv	2004	SRS	SRS	●	●	●	○	●	○		
C70 Conv	2003	Petrol	B5204T4	●	●	●	●	●	●	1, 2, 3, 50	
C70 Conv	2003	Petrol	B5234T9	●	●	●	●	●	●	1, 2, 3, 50	
C70 Conv	2003	Petrol	B5244T7	●	●	●	●	●	●	1, 2, 3, 50	
C70 Conv	2003	Combined instrument	Combined instrument	●	●	●	○	●	●	72, 73, 37, 32	
C70 Conv	2003	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
C70 Conv	2003	RTI	RTI	●	●	●	○	●	●		
C70 Conv	2003	TCM	AW55-50/51SN	●	●	●	○	●	●	10, 11	
C70 Conv	2003	ABS/BCM	ABS/BCM	●	●	●	○	●	●		

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

[illegible]



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
C70 Conv	2001	Petrol	B5244T	●	●	●	●	●	●	50	Elec. Ident.
C70 Conv	2001	Combined instrument	Combined instrument	●	●	●	○	●	●	72, 73, 37, 32	
C70 Conv	2001	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
C70 Conv	2001	RTI	RTI	●	●	●	○	●	●		
C70 Conv	2001	TCM	AW55-50/51SN	●	●	●	○	●	●	10, 11	
C70 Conv	2001	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
C70 Conv	2001	Cab control system	Cab control system	●	●	●	○	●	○		
C70 Conv	2001	CCM	CCM	●	●	●	○	●	○		
C70 Conv	2001	CPM	CPM	●	●	●	○	●	○		
C70 Conv	2001	Power seat module, left	Power seat module, left	●	●	●	○	●	●		
C70 Conv	2001	Power seat module, right	Power seat module, right	●	●	●	○	●	●		
C70 Conv	2001	Rollover protection	Rollover protection	●	●	●	○	●	●		
C70 Conv	2001	SRS	SRS	●	●	●	○	●	○		
C70 Conv	2000	Petrol	B5204T3	●	●	●	●	●	●	1, 50	Elec. Ident.
C70 Conv	2000	Petrol	B5204T4	●	●	●	●	●	●	1, 50	Elec. Ident.
C70 Conv	2000	Petrol	B5234T3	●	●	●	●	●	●	1, 50	Elec. Ident.
C70 Conv	2000	Petrol	B5244S	●	●	●	○	●	●	88, 6, 89	Extend DTC;Elec.
C70 Conv	2000	Petrol	B5244T	●	●	●	●	●	●	1, 50	Elec. Ident.
C70 Conv	2000	Combined instrument	Combined instrument	●	●	●	○	●	●	72, 73, 37, 32	
C70 Conv	2000	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
C70 Conv	2000	RTI	RTI	●	●	●	○	●	●		
C70 Conv	2000	TCM	AW50-42	●	●	●	○	●	●	10, 11	
C70 Conv	2000	TCM	AW55-50/51SN	●	●	●	○	●	●	10, 11	
C70 Conv	2000	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
C70 Conv	2000	Cab control system	Cab control system	●	●	●	○	●	○		
C70 Conv	2000	CCM	CCM	●	●	●	○	●	○		

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

[illegible]

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
C70 Coupe	2002	Combined instrument	Combined instrument	●	●	●	○	●	●	72, 73, 37, 32	
C70 Coupe	2002	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
C70 Coupe	2002	RTI	RTI	●	●	●	○	●	●		
C70 Coupe	2002	TCM	AW55-50/51SN	●	●	●	○	●	●	10, 11	
C70 Coupe	2002	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
C70 Coupe	2002	CCM	CCM	●	●	●	○	●	○		
C70 Coupe	2002	CPM	CPM	●	●	●	○	●	○		
C70 Coupe	2002	Power seat module, left	Power seat module, left	●	●	●	○	●	●		
C70 Coupe	2002	Power seat module, right	Power seat module, right	●	●	●	○	●	●		
C70 Coupe	2002	SRS	SRS	●	●	●	○	●	○		
C70 Coupe	2001	Petrol	B5204T4	●	●	●	●	●	●	50	Elec. Ident.
C70 Coupe	2001	Petrol	B5234T3	●	●	●	●	●	●	50	Elec. Ident.
C70 Coupe	2001	Petrol	B5244T	●	●	●	●	●	●	50	Elec. Ident.
C70 Coupe	2001	Combined instrument	Combined instrument	●	●	●	○	●	●	72, 73, 37, 32	
C70 Coupe	2001	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
C70 Coupe	2001	RTI	RTI	●	●	●	○	●	●		
C70 Coupe	2001	TCM	AW55-50/51SN	●	●	●	○	●	●	10, 11	
C70 Coupe	2001	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
C70 Coupe	2001	CCM	CCM	●	●	●	○	●	○		
C70 Coupe	2001	CPM	CPM	●	●	●	○	●	○		
C70 Coupe	2001	Power seat module, left	Power seat module, left	●	●	●	○	●	●		
C70 Coupe	2001	Power seat module, right	Power seat module, right	●	●	●	○	●	●		
C70 Coupe	2001	SRS	SRS	●	●	●	○	●	○		
C70 Coupe	2000	Petrol	B5204T3	●	●	●	●	●	●	1, 50	Elec. Ident.
C70 Coupe	2000	Petrol	B5204T4	●	●	●	●	●	●	1, 50	Elec. Ident.
C70 Coupe	2000	Petrol	B5234T3	●	●	●	●	●	●	1, 50	Elec. Ident.
C70 Coupe	2000	Petrol	B5244S	●	●	●	○	●	●	88, 6, 89	Extend DTC;Elec.



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
C70 Coupe	2000	Petrol	B5244T	●	●	●	●	●	●	1, 50	Elec. Ident.
C70 Coupe	2000	Combined instrument	Combined instrument	●	●	●	○	●	●	72, 73, 37, 32	
C70 Coupe	2000	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
C70 Coupe	2000	RTI	RTI	●	●	●	○	●	●		
C70 Coupe	2000	TCM	AW50-42	●	●	●	○	●	●	10, 11	
C70 Coupe	2000	TCM	AW55-50/51SN	●	●	●	○	●	●	10, 11	
C70 Coupe	2000	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
C70 Coupe	2000	CCM	CCM	●	●	●	○	●	○		
C70 Coupe	2000	CPM	CPM	●	●	●	○	●	○		
C70 Coupe	2000	Power seat module, left	Power seat module, left	●	●	●	○	●	●		
C70 Coupe	2000	Power seat module, right	Power seat module, right	●	●	●	○	●	●		
C70 Coupe	2000	SRS	SRS	●	●	●	○	●	○		
C70 Coupe	1999	Petrol	B5204T3	●	●	●	●	●	●	1, 50	Elec. Ident.
C70 Coupe	1999	Petrol	B5204T4	●	●	●	●	●	●	1, 93	Elec. Ident.
C70 Coupe	1999	Petrol	B5234T3	●	●	●	●	●	●	1, 50	Elec. Ident.
C70 Coupe	1999	Petrol	B5254S DENSO	●	●	●	○	●	●	88, 6, 89	Extend DTC;Elec.
C70 Coupe	1999	Petrol	B5254T	●	●	●	●	●	●	1, 93	Elec. Ident.
C70 Coupe	1999	Combined instrument	Combined instrument	●	●	●	○	●	●	72, 73, 37, 32	
C70 Coupe	1999	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
C70 Coupe	1999	RTI	RTI	●	●	●	○	●	●		
C70 Coupe	1999	TCM	AW50-42	●	●	●	○	●	●		
C70 Coupe	1999	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
C70 Coupe	1999	CCM	CCM	●	●	●	○	●	○		
C70 Coupe	1999	CPM	CPM	●	●	●	○	●	○		
C70 Coupe	1999	Power seat module, left	Power seat module, left	●	●	●	○	●	●		
C70 Coupe	1999	Power seat module, right	Power seat module, right	●	●	●	○	●	●		
C70 Coupe	1999	SRS	SRS	●	●	●	○	●	○		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S40 (04-)	2009	AUU		●	●	●	●	●	○		
S40 (04-)	2009	HCM		●	●	●	●	●	○	23	
S40 (04-)	2009	BCM		●	●	●	●	●	○	146, 111	
S40 (04-)	2009	CCM		●	●	●	●	○	○	30, 113, 152, 32, 153	
S40 (04-)	2009	SWM		●	●	●	●	●	○		
S40 (04-)	2009	TRM		●	●	●	●	●	○		
S40 (04-)	2009	EPS		●	●	●	●	●	○		
S40 (04-)	2009	IAM		●	●	●	●	●	●		
S40 (04-)	2009	CEM		●	●	●	●	●	●	154, 156, 94, 158, 159, 160, 35, 162	
S40 (04-)	2009	DIM		●	●	●	●	●	●	48, 161, 118, 46, 165, 51	
S40 (04-)	2009	ICM		●	●	●	●	●	●	166, 167, 168	
S40 (04-)	2009	MMM		●	●	●	●	○	○		
S40 (04-)	2008	TCM	MPS6	●	●	●	●	●	○		
S40 (04-)	2008	DEM	M66 AWD	●	●	●	●	●	○		
S40 (04-)	2008	ECM	D5244T9	●	●	●	●	●	●		
S40 (04-)	2008	ECM	D5244T8	●	●	●	●	●	●		
S40 (04-)	2008	ECM	D5244T13	●	●	●	●	●	●		
S40 (04-)	2008	ECM	D4204T	●	●	●	●	●	●	71, 9, 141, 69	
S40 (04-)	2008	ADM	D4204T	●	●	●	●	●	○		
S40 (04-)	2008	ECM	D4204T	●	●	●	●	●	●	71, 9, 141, 69	
S40 (04-)	2008	ADM	D4164T	●	●	●	●	●	○		
S40 (04-)	2008	ECM	D4164T	●	●	●	●	●	●	69, 141	
S40 (04-)	2008	ECM	B5254T7	●	●	●	●	●	●	74	
S40 (04-)	2008	ECM	B5254T3	●	●	●	●	●	●	74	
S40 (04-)	2008	ECM	B5244S7	●	●	●	●	●	●	9	
S40 (04-)	2008	ECM	B5244S5	●	●	●	●	●	●	9	
S40 (04-)	2008	ECM	B5244S4	●	●	●	●	●	●	9	
S40 (04-)	2008	ECM	B4204S3	●	●	●	●	●	●	9	
S40 (04-)	2008	ECM	B4184S8	●	●	●	●	●	●	9	
S40 (04-)	2008	ECM	B4184S11	●	●	●	●	●	●	9	
S40 (04-)	2008	ECM	B4164S3	●	●	●	●	●	●	9	
S40 (04-)	2008	TCM	AW55-50/51SN	●	●	●	●	●	●	83, 111, 1, 140, 4, 100, 101	
S40 (04-)	2008	DEM	AW50/51 AWD	●	●	●	●	●	○		

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S40 (04-)	2008	TCM	AW50/51 AWD	●	●	●	●	●	●	83, 111, 1, 140, 4, 100, 101	
S40 (04-)	2008	BCM		●	●	●	●	●	○	146, 111	
S40 (04-)	2008	PSM		●	●	●	●	●	●	145	
S40 (04-)	2008	AEM		●	●	●	●	●	●	146	
S40 (04-)	2008	KVM		●	●	●	●	●	●	147	
S40 (04-)	2008	RDAR		●	●	●	●	●	○		
S40 (04-)	2008	CPM		●	●	●	●	●	●		
S40 (04-)	2008	AUD		●	●	●	●	○	○		
S40 (04-)	2008	PAM		●	●	●	●	●	○		
S40 (04-)	2008	SRS		●	●	●	●	●	○	95	
S40 (04-)	2008	DDM		●	●	●	●	●	●	149, 150	
S40 (04-)	2008	PDM		●	●	●	●	●	●	149, 150	
S40 (04-)	2008	AUU		●	●	●	●	●	○		
S40 (04-)	2008	HCM		●	●	●	●	●	○	23	
S40 (04-)	2008	CCM		●	●	●	●	●	○	30, 113, 152, 32, 153	
S40 (04-)	2008	PHM		●	●	●	●	●	○		
S40 (04-)	2008	CEM		●	●	●	●	●	●	154, 156, 94, 158, 159, 160, 35, 162	
S40 (04-)	2008	DIM		●	●	●	●	●	●	48, 161, 118, 46, 165, 51	
S40 (04-)	2008	SWM		●	●	●	●	●	○		
S40 (04-)	2008	TRM		●	●	●	●	●	○		
S40 (04-)	2008	EPS		●	●	●	●	●	○		
S40 (04-)	2008	IAM		●	●	●	●	●	●		
S40 (04-)	2008	ICM		●	●	●	●	●	●	166, 167, 168	
S40 (04-)	2008	MMM		●	●	●	●	○	○		
S40 (04-)	2007	DEM	M66 AWD	●	●	●	●	●	○		
S40 (04-)	2007	ECM	D5244T9	●	●	●	●	●	●		
S40 (04-)	2007	ECM	D5244T8	●	●	●	●	●	●		
S40 (04-)	2007	ADM	D4204T	●	●	●	●	●	○		
S40 (04-)	2007	ECM	D4204T	●	●	●	●	●	●	71, 9, 141, 69	
S40 (04-)	2007	ADM	D4164T	●	●	●	●	●	○		
S40 (04-)	2007	ECM	D4164T	●	●	●	●	●	●	69, 141, 169	
S40 (04-)	2007	ECM	B5254T3	●	●	●	●	●	●	74	
S40 (04-)	2007	ECM	B5244S7	●	●	●	●	●	●	9	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S40 (04-)	2007	ECM	B5244S5	●	●	●	●	●	●	9	
S40 (04-)	2007	ECM	B5244S4	●	●	●	●	●	●	9	
S40 (04-)	2007	ECM	B4204S3	●	●	●	●	●	●	9	
S40 (04-)	2007	ECM	B4184S8	●	●	●	●	●	●	9	
S40 (04-)	2007	ECM	B4184S11	●	●	●	●	●	●	9	
S40 (04-)	2007	ECM	B4164S3	●	●	●	●	●	●	9	
S40 (04-)	2007	TCM	AW55-50/51SN	●	●	●	●	●	●	83, 111, 1, 140, 4, 100, 101	
S40 (04-)	2007	DEM	AW50/51 AWD	●	●	●	●	●	○		
S40 (04-)	2007	TCM	AW50/51 AWD	●	●	●	●	●	●	83, 111, 1, 140, 4, 100, 101	
S40 (04-)	2007	GPS		●	●	●	●	●	○		
S40 (04-)	2007	BCM		●	●	●	●	●	○	146, 111	
S40 (04-)	2007	PSM		●	●	●	●	●	●	145	
S40 (04-)	2007	TMC		●	●	●	●	●	○		
S40 (04-)	2007	SWM		●	●	●	●	●	○		
S40 (04-)	2007	KVM		●	●	●	●	●	●	147	
S40 (04-)	2007	AEM		●	●	●	●	●	●	146	
S40 (04-)	2007	PHM		●	●	●	●	●	○		
S40 (04-)	2007	TRM		●	●	●	●	●	○		
S40 (04-)	2007	CEM		●	●	●	●	●	●	154, 156, 94, 158, 159, 160, 162, 95	
S40 (04-)	2007	MMM		●	●	●	●	○	○		
S40 (04-)	2007	RDAR		●	●	●	●	●	○		
S40 (04-)	2007	CPM		●	●	●	●	●	●		
S40 (04-)	2007	IAM		●	●	●	●	●	●		
S40 (04-)	2007	AUD		●	●	●	●	○	○		
S40 (04-)	2007	PAM		●	●	●	●	●	○		
S40 (04-)	2007	DDM		●	●	●	●	●	●	149, 150	
S40 (04-)	2007	PDM		●	●	●	●	●	●	149, 150	
S40 (04-)	2007	SRS		●	●	●	●	●	○	95	
S40 (04-)	2007	CCM		●	●	●	●	●	○	30, 113, 152, 32, 153	
S40 (04-)	2007	DIM		●	●	●	●	●	●	48, 161, 118, 46, 165	
S40 (04-)	2007	ICM		●	●	●	●	●	●	166, 167	
S40 (04-)	2007	EPS		●	●	●	●	●	○		
S40 (04-)	2006	DEM	M66 AWD	●	●	●	●	●	○		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S40 (04-)	2006	ECM	D5244T8	●	●	●	●	●	●		
S40 (04-)	2006	ADM	D4204T2	●	●	●	●	●	○		
S40 (04-)	2006	ECM	D4204T2	●	●	●	●	●	●	71, 9, 141, 69	
S40 (04-)	2006	ADM	D4204T	●	●	●	●	●	○		
S40 (04-)	2006	ECM	D4204T	●	●	●	●	●	●	71, 9, 141, 69	
S40 (04-)	2006	ADM	D4164T	●	●	●	●	●	○		
S40 (04-)	2006	ECM	D4164T	●	●	●	●	●	●	69, 141, 169	
S40 (04-)	2006	ECM	B5254T3	●	●	●	●	●	●	74	
S40 (04-)	2006	ECM	B5244S7	●	●	●	●	●	●	9	
S40 (04-)	2006	ECM	B5244S5	●	●	●	●	●	●	9	
S40 (04-)	2006	ECM	B5244S4	●	●	●	●	●	●	9	
S40 (04-)	2006	ECM	B4184S8	●	●	●	●	●	●	9	
S40 (04-)	2006	ECM	B4184S11	●	●	●	●	●	●	9	
S40 (04-)	2006	ECM	B4164S3	●	●	●	●	●	●	9	
S40 (04-)	2006	TCM	AW55-50/51SN	●	●	●	●	●	●	170, 111, 82, 140, 4, 100, 101	
S40 (04-)	2006	DEM	AW50/51 AWD	●	●	●	●	●	○		
S40 (04-)	2006	TCM	AW50/51 AWD	●	●	●	●	●	●	170, 111, 82, 140, 4, 100, 101	
S40 (04-)	2006	DIM		●	●	●	●	●	●	48, 161, 46, 165	
S40 (04-)	2006	GPS		●	●	●	●	●	○		
S40 (04-)	2006	DDM		●	●	●	●	●	●	149, 150	
S40 (04-)	2006	PDM		●	●	●	●	●	●	149, 150	
S40 (04-)	2006	BCM		●	●	●	●	●	○	146, 111	
S40 (04-)	2006	PSM		●	●	●	●	●	●	145	
S40 (04-)	2006	TMC		●	●	●	●	●	○		
S40 (04-)	2006	SWM		●	●	●	●	●	○		
S40 (04-)	2006	KVM		●	●	●	●	●	●	147	
S40 (04-)	2006	AEM		●	●	●	●	●	●	146	
S40 (04-)	2006	ICM		●	●	●	●	●	●	166	
S40 (04-)	2006	IAM		●	●	●	●	●	●		
S40 (04-)	2006	PHM		●	●	●	●	●	○		
S40 (04-)	2006	TRM		●	●	●	●	●	○		
S40 (04-)	2006	PAM		●	●	●	●	●	○		
S40 (04-)	2006	CEM		●	●	●	●	●	●	154, 156, 94, 158, 159, 160, 162, 95	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S40 (04-)	2006	MMM		●	●	●	●	○	○		
S40 (04-)	2006	CPM		●	●	●	●	●	●		
S40 (04-)	2006	CCM		●	●	●	●	●	○	30, 113, 152, 32, 153	
S40 (04-)	2006	AUD		●	●	●	●	○	○		
S40 (04-)	2006	SRS		●	●	●	●	●	○	95	
S40 (04-)	2006	EPS		●	●	●	●	●	○		
S40 (-04)	2004	Petrol	B4164S2	●	●	●	○	●	●	113, 1	
S40 (-04)	2004	Petrol	B4184S10	●	●	●	○	●	●	113, 1	
S40 (-04)	2004	Petrol	B4184S2	●	●	●	○	●	●	113, 1	
S40 (-04)	2004	Petrol	B4184S3	●	●	●	○	●	●	113, 1	
S40 (-04)	2004	Petrol	B4184S9	●	●	●	○	●	●	113, 1	
S40 (-04)	2004	Petrol	B4184SJ	●	●	●	○	●	●	117	
S40 (-04)	2004	Petrol	B4204S2	●	●	●	○	●	●	113, 1	
S40 (-04)	2004	Petrol	B4204T3	●	●	●	○	●	●	118, 1	
S40 (-04)	2004	Diesel	D4192T3 (Anti-spin system)	●	●	●	○	●	○		
S40 (-04)	2004	Diesel	D4192T4 (Anti-spin system)	●	●	●	○	●	○		
S40 (-04)	2004	Anti-spin system	Anti-spin system	●	●	●	○	●	○		
S40 (-04)	2004	DIM	DIM	●	●	●	○	●	●	121, 122, 81, 125, 126	
S40 (-04)	2004	Gas discharge light module	Gas discharge light module	●	●	●	○	●	●		
S40 (-04)	2004	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
S40 (-04)	2004	TCM	AW55-50/51SN	●	●	●	○	●	●	130, 131	
S40 (-04)	2004	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
S40 (-04)	2004	CCM	CCM	●	●	●	○	●	○	132, 133, 81	
S40 (-04)	2004	CPM	CPM	●	●	●	○	●	○	21	
S40 (-04)	2004	SRS	SRS	●	●	●	○	●	○		
S40 (-04)	2003	Petrol	B4164S2	●	●	●	○	●	●	113, 1	
S40 (-04)	2003	Petrol	B4184S10	●	●	●	○	●	●	113, 1	
S40 (-04)	2003	Petrol	B4184S2	●	●	●	○	●	●	113, 1	
S40 (-04)	2003	Petrol	B4184S3	●	●	●	○	●	●	113, 1	

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S40(-04)	2003	Petrol	B4184S9	●	●	●	○	●	●	113, 1	
S40(-04)	2003	Petrol	B4184SJ	●	●	●	○	●	●	117	
S40(-04)	2003	Petrol	B4204S2	●	●	●	○	●	●	113, 1	
S40(-04)	2003	Petrol	B4204T3	●	●	●	○	●	●	118, 1	
S40(-04)	2003	Petrol	B4204T5	●	●	●	○	●	●	118, 1	
S40(-04)	2003	Diesel	D4192T3 (Anti-spin system)	●	●	●	○	●	○		
S40(-04)	2003	Diesel	D4192T4 (Anti-spin system)	●	●	●	○	●	○		
S40(-04)	2003	Anti-spin system	Anti-spin system	●	●	●	○	●	○		
S40(-04)	2003	DIM	DIM	●	●	●	○	●	●	121, 122, 81, 125, 126	
S40(-04)	2003	Gas discharge light module	Gas discharge light module	●	●	●	○	●	●		
S40(-04)	2003	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
S40(-04)	2003	TCM	AW55-50/51SN	●	●	●	○	●	●	130, 131	
S40(-04)	2003	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
S40(-04)	2003	CCM	CCM	●	●	●	○	●	●	132, 133, 81	
S40(-04)	2003	CPM	CPM	●	●	●	○	●	○	21	
S40(-04)	2003	SRS	SRS	●	●	●	○	●	○		
S40(-04)	2002	Petrol	B4164S2	●	●	●	○	●	●	113, 1	
S40(-04)	2002	Petrol	B4184S10	●	●	●	○	●	●	113, 1	
S40(-04)	2002	Petrol	B4184S2	●	●	●	○	●	●	113, 1	
S40(-04)	2002	Petrol	B4184S3	●	●	●	○	●	●	113, 1	
S40(-04)	2002	Petrol	B4184S9	●	●	●	○	●	●	113, 1	
S40(-04)	2002	Petrol	B4184SJ	●	●	●	○	●	●	117	
S40(-04)	2002	Petrol	B4204S2	●	●	●	○	●	●	113, 1	
S40(-04)	2002	Petrol	B4204T3	●	●	●	○	●	●	118, 1	
S40(-04)	2002	Petrol	B4204T5	●	●	●	○	●	●	118, 1	
S40(-04)	2002	Diesel	D4192T3 (Anti-spin system)	●	●	●	○	●	○		
S40(-04)	2002	Diesel	D4192T4 (Anti-spin system)	●	●	●	○	●	○		

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S40(-04)	2002	Anti-spin system	Anti-spin system	●	●	●	○	●	○		
S40(-04)	2002	DIM	DIM	●	●	●	○	●	●	121, 122, 81, 125, 126	
S40(-04)	2002	Gas discharge light module	Gas discharge light module	●	●	●	○	●	●		
S40(-04)	2002	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
S40(-04)	2002	TCM	AW55-50/51SN	●	●	●	○	●	●	130, 131	
S40(-04)	2002	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
S40(-04)	2002	CCM	CCM	●	●	●	○	●	●	132, 133, 81	
S40(-04)	2002	CPM	CPM	●	●	●	○	●	○	21	
S40(-04)	2002	SRS	SRS	●	●	●	○	●	○		
S40(-04)	2001	Petrol	B4164S2	●	●	●	○	●	●	113, 1	
S40(-04)	2001	Petrol	B4184S10	●	●	●	○	●	●	113, 1	
S40(-04)	2001	Petrol	B4184S2	●	●	●	○	●	●	113, 1	
S40(-04)	2001	Petrol	B4184S3	●	●	●	○	●	●	113, 1	
S40(-04)	2001	Petrol	B4184S9	●	●	●	○	●	●	113, 1	
S40(-04)	2001	Petrol	B4184SJ	●	●	●	○	●	●	117	
S40(-04)	2001	Petrol	B4184SM	●	●	●	○	●	●	134, 135	
S40(-04)	2001	Petrol	B4204S2	●	●	●	○	●	●	113, 1	
S40(-04)	2001	Petrol	B4204T3	●	●	●	○	●	●	118, 1	
S40(-04)	2001	Petrol	B4204T5	●	●	●	○	●	●	118, 1	
S40(-04)	2001	Diesel	D4192T3 (Anti-spin system)	●	●	●	○	●	○		
S40(-04)	2001	Diesel	D4192T4 (Anti-spin system)	●	●	●	○	●	○		
S40(-04)	2001	Anti-spin system	Anti-spin system	●	●	●	○	●	○		
S40(-04)	2001	DIM	DIM	●	●	●	○	●	●	121, 122, 81, 125, 126	
S40(-04)	2001	Gas discharge light module	Gas discharge light module	●	●	●	○	●	●		
S40(-04)	2001	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
S40(-04)	2001	TCM	AW55-50/51SN	●	●	●	○	●	●	130, 131	
S40(-04)	2001	ABS/BCM	ABS/BCM	●	●	●	○	●	●		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S40(-04)	2001	CCM	CCM	●	●	●	○	●	●	132, 133, 81	
S40(-04)	2001	CPM	CPM	●	●	●	○	●	○	21	
S40(-04)	2001	SRS	SRS	●	●	●	○	●	○		
S40(-04)	2000	Petrol	B4164S2	●	●	●	○	●	●		
S40(-04)	2000	Petrol	B4184S2	●	●	●	○	●	●		
S40(-04)	2000	Petrol	B4184S3	●	●	●	○	●	●		
S40(-04)	2000	Petrol	B4184SM	●	●	●	○	●	●	134, 135	
S40(-04)	2000	Petrol	B4194T2	●	●	●	○	●	●		
S40(-04)	2000	Petrol	B4204S2	●	●	●	○	●	●		
S40(-04)	2000	Petrol	B4204T2	●	●	●	○	●	●		
S40(-04)	2000	Diesel	D4192T2 (Anti-spin system)	●	●	●	○	●	○		
S40(-04)	2000	Anti-spin system	Anti-spin system	●	●	●	○	●	○		
S40(-04)	2000	DIM	DIM	●	●	●	○	●	●	121, 122, 81, 125, 126	
S40(-04)	2000	Lock and	Lock and alarm	●	●	●	○	●	○	80, 81, 40	
S40(-04)	2000	TCM	AW50-42	●	●	●	○	●	●		
S40(-04)	2000	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
S40(-04)	2000	CCM	CCM	●	●	●	○	●	○		
S40(-04)	2000	CPM	CPM	●	●	●	○	●	○	21	
S40(-04)	2000	SRS	SRS	●	●	●	○	○	○		
S40(-04)	1999	Petrol	B4164S (Anti-spin system)	●	●	●	○	●	○		
S40(-04)	1999	Petrol	B4184S (Anti-spin system)	●	●	●	○	●	○		
S40(-04)	1999	Petrol	B4184SM	●	●	●	○	●	●	134, 135	
S40(-04)	1999	Petrol	B4194T	●	●	●	○	●	●	113	
S40(-04)	1999	Petrol	B4204S (Anti-spin system)	●	●	●	○	●	○		
S40(-04)	1999	Petrol	B4204T	●	●	●	○	●	●	113	
S40(-04)	1999	Diesel	D4192T (Anti-spin system)	●	●	●	○	●	○		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S40(-04)	1999	Diesel	D4192T2 (Anti-spin system)	●	●	●	○	●	○		
S40(-04)	1999	Anti-spin system	Anti-spin system	●	●	●	○	●	○		
S40(-04)	1999	DIM	DIM	●	●	●	○	●	●	125, 126	
S40(-04)	1999	Lock and	Lock and alarm	●	●	●	○	●	●	139	
S40(-04)	1999	TCM	AW50-42	●	●	●	○	●	●		
S40(-04)	1999	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
S40(-04)	1999	CCM	CCM	●	●	●	○	●	○		
S40(-04)	1999	CPM	CPM	●	●	●	○	●	○	21	
S40(-04)	1999	SRS	SRS	●	●	●	○	○	○		
S40(04-)	2005	CEM	CEM	●	●	●	●	●	●	110, 27, 29, 31	
S40(04-)	2005	Petrol	B4164S3	●	●	●	●	●	●		
S40(04-)	2005	Petrol	B4184S11	●	●	●	●	●	●		
S40(04-)	2005	Petrol	B5244S4	●	●	●	●	●	●	88, 6, 95	
S40(04-)	2005	Petrol	B5244S5	●	●	●	●	●	●	88, 6, 95	
S40(04-)	2005	Petrol	B5254T3	●	●	●	●	●	●	1, 2, 3, 4, 5, 6	
S40(04-)	2005	Diesel	D4164T	●	●	●	○	●	●	96, 97, 98, 99	
S40(04-)	2005	Diesel	D4204T	●	●	●	●	●	●	96, 100, 99, 97	
S40(04-)	2005	Diesel	D4204T2	●	●	●	●	●	●	96, 100, 99, 97	
S40(04-)	2005	AFM	AFM	●	●	●	●	●	○		
S40(04-)	2005	AEM	AEM	●	●	●	●	●	●		
S40(04-)	2005	AUD	AUD	●	●	●	●	○	○		
S40(04-)	2005	DEM	DEM	●	●	●	●	●	○		
S40(04-)	2005	DIM	DIM	●	●	●	●	●	●	103, 35, 37, 104	
S40(04-)	2005	ICM	ICM	●	●	●	●	●	●		
S40(04-)	2005	IAM	IAM	●	●	●	●	●	●		
S40(04-)	2005	KVM	KVM	●	●	●	●	●	●		
S40(04-)	2005	MPM	MPM	●	●	●	●	●	●		
S40(04-)	2005	MMM	MMM	●	●	●	●	●	●		
S40(04-)	2005	PAM	PAM	●	●	●	●	●	○		
S40(04-)	2005	PHM	PHM	●	●	●	●	●	○		
S40(04-)	2005	SWM	SWM	●	●	●	○	●	○		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S40 (04-)	2005	SUB	SUB	●	●	●	●	○	○		
S40 (04-)	2005	TMC	TMC	●	●	●	●	●	○		
S40 (04-)	2005	TCM	AW50/51AWD	●	●	●	●	●	●		
S40 (04-)	2005	TCM	AW55-50/51SN	●	●	●	●	●	●		
S40 (04-)	2005	ABS/BCM	ABS/BCM	●	●	●	●	●	●		
S40 (04-)	2005	EPS	EPS	●	●	●	○	●	○		
S40 (04-)	2005	CCM	CCM	●	●	●	●	●	○	44	
S40 (04-)	2005	DDM	DDM	●	●	●	○	●	●	46	
S40 (04-)	2005	PDM	PDM	●	●	●	○	●	●	46	
S40 (04-)	2005	PSM	PSM	●	●	●	●	●	●	109	
S40 (04-)	2005	SRS	SRS	●	●	●	●	●	○		
S40 (04-)	2005	TRM	TRM	●	●	●	●	●	○		
S40 (04-)	2005	GPS	GPS	●	●	●	●	●	○		
S40 (04-)	2004	CEM	CEM	●	●	●	○	●	●	110, 27	
S40 (04-)	2004	EPS	EPS	●	●	●	○	●	○		
S40 (04-)	2004	Petrol	B5244S4	●	●	●	●	●	●	88, 6, 95	
S40 (04-)	2004	Petrol	B5244S5	●	●	●	●	●	●	88, 6, 95	
S40 (04-)	2004	Petrol	B5254T3	●	●	●	●	●	●	1, 2, 3, 4, 5, 6	
S40 (04-)	2004	Diesel	D4204T	●	●	●	●	●	●	96, 100, 97	
S40 (04-)	2004	Diesel	D4204T2	●	●	●	●	●	●	96, 100, 97	
S40 (04-)	2004	AFM	AFM	●	●	●	●	●	○		
S40 (04-)	2004	AEM	AEM	●	●	●	●	●	●		
S40 (04-)	2004	AUD	AUD	●	●	●	●	○	○		
S40 (04-)	2004	DIM	DIM	●	●	●	●	●	●	103, 35, 37, 104	
S40 (04-)	2004	ICM	ICM	●	●	●	●	●	●		
S40 (04-)	2004	MPM	MPM	●	●	●	●	●	●		
S40 (04-)	2004	MMM	MMM	●	●	●	●	●	●		
S40 (04-)	2004	PHM	PHM	●	●	●	●	●	○		
S40 (04-)	2004	SWM	SWM	●	●	●	○	●	○		
S40 (04-)	2004	SUB	SUB	●	●	●	●	○	○		
S40 (04-)	2004	TMC	TMC	●	●	●	●	●	○		
S40 (04-)	2004	TCM	AW55-50/51SN	●	●	●	●	●	●		
S40 (04-)	2004	ABS/BCM	ABS/BCM	●	●	●	●	●	●		

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S40 (04-)	2004	CCM	CCM	●	●	●	●	●	○	44	
S40 (04-)	2004	DDM	DDM	●	●	●	○	●	●	46, 109	
S40 (04-)	2004	PDM	PDM	●	●	●	○	●	●	46	
S40 (04-)	2004	PSM	PSM	●	●	●	●	●	●	109	
S40 (04-)	2004	SRS	SRS	●	●	●	●	●	○		
S40 (04-)	2004	TRM	TRM	●	●	●	●	●	○		
S40 (04-)	2004	GPS	GPS	●	●	●	●	●	○		
S60	2005	CEM	CEM	●	●	●	●	●	●	27, 28, 150, 151, 29, 30, 31, 32	
S60	2005	Petrol	B5204T5	●	●	●	●	●	●	2, 3, 4, 5	
S60	2005	Petrol	B5244S	●	●	●	●	●	●	88, 6	
S60	2005	Petrol	B5244S2	●	●	●	●	●	●		
S60	2005	Petrol	B5244SG	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
S60	2005	Petrol	B5244SG2	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
S60	2005	Petrol	B5244T4	●	●	●	●	●	●	1, 2, 3, 4, 5	
S60	2005	Petrol	B5244T5	●	●	●	●	●	●	1, 2, 3, 4, 5, 6	
S60	2005	Petrol	B5254T2	●	●	●	●	●	●	1, 2, 3, 4, 5, 6	
S60	2005	Petrol	B5254T4	●	●	●	●	●	●	1, 2, 3, 4, 5, 6	
S60	2005	Diesel	D5244T	●	●	●	○	●	●	7	
S60	2005	Diesel	D5244T2	●	●	●	○	●	●	7	
S60	2005	Diesel	D5244T3	●	●	●	○	●	●	7	
S60	2005	AEM	AEM	●	●	●	●	●	●		
S60	2005	AUM	AUM	●	●	●	●	●	○		
S60	2005	DIM	DIM	●	●	●	●	●	●	33, 35, 36, 37	
S60	2005	PHM	PHM	●	●	●	●	●	○		
S60	2005	REM	REM	●	●	●	●	●	●	39, 40	
S60	2005	RTI	RTI	●	●	●	●	○	○		
S60	2005	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24, 25	
S60	2005	TCM	AW50/51AWD	●	●	●	●	●	●	10, 11	
S60	2005	TCM	AW55-50/51SN	●	●	●	●	●	●	10, 11	
S60	2005	ABS/BCM	ABS/BCM	●	●	●	●	●	●	62, 63	
S60	2005	SAS	SAS	●	●	●	●	●	○		

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S60	2005	SUM	SUM	●	●	●	●	●	○		
S60	2005	CCM	CCM	●	●	●	●	●	○	43, 44	
S60	2005	DDM	DDM	●	●	●	●	●	●	46, 47, 48	
S60	2005	PDM	PDM	●	●	●	●	●	●	46, 47	
S60	2005	PSM	PSM	●	●	●	●	●	●	48	
S60	2005	SRS	SRS	●	●	●	●	●	○		
S60	2005	DEM	DEM	●	●	●	●	●	○		
S60	2005	DEM	DEM	●	●	●	●	●	○		
S60	2004	CEM	CEM	●	●	●	●	●	●	27, 51, 40, 30, 32	
S60	2004	Petrol	B5204T5	●	●	●	●	●	●	1, 2, 3, 4, 50	
S60	2004	Petrol	B5234T3	●	●	●	●	●	●	1, 2, 3, 4, 50	
S60	2004	Petrol	B5234T7	●	●	●	●	●	●	1, 2, 3, 4, 50	
S60	2004	Petrol	B5244S	●	●	●	●	●	●	88, 6	
S60	2004	Petrol	B5244S2	●	●	●	●	●	●	6	
S60	2004	Petrol	B5244SG	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
S60	2004	Petrol	B5244SG2	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
S60	2004	Petrol	B5254T2	●	●	●	●	●	●	1, 2, 3, 4, 50	
S60	2004	Petrol	B5254T4	●	●	●	●	●	●	1, 2, 3, 4, 5, 50	
S60	2004	Diesel	D5244T	●	●	●	○	●	●	7	
S60	2004	Diesel	D5244T2	●	●	●	○	●	●	7	
S60	2004	AEM	AEM	●	●	●	●	●	●		
S60	2004	AUM	AUM	●	●	●	●	●	○		
S60	2004	DIM	DIM	●	●	●	●	●	●	33, 35, 53, 37	
S60	2004	PHM	PHM	●	●	●	●	●	○		
S60	2004	REM	REM	●	●	●	●	●	●	55	
S60	2004	RTI	RTI	●	●	●	●	○	○		
S60	2004	SWM	SWM	●	●	●	●	●	○		
S60	2004	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24	
S60	2004	TCM	AW50/51AWD	●	●	●	●	●	●	10, 11	
S60	2004	TCM	AW55-50/51SN	●	●	●	●	●	●	10, 11	
S60	2004	DEM	DEM	●	●	●	○	●	○		

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S60	2004	DEM	DEM	●	●	●	○	●	○		
S60	2004	ABS/BCM	ABS/BCM	●	●	●	●	●	●	62, 63	
S60	2004	SAS	SAS	●	●	●	○	●	○		
S60	2004	SUM	SUM	●	●	●	●	●	○		
S60	2004	CCM	CCM	●	●	●	●	●	○	41, 56, 56, 58	
S60	2004	DDM	DDM	●	●	●	●	●	●	47, 48, 59	
S60	2004	PDM	PDM	●	●	●	●	●	●	47, 59	
S60	2004	PSM	PSM	●	●	●	●	●	●	48, 60	
S60	2004	SRS	SRS	●	●	●	●	●	○		
S60	2003	CEM	CEM	●	●	●	●	●	●	27, 51, 40, 30, 32	
S60	2003	Petrol	B5204T5	●	●	●	●	●	●	1, 2, 3, 4, 50	
S60	2003	Petrol	B5234T3	●	●	●	●	●	●	1, 2, 3, 4, 50	
S60	2003	Petrol	B5234T7	●	●	●	●	●	●	1, 2, 3, 4, 50	
S60	2003	Petrol	B5244S	●	●	●	●	●	●	88, 6	
S60	2003	Petrol	B5244S2	●	●	●	●	●	●		
S60	2003	Petrol	B5244SG	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
S60	2003	Petrol	B5244SG2	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
S60	2003	Petrol	B5244T3	●	●	●	●	●	●	1, 2, 3, 4, 50	
S60	2003	Petrol	B5254T2	●	●	●	●	●	●	1, 2, 3, 4, 50	
S60	2003	Diesel	D5244T	●	●	●	○	●	●	7	
S60	2003	Diesel	D5244T2	●	●	●	○	●	●	7	
S60	2003	AEM	AEM	●	●	●	●	●	●		
S60	2003	AUM	AUM	●	●	●	●	●	○		
S60	2003	DEM	DEM	●	●	●	○	●	○		
S60	2003	DIM	DIM	●	●	●	●	●	●	33, 35, 53, 37	
S60	2003	PHM	PHM	●	●	●	●	●	○		
S60	2003	REM	REM	●	●	●	●	●	●	55	
S60	2003	RTI	RTI	●	●	●	●	○	○		
S60	2003	SWM	SWM	●	●	●	●	●	○		
S60	2003	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24	
S60	2003	TCM	AW50/51AWD	●	●	●	●	●	●	10, 11	

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S60	2003	TCM	AW55-50/51SN	●	●	●	●	●	●	10, 11	
S60	2003	ABS/BCM	ABS/BCM	●	●	●	●	●	●	62, 63	
S60	2003	SAS	SAS	●	●	●	○	●	○		
S60	2003	CCM	CCM	●	●	●	●	●	○	41, 56, 56, 58	
S60	2003	DDM	DDM	●	●	●	●	●	●	47, 48, 59	
S60	2003	PDM	PDM	●	●	●	●	●	●	47, 59	
S60	2003	PSM	PSM	●	●	●	●	●	●	48, 60	
S60	2003	SRS	SRS	●	●	●	●	●	○		
S60	2002	CEM	CEM	●	●	●	●	●	●	27, 51, 40, 30, 32	
S60	2002	Petrol	B5204T5	●	●	●	●	●	●	1, 2, 3, 50	
S60	2002	Petrol	B5234T3	●	●	●	●	●	●	1, 2, 3, 50	
S60	2002	Petrol	B5234T7	●	●	●	●	●	●	1, 2, 3, 50	
S60	2002	Petrol	B5244S	●	●	●	●	●	●	88, 6, 89	Extend DTC; Elec. Ident. ; Block DTC
S60	2002	Petrol	B5244S2	●	●	●	●	●	●	6, 89	Extend DTC; Elec. Ident. ; Block DTC
S60	2002	Petrol	B5244SG	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
S60	2002	Petrol	B5244SG2	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
S60	2002	Petrol	B5244T3	●	●	●	●	●	●	1, 2, 3, 50	
S60	2002	Diesel	D5244T	●	●	●	○	●	●	90, 7	
S60	2002	Diesel	D5244T2	●	●	●	○	●	●	90, 7	
S60	2002	AEM	AEM	●	●	●	●	●	●		
S60	2002	AUM	AUM	●	●	●	●	●	○		
S60	2002	DIM	DIM	●	●	●	●	●	●	33, 35, 53, 37	
S60	2002	PHM	PHM	●	●	●	●	●	○		
S60	2002	REM	REM	●	●	●	●	●	●	55	
S60	2002	RTI	RTI	●	●	●	●	○	○		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S60	2002	SWM	SWM	●	●	●	●	●	○		
S60	2002	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24	
S60	2002	TCM	AW50/51AWD	●	●	●	●	●	●	10, 11	
S60	2002	TCM	AW55-50/51SN	●	●	●	●	●	●	10, 11	
S60	2002	ABS/BCM	ABS/BCM	●	●	●	●	●	●	62, 63	
S60	2002	SAS	SAS	●	●	●	○	●	○		
S60	2002	CCM	CCM	●	●	●	●	●	○	41, 56, 56, 58	
S60	2002	DDM	DDM	●	●	●	●	●	●	59	
S60	2002	PDM	PDM	●	●	●	●	●	●	559	
S60	2002	PSM	PSM	●	●	●	●	●	●	48, 60	
S60	2002	SRS	SRS	●	●	●	●	●	○		
S60	2001	CEM	CEM	●	●	●	●	●	●	27, 51, 40, 30, 32	
S60	2001	Petrol	B5204T5	●	●	●	●	●	●	1, 50	Elec. Ident.
S60	2001	Petrol	B5234T3	●	●	●	●	●	●	1, 50	Elec. Ident.
S60	2001	Petrol	B5234T7	●	●	●	●	●	●	1, 50	Elec. Ident.
S60	2001	Petrol	B5244S	●	●	●	●	●	●	88, 6, 89	Extend DTC; Elec. Ident. ; Block DTC
S60	2001	Petrol	B5244S2	●	●	●	●	●	●	6, 89	Extend DTC; Elec. Ident. ; Block DTC
S60	2001	Petrol	B5244T3	●	●	●	●	●	●	1, 50	Elec. Ident.
S60	2001	Diesel	D5244T	●	●	●	○	●	●	90, 7	
S60	2001	AEM	AEM	●	●	●	●	●	●		
S60	2001	AUM	AUM	●	●	●	●	●	○		
S60	2001	DIM	DIM	●	●	●	●	●	●	33, 35, 53, 37	
S60	2001	PHM	PHM	●	●	●	●	●	○		
S60	2001	REM	REM	●	●	●	●	●	●		
S60	2001	RTI	RTI	●	●	●	●	○	○		
S60	2001	SWM	SWM	●	●	●	●	●	○		
S60	2001	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24	
S60	2001	TCM	AW55-50/51SN	●	●	●	●	●	●	10, 11	
S60	2001	ABS/BCM	ABS/BCM	●	●	●	●	●	●		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S60	2001	SAS	SAS	●	●	●	○	●	○		
S60	2001	CCM	CCM	●	●	●	●	●	○	41, 56, 56, 58	
S60	2001	DDM	DDM	●	●	●	●	●	●	47, 59	
S60	2001	PDM	PDM	●	●	●	●	●	●	47, 59	
S60	2001	PSM	PSM	●	●	●	●	●	●	48, 60	
S60	2001	SRS	SRS	●	●	●	●	●	○		
S60	2009	TCM	TF-80SC	●	●	●	●	●	●	81, 82, 83, 84, 85	
S60	2009	DEM	M66 AWD	●	●	●	●	●	○		
S60	2009	DEM	M58	●	●	●	●	●	○		
S60	2009	ECM	D5244T7	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
S60	2009	ECM	D5244T5	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
S60	2009	ECM	D5244T4	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
S60	2009	ECM	B5254T2	●	●	●	●	●	●	74	
S60	2009	ECM	B5244T5	●	●	●	●	●	●	74	
S60	2009	ECM	B5244S2	●	●	●	●	●	●		
S60	2009	ECM	B5244S	●	●	●	●	●	●		
S60	2009	ECM	B5204T5	●	●	●	●	●	●	74	
S60	2009	TCM	AW55-50/51SN	●	●	●	●	●	●	100, 101, 102, 103, 125	
S60	2009	DEM	AW50/51 AWD	●	●	●	●	●	○		
S60	2009	TCM	AW50/51 AWD	●	●	●	●	●	●	100, 101, 102, 103, 125	
S60	2009	AUM		●	●	●	●	●	○		
S60	2009	BCM		●	●	●	●	●	●	86, 87	
S60	2009	SRS		●	●	●	●	●	○	95	
S60	2009	PSM		●	●	●	●	●	●	107	
S60	2009	DDM		●	●	●	●	●	●	107, 108	
S60	2009	PDM		●	●	●	●	●	●	108	
S60	2009	SUM		●	●	●	●	●	●		
S60	2009	AEM		●	●	●	●	●	●		
S60	2009	REM		●	●	●	●	●	●		
S60	2009	CPM		●	○	○	○	●	○	111, 112	
S60	2009	RTI		●	●	●	●	○	○		
S60	2009	SAS		●	●	●	●	●	○		
S60	2009	HCM		●	●	●	●	●	○		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S60	2009	CCM		●	●	●	●	●	○	30, 113, 114, 29, 32, 115	
S60	2009	DIM		●	●	●	●	●	●	116, 117, 28, 46, 47, 118	
S60	2009	UEM		●	●	●	●	●	●		
S60	2009	PHM		●	●	●	●	●	○		
S60	2009	CEM		●	●	●	●	●	●	91, 92, 94, 95, 96	
S60	2008	TCM	TF-80SC	●	●	●	●	●	●	81, 82, 83, 84, 85	
S60	2008	DEM	M66 AWD	●	●	●	●	●	○		
S60	2008	DEM	M58	●	●	●	●	●	○		
S60	2008	ECM	D5244T7	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
S60	2008	ECM	D5244T5	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
S60	2008	ECM	D5244T4	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
S60	2008	ECM	B5254T2	●	●	●	●	●	●	74	
S60	2008	ECM	B5244T5	●	●	●	●	●	●	74	
S60	2008	ETM	B5244SG	●	○	○	○	●	○		
S60	2008	ECM	B5244SG	●	●	●	●	●	●		
S60	2008	ECM	B5244S2	●	●	●	●	●	●		
S60	2008	ECM	B5244S	●	●	●	●	●	●		
S60	2008	ECM	B5204T5	●	●	●	●	●	●	74	
S60	2008	TCM	AW55-50/51SN	●	●	●	●	●	●	100, 101, 102, 103, 125	
S60	2008	DEM	AW50/51 AWD	●	●	●	●	●	○		
S60	2008	TCM	AW50/51 AWD	●	●	●	●	●	●	100, 101, 102, 103, 125	
S60	2008	AUM		●	●	●	●	●	○		
S60	2008	BCM		●	●	●	●	●	●	86, 87	
S60	2008	SRS		●	●	●	●	●	○	95	
S60	2008	PSM		●	●	●	●	●	●	107	
S60	2008	DDM		●	●	●	●	●	●	107, 108	
S60	2008	PDM		●	●	●	●	●	●	108	
S60	2008	SUM		●	●	●	●	●	●		
S60	2008	AEM		●	●	●	●	●	●		
S60	2008	PHM		●	●	●	●	●	○		
S60	2008	REM		●	●	●	●	●	●		
S60	2008	CPM		●	○	○	○	●	○	111, 112	
S60	2008	CEM		●	●	●	●	●	●	91, 92, 94, 95, 96	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S60	2008	HCM		●	●	●	●	●	○		
S60	2008	RTI		●	●	●	●	○	○		
S60	2008	SAS		●	●	●	●	●	○		
S60	2008	CCM		●	●	●	●	●	○	30, 113, 114, 29, 32, 115	
S60	2008	DIM		●	●	●	●	●	●	116, 117, 28, 46, 47, 118	
S60	2008	UEM		●	●	●	●	●	●		
S60	2007	DEM	TF-80SC AWD	●	●	●	●	●	○		
S60	2007	DEM	M66 AWD	●	●	●	●	●	○		
S60	2007	DEM	M58	●	●	●	●	●	○		
S60	2007	ECM	D5244T7	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
S60	2007	TCM	TF-80SC	●	●	●	●	●	●	81, 82, 83, 84, 85	
S60	2007	ECM	D5244T5	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
S60	2007	TCM	TF-80SC	●	●	●	●	●	●	81, 82, 83, 84, 85	
S60	2007	ECM	D5244T4	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
S60	2007	TCM	TF-80SC AWD	●	●	●	●	●	●	81, 82, 83, 84, 85	
S60	2007	ECM	B5254T4	●	●	●	●	●	●	74	
S60	2007	ECM	B5254T2	●	●	●	●	●	●	74	
S60	2007	ECM	B5244T5	●	●	●	●	●	●	74	
S60	2007	ETM	B5244SG	●	○	○	○	●	○		
S60	2007	ECM	B5244SG	●	●	●	●	●	●		
S60	2007	ECM	B5244S2	●	●	●	●	●	●		
S60	2007	ECM	B5244S	●	●	●	●	●	●		
S60	2007	ECM	B5204T5	●	●	●	●	●	●	74	
S60	2007	TCM	AW55-50/51SN	●	●	●	●	●	●	100, 101, 102, 103, 125	
S60	2007	DEM	AW50/51 AWD	●	●	●	●	●	○		
S60	2007	TCM	AW50/51 AWD	●	●	●	●	●	●	100, 101, 102, 103, 125	
S60	2007	AUM		●	●	●	●	●	○		
S60	2007	BCM		●	●	●	●	●	●	86, 87	
S60	2007	SRS		●	●	●	●	●	○	95	
S60	2007	PSM		●	●	●	●	●	●	107	
S60	2007	DDM		●	●	●	●	●	●	107, 108	
S60	2007	PDM		●	●	●	●	●	●	108	
S60	2007	SUM		●	●	●	●	●	●		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S60	2007	AEM		●	●	●	●	●	●		
S60	2007	PHM		●	●	●	●	●	○		
S60	2007	REM		●	●	●	●	●	●		
S60	2007	CPM		●	○	○	○	●	○	111, 112	
S60	2007	CEM		●	●	●	●	●	●	91, 92, 94, 95, 96	
S60	2007	HCM		●	●	●	●	●	○		
S60	2007	CCM		●	●	●	●	●	○	30, 113, 114, 29, 32, 115	
S60	2007	RTI		●	●	●	●	○	○		
S60	2007	SAS		●	●	●	●	●	○		
S60	2007	DIM		●	●	●	●	●	●	116, 117, 28, 46, 47	
S60	2007	UEM		●	●	●	●	●	●		
S60	2006	DEM	TF-80SC AWD	●	●	●	●	●	○		
S60	2006	DEM	M66 AWD	●	●	●	●	●	○		
S60	2006	DEM	M58	●	●	●	●	●	○		
S60	2006	ECM	D5244T7	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
S60	2006	ECM	D5244T6	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
S60	2006	TCM	TF-80SC	●	●	●	●	●	●	81, 82, 83, 84, 85	
S60	2006	ECM	D5244T5	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
S60	2006	TCM	TF-80SC	●	●	●	●	●	●	81, 82, 83, 84, 85	
S60	2006	ECM	D5244T4	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
S60	2006	ECM	D5244T2	●	●	●	●	●	●		
S60	2006	ECM	D5244T	●	●	●	●	●	●		
S60	2006	TCM	TF-80SC AWD	●	●	●	●	●	●	81, 82, 83, 84, 85	
S60	2006	ECM	B5254T4	●	●	●	●	●	●	74	
S60	2006	ECM	B5254T2	●	●	●	●	●	●	74	
S60	2006	ECM	B5244T5	●	●	●	●	●	●	74	
S60	2006	ECM	B5244T4	●	●	●	●	●	●	74	
S60	2006	ETM	B5244SG	●	○	○	○	●	○		
S60	2006	ECM	B5244SG	●	●	●	●	●	●		
S60	2006	ECM	B5244S6	●	●	●	●	●	●		
S60	2006	ECM	B5244S2	●	●	●	●	●	●		
S60	2006	ECM	B5244S	●	●	●	●	●	●		
S60	2006	ECM	B5204T5	●	●	●	●	●	●	74	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S60	2006	TCM	AW55-50/51SN	●	●	●	●	●	●	100, 101, 102, 103, 125	
S60	2006	DEM	AW50/51 AWD	●	●	●	●	●	○		
S60	2006	TCM	AW50/51 AWD	●	●	●	●	●	●	100, 101, 102, 103, 125	
S60	2006	REM		●	●	●	●	●	●		
S60	2006	AUM		●	●	●	●	●	○		
S60	2006	BCM		●	●	●	●	●	●	86, 87	
S60	2006	SRS		●	●	●	●	●	○	95	
S60	2006	PSM		●	●	●	●	●	●	107	
S60	2006	DDM		●	●	●	●	●	●	107, 108	
S60	2006	PDM		●	●	●	●	●	●	108	
S60	2006	SUM		●	●	●	●	●	●		
S60	2006	AEM		●	●	●	●	●	●		
S60	2006	PHM		●	●	●	●	●	○		
S60	2006	DIM		●	●	●	●	●	●	116, 117, 28, 46, 47	
S60	2006	CPM		●	○	○	○	●	○	111, 112	
S60	2006	UEM		●	●	●	●	●	●	119, 120, 128, 122, 123, 124	
S60	2006	CEM		●	●	●	●	●	●	91, 92, 94, 95	
S60	2006	CCM		●	●	●	●	●	○	30, 113, 114, 29, 32, 115	
S60	2006	RTI		●	●	●	●	○	○		
S60	2006	SAS		●	●	●	●	●	○		
S70	2000	Petrol	B5204T3	●	●	●	●	●	●	1, 50	Elec. Ident.
S70	2000	Petrol	B5204T4	●	●	●	●	●	●	1, 50	Elec. Ident.
S70	2000	Petrol	B5234T3	●	●	●	●	●	●	1, 50	Elec. Ident.
S70	2000	Petrol	B5234T7	●	●	●	●	●	●	1, 50	Elec. Ident.
S70	2000	Petrol	B5244S	●	●	●	○	●	●	88, 6, 89	Extend DTC; Elec. Ident.
S70	2000	Petrol	B5244S2	●	●	●	○	●	●	88, 6, 89	Extend DTC; Elec. Ident.
S70	2000	Petrol	B5244SG	●	●	●	○	●	○		Elec. Ident.
S70	2000	Petrol	B5244SG2	●	●	●	○	●	○		Elec. Ident.
S70	2000	Petrol	B5244T	●	●	●	●	●	●	1, 50	Elec. Ident.
S70	2000	Diesel	D5252T MSA 15.8	●	○	○	○	●	●	91, 92	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S70	2000	Combined instrument	Combined instrument	●	●	●	○	●	●	72, 73, 37, 32	
S70	2000	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
S70	2000	RTI	RTI	●	●	●	○	●	●		
S70	2000	TCM	AW42AWD	●	●	●	○	●	●	10, 11	
S70	2000	TCM	AW50/51AWD	●	●	●	●	●	●	10, 11	
S70	2000	TCM	AW50-42	●	●	●	○	●	●	10, 11	
S70	2000	TCM	AW55-50/51SN	●	●	●	●	●	●	10, 11	
S70	2000	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
S70	2000	CCM	CCM	●	●	●	○	●	○		
S70	2000	CPM	CPM	●	●	●	○	●	○		
S70	2000	Power seat module, left	Power seat module, left	●	●	●	○	●	●		
S70	2000	Power seat module, right	Power seat module, Right	●	●	●	○	●	●		
S70	2000	SRS	SRS	●	●	●	○	●	○		
S70	1999	Petrol	B5204T3	●	●	●	●	●	●	1, 50	Elec. Ident.
S70	1999	Petrol	B5204T4	●	●	●	●	●	●	1, 93	Elec. Ident.
S70	1999	Petrol	B5234T3	●	●	●	●	●	●	1, 93	Elec. Ident.
S70	1999	Petrol	B5234T7	●	●	●	●	●	●	1, 93	Elec. Ident.
S70	1999	Petrol	B5254S DENSO	●	●	●	○	●	●	88, 6, 89	Extend DTC; Elec. Ident.
S70	1999	Petrol	B5254T	●	●	●	●	●	●	1, 93	Elec. Ident.
S70	1999	Diesel	D5252T MSA 15.8	●	○	○	○	●	●	91, 92	
S70	1999	Combined instrument	Combined instrument	●	●	●	○	●	●	72, 73, 37, 32	
S70	1999	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
S70	1999	RTI	RTI	●	●	●	○	●	●		
S70	1999	TCM	AW42AWD	●	●	●	○	●	●	10, 11	
S70	1999	TCM	AW50-42	●	●	●	○	●	●		
S70	1999	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
S70	1999	CCM	CCM	●	●	●	○	●	○		
S70	1999	CPM	CPM	●	●	●	○	●	○		

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S70	1999	Power seat module, left	Power seat module, left	●	●	●	○	●	●		
S70	1999	Power seat module, right	Power seat module, Right	●	●	●	○	●	●		
S70	1999	SRS	SRS	●	●	●	○	●	○		
S80	2005	Petrol	B5204T5	●	●	●	●	●	●	2, 3, 4, 5	
S80	2005	Petrol	B5244S	●	●	●	●	●	●	88, 6	
S80	2005	Petrol	B5244S2	●	●	●	●	●	●		
S80	2005	Petrol	B5244SG	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
S80	2005	Petrol	B5244SG2	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
S80	2005	Petrol	B5244T4	●	●	●	●	●	●	1, 2, 3, 4, 5	
S80	2005	Petrol	B5254T2	●	●	●	●	●	●	1, 2, 3, 4, 5, 6	
S80	2005	Petrol	B6294S2	●	●	●	●	●	●	2, 3, 4, 5	
S80	2005	Petrol	B6294T	●	●	●	●	●	●	1, 2, 3, 4, 5, 6	
S80	2005	Diesel	D5244T	●	●	●	○	●	●	7	
S80	2005	Diesel	D5244T2	●	●	●	○	●	●	7	
S80	2005	AEM	AEM	●	●	●	●	●	●		
S80	2005	AUM	AUM	●	●	●	●	●	○		
S80	2005	DIM	DIM	●	●	●	●	●	●	33, 35, 36, 37	
S80	2005	PHM	PHM	●	●	●	●	●	○		
S80	2005	REM	REM	●	●	●	●	●	●	39, 40	
S80	2005	RTI	RTI	●	●	●	●	○	○		
S80	2005	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24, 25	
S80	2005	TCM	4T65EV	●	●	●	●	●	●	10, 11	
S80	2005	TCM	4T65EV-GT	●	●	●	●	●	●	10, 11	
S80	2005	TCM	AW50/51AWD	●	●	●	●	●	●	10, 11	
S80	2005	TCM	AW55-50/51SN	●	●	●	●	●	●	10, 11	
S80	2005	ABS/BCM	ABS/BCM	●	●	●	●	●	●	62, 63	
S80	2005	SAS	SAS	●	●	●	●	●	○		

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S80	2005	SUM	SUM	●	●	●	●	●	○		
S80	2005	CCM	CCM	●	●	●	●	●	○	43, 44	
S80	2005	DDM	DDM	●	●	●	●	●	●	46, 47, 48	
S80	2005	PDM	PDM	●	●	●	●	●	●	46	
S80	2005	PSM	PSM	●	●	●	●	●	●	48	
S80	2005	SRS	SRS	●	●	●	●	●	○		
S80	2005	CEM	CEM	●	●	●	●	●	●	27, 28, 150, 151, 29, 30, 31, 32	
S80	2004	Petrol	B5204T5	●	●	●	●	●	●	1, 2, 3, 4, 50	
S80	2004	Petrol	B5234T7	●	●	●	●	●	●	1, 2, 3, 4, 50	
S80	2004	Petrol	B5244S	●	●	●	●	●	●	6	
S80	2004	Petrol	B5244S2	●	●	●	●	●	●		
S80	2004	Petrol	B5244SG	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
S80	2004	Petrol	B5244SG2	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
S80	2004	Petrol	B5254T2	●	●	●	●	●	●	1, 2, 3, 4, 50	
S80	2004	Petrol	B6294S2	●	●	●	●	●	●	1, 2, 3, 4, 50	
S80	2004	Petrol	B6294T	●	●	●	●	●	●	1, 2, 3, 4, 50	
S80	2004	Diesel	D5244T	●	●	●	○	●	●	7	
S80	2004	Diesel	D5244T2	●	●	●	○	●	●	7	
S80	2004	AEM	AEM	●	●	●	●	●	●		
S80	2004	AUM	AUM	●	●	●	●	●	○		
S80	2004	CEM	CEM	●	●	●	●	●	●	27, 51, 40, 30, 32	Immobiliser(Live Data)
S80	2004	DIM	DIM	●	●	●	●	●	●	33, 35, 53, 37	
S80	2004	PHM	PHM	●	●	●	●	●	○		
S80	2004	REM	REM	●	●	●	●	●	●	55	
S80	2004	RTI	RTI	●	●	●	●	○	○		
S80	2004	SWM	SWM	●	●	●	●	●	○		
S80	2004	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24	
S80	2004	TCM	4T65EV	●	●	●	●	●	●	10, 11	
S80	2004	TCM	4T65EV-GT	●	●	●	●	●	●	10, 11	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S80	2004	TCM	AW50/51AWD	●	●	●	●	●	●	10, 11	
S80	2004	TCM	AW55-50/51SN	●	●	●	●	●	●	10, 11	
S80	2004	ABS/BCM	ABS/BCM	●	●	●	●	●	●	62, 63	
S80	2004	SAS	SAS	●	●	●	○	●	○		
S80	2004	SUM	SUM	●	●	●	●	●	○		
S80	2004	CCM	CCM	●	●	●	●	●	○	41, 56, 56, 58	
S80	2004	DDM	DDM	●	●	●	●	●	●	47, 59	
S80	2004	PDM	PDM	●	●	●	●	●	●	59	
S80	2004	PSM	PSM	●	●	●	●	●	●	48, 60	
S80	2004	SRS	SRS	●	●	●	●	●	○		
S80	2003	CEM	CEM	●	●	●	●	●	●	27, 51, 40, 30, 32	
S80	2003	Petrol	B5204T5	●	●	●	●	●	●	1, 2, 3, 4, 50	
S80	2003	Petrol	B5234T7	●	●	●	●	●	●	1, 2, 3, 4, 50	
S80	2003	Petrol	B5244S	●	●	●	●	●	●	6	
S80	2003	Petrol	B5244S2	●	●	●	●	●	●		
S80	2003	Petrol	B5244SG	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
S80	2003	Petrol	B5244SG2	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
S80	2003	Petrol	B5244T3	●	●	●	●	●	●	1, 2, 3, 4, 50	
S80	2003	Petrol	B6294S2	●	●	●	●	●	●	1, 2, 3, 4, 50	
S80	2003	Petrol	B6294T	●	●	●	●	●	●	1, 2, 3, 4, 50	
S80	2003	Diesel	D5244T	●	●	●	○	●	●	7	
S80	2003	Diesel	D5244T2	●	●	●	○	●	●	7	
S80	2003	AEM	AEM	●	●	●	●	●	●		
S80	2003	AUM	AUM	●	●	●	●	●	○		
S80	2003	DIM	DIM	●	●	●	●	●	●	33, 35, 53, 37	
S80	2003	PHM	PHM	●	●	●	●	●	○		
S80	2003	REM	REM	●	●	●	●	●	●	55	
S80	2003	RTI	RTI	●	●	●	●	○	○		
S80	2003	SWM	SWM	●	●	●	●	●	○		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S80	2003	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24	
S80	2003	TCM	4T65EV	●	●	●	●	●	●	10, 11	
S80	2003	TCM	4T65EV-GT	●	●	●	●	●	●	10, 11	
S80	2003	TCM	AW50/51AWD	●	●	●	●	●	●	10, 11	
S80	2003	TCM	AW55-50/51SN	●	●	●	●	●	●	10, 11	
S80	2003	ABS/BCM	ABS/BCM	●	●	●	●	●	●	62, 63	
S80	2003	SAS	SAS	●	●	●	○	●	○		
S80	2003	CCM	CCM	●	●	●	●	●	○	41, 56, 56, 58	
S80	2003	DDM	DDM	●	●	●	●	●	●	47, 59	
S80	2003	PDM	PDM	●	●	●	●	●	●	59	
S80	2003	PSM	PSM	●	●	●	●	●	●	48, 60	
S80	2003	SRS	SRS	●	●	●	●	●	○		
S80	2002	CEM	CEM	●	●	●	●	●	●	27, 51, 40, 30, 32	
S80	2002	Petrol	B5204T5	●	●	●	●	●	●	1, 2, 3, 50	
S80	2002	Petrol	B5234T7	●	●	●	●	●	●	1, 2, 3, 50	
S80	2002	Petrol	B5244S	●	●	●	●	●	●	6, 89	Extend DTC; Elec. Ident. ; Block DTC
S80	2002	Petrol	B5244S2	●	●	●	●	●	●	6, 89	Extend DTC; Elec. Ident. ; Block DTC
S80	2002	Petrol	B5244SG	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
S80	2002	Petrol	B5244SG2	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
S80	2002	Petrol	B5244T3	●	●	●	●	●	●	1, 2, 3, 50	
S80	2002	Petrol	B6294S2	●	●	●	●	●	●	1, 2, 4, 50	
S80	2002	Petrol	B6294T	●	●	●	●	●	●	1, 2, 4, 50	
S80	2002	Diesel	D5244T	●	●	●	○	●	●	90, 7	
S80	2002	Diesel	D5244T2	●	●	●	○	●	●	90, 7	
S80	2002	AEM	AEM	●	●	●	●	●	●		

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

[illegible]

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

[illegible]

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

[illegible]



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S80	1999	PHM	PHM	●	●	●	●	○	○		
S80	1999	REM	REM	●	●	●	●	●	●		
S80	1999	RTI	RTI	●	●	●	●	○	○		
S80	1999	SWM	SWM	●	●	●	●	●	○		
S80	1999	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24	
S80	1999	TCM	4T65EV	●	●	●	●	●	●	10, 11	
S80	1999	TCM	4T65EV-GT	●	●	●	●	●	●	10, 11	
S80	1999	TCM	AW50-42	●	●	●	○	●	●	10, 11	
S80	1999	TCM	AW55-50/51SN	●	●	●	●	●	●	10, 11	
S80	1999	ABS/BCM	ABS/BCM	●	●	●	○	●	●		DSTC(Live Data); DSTC(Active Test)
S80	1999	SAS	SAS	●	●	●	○	●	○		
S80	1999	CCM	CCM	●	●	●	●	●	○	41, 56, 56, 58	
S80	1999	DDM	DDM	●	●	●	●	●	●	59	
S80	1999	PDM	PDM	●	●	●	●	●	●	59	
S80	1999	PSM	PSM	●	●	●	●	●	●		
S80	1999	SRS	SRS	●	●	●	●	○	○		
S80(-06)	2006	ECM	D5244T2	●	●	●	●	●	●		
S80(-06)	2006	ECM	D5244T	●	●	●	●	●	●		
S80(-06)	2006	ECM	B6294T	●	●	●	●	●	●	74	
S80(-06)	2006	ECM	B6294S2	●	●	●	●	●	●	74	
S80(-06)	2006	ECM	B5254T2	●	●	●	●	●	●	74	
S80(-06)	2006	ECM	B5244T4	●	●	●	●	●	●	74	
S80(-06)	2006	ETM	B5244SG	●	○	○	○	●	○		
S80(-06)	2006	ECM	B5244SG	●	●	●	●	●	●		
S80(-06)	2006	ECM	B5244S2	●	●	●	●	●	●		
S80(-06)	2006	ECM	B5244S	●	●	●	●	●	●		
S80(-06)	2006	ECM	B5204T5	●	●	●	●	●	●	74	
S80(-06)	2006	TCM	AW55-50/51SN	●	●	●	●	●	●	100, 101, 102, 103, 125	
S80(-06)	2006	TCM	AW50/51 AWD	●	●	●	●	●	●	100, 101, 102, 103, 125	
S80(-06)	2006	DEM	AW50/51 AWD	●	●	●	●	●	○		
S80(-06)	2006	TCM	4T65EV-GT	●	●	●	●	●	●	125, 102, 100, 103	
S80(-06)	2006	TCM	4T65EV	●	●	●	●	●	●	125, 102, 100, 103	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S80 (07-)	2009	ECM	B5254T8	●	●	●	●	●	●	74, 79	
S80 (07-)	2009	TCM	TF-80SC	●	●	●	●	●	●	1, 2, 3, 4, 5	
S80 (07-)	2009	ECM	B5254T6	●	●	●	●	●	●	74, 79	
S80 (07-)	2009	ECM	B4204S4	●	●	●	●	●	●	79	
S80 (07-)	2009	ECM	B4204S3	●	●	●	●	●	●	79	
S80 (07-)	2009	SUM		●	●	●	●	●	●	10	
S80 (07-)	2009	IAM		●	●	●	●	○	○		
S80 (07-)	2009	PSM		●	●	●	●	●	●		
S80 (07-)	2009	HLDF		●	●	●	●	●	○		
S80 (07-)	2009	AUU		●	●	●	●	●	○		
S80 (07-)	2009	DDM		●	●	●	●	●	●	12, 13	
S80 (07-)	2009	PDM		●	●	●	●	●	●	12, 13	
S80 (07-)	2009	PAM		●	●	●	●	●	○	14	
S80 (07-)	2009	KVM		●	●	●	●	●	○	16, 17	
S80 (07-)	2009	AUD		●	●	●	●	○	○		
S80 (07-)	2009	CPM		●	●	●	●	●	●		
S80 (07-)	2009	HCM		●	●	●	●	●	○	23	
S80 (07-)	2009	BCM		●	●	●	●	●	●	10	
S80 (07-)	2009	SAS		●	●	●	●	●	○		
S80 (07-)	2009	SRS		●	●	●	●	●	○	25, 26, 27	
S80 (07-)	2009	CCM		●	●	●	●	●	●	28, 29, 30, 31, 32	
S80 (07-)	2009	CEM		●	●	●	●	●	●	35, 39	
S80 (07-)	2009	TRM		●	●	●	●	●	○		
S80 (07-)	2009	PBM		●	●	●	●	●	○	43	
S80 (07-)	2009	FSM		●	●	●	●	●	○		
S80 (07-)	2009	DIM		●	●	●	●	●	○	47, 48, 49, 50, 51, 52	
S80 (07-)	2009	PAC		●	●	●	●	●	○		
S80 (07-)	2009	RDAR		●	●	●	●	○	○		
S80 (07-)	2009	MMM		●	●	●	●	○	○		
S80 (07-)	2009	ICM		●	●	●	●	●	●		
S80 (07-)	2009	BPM		●	●	●	●	●	○		
S80 (07-)	2009	PHM		●	●	●	●	●	○		
S80 (07-)	2008	DEM	TF-80SC AWD	●	●	●	●	●	●		

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S80 (07-)	2008	DEM	M66 AWD	●	●	●	●	●	●		
S80 (07-)	2008	TCM	TF-80SC	●	●	●	●	●	●	1, 2, 3, 4, 5	
S80 (07-)	2008	ECM	D5244T5	●	●	●	●	●	●	58, 59, 60, 61, 62, 63, 90, 64	
S80 (07-)	2008	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 2, 3, 4, 5	
S80 (07-)	2008	TCM	TF-80SC	●	●	●	●	●	●	1, 2, 3, 4, 5	
S80 (07-)	2008	ECM	D5244T4	●	●	●	●	●	●	58, 59, 60, 61, 62, 63, 90, 64	
S80 (07-)	2008	ECM	D4204T	●	●	●	●	●	●	69, 70, 71	
S80 (07-)	2008	TCM	B8444S	●	●	●	●	●	●	1, 2, 3, 4, 5	
S80 (07-)	2008	ECM	B8444S	●	●	●	●	●	●	9	
S80 (07-)	2008	TCM	B6324S	●	●	●	●	●	●	1, 2, 3, 4, 5	
S80 (07-)	2008	TCM	B6324S	●	●	●	●	●	●	1, 2, 3, 4, 5	
S80 (07-)	2008	ECM	B6324S	●	●	●	●	●	●	9	
S80 (07-)	2008	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 2, 3, 4, 5	
S80 (07-)	2008	ECM	B6304T2	●	●	●	●	●	●	9	
S80 (07-)	2008	TCM	TF-80SC	●	●	●	●	●	●	1, 2, 3, 4, 5	
S80 (07-)	2008	ECM	B5254T6	●	●	●	●	●	●	74, 79	
S80 (07-)	2008	ECM	B4204S4	●	●	●	●	●	●	79	
S80 (07-)	2008	ECM	B4204S3	●	●	●	●	●	●	79	
S80 (07-)	2008	SUM		●	●	●	●	●	●	10	
S80 (07-)	2008	IAM		●	●	●	●	○	○		
S80 (07-)	2008	PSM		●	●	●	●	●	●		
S80 (07-)	2008	RDAR		●	●	●	●	○	○		
S80 (07-)	2008	HLDF		●	●	●	●	●	○		
S80 (07-)	2008	AUU		●	●	●	●	●	○		
S80 (07-)	2008	DDM		●	●	●	●	●	●	12, 13	
S80 (07-)	2008	PDM		●	●	●	●	●	●	12, 13	
S80 (07-)	2008	PAM		●	●	●	●	●	○	14	
S80 (07-)	2008	KVM		●	●	●	●	●	○	16, 17	
S80 (07-)	2008	AUD		●	●	●	●	○	○		
S80 (07-)	2008	PHM		●	●	●	●	●	○		
S80 (07-)	2008	CPM		●	●	●	●	●	●		
S80 (07-)	2008	HCM		●	●	●	●	●	○	23	
S80 (07-)	2008	BCM		●	●	●	●	●	●	80	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S80 (07-)	2008	SAS		●	●	●	●	●	○		
S80 (07-)	2008	SRS		●	●	●	●	●	○	25, 26, 27	
S80 (07-)	2008	CEM		●	●	●	●	●	●	35, 39	
S80 (07-)	2008	DIM		●	●	●	●	●	○	47, 48, 49, 50, 51, 52	
S80 (07-)	2008	CCM		●	●	●	●	●	●	28, 29, 30, 31, 32	
S80 (07-)	2008	TRM		●	●	●	●	●	○		
S80 (07-)	2008	PBM		●	●	●	●	●	○	43	
S80 (07-)	2008	BPM		●	●	●	●	●	○		
S80 (07-)	2008	MMM		●	●	●	●	○	○		
S80 (07-)	2008	FSM		●	●	●	●	●	○		
S80 (07-)	2008	ICM		●	●	●	●	●	●		
S80 (07-)	2008	PAC		●	●	●	●	●	○		
S80 (07-)	2007	DEM	TF-80SC AWD	●	●	●	●	●	●		
S80 (07-)	2007	ECM	B5254T6	●	●	●	●	●	●	74, 79	
S80 (07-)	2007	SUM		●	●	●	●	●	●	10	
S80 (07-)	2007	PSM		●	●	●	●	●	●		
S80 (07-)	2007	HLDF		●	●	●	●	●	○		
S80 (07-)	2007	AUU		●	●	●	●	●	○		
S80 (07-)	2007	DDM		●	●	●	●	●	●	12, 13	
S80 (07-)	2007	PDM		●	●	●	●	●	●	12, 13	
S80 (07-)	2007	PAM		●	●	●	●	●	○	14	
S80 (07-)	2007	KVM		●	●	●	●	●	○	16, 17	
S80 (07-)	2007	AUD		●	●	●	●	○	○		
S80 (07-)	2007	PHM		●	●	●	●	●	○		
S80 (07-)	2007	CPM		●	●	●	●	●	●		
S80 (07-)	2007	HCM		●	●	●	●	●	○	23	
S80 (07-)	2007	SAS		●	●	●	●	●	○		
S80 (07-)	2007	CCM		●	●	●	●	●	●	28, 29, 30, 31, 32	
S80 (07-)	2007	TRM		●	●	●	●	●	○		
S80 (07-)	2007	TCM	TF-80SC	●	●	●	●	●	●	1, 2, 3, 4, 5	
S80 (07-)	2007	ECM	D5244T5	●	●	●	●	●	●	58, 59, 60, 61, 62, 63, 90, 64	
S80 (07-)	2007	TCM	TF-80SC	●	●	●	●	●	●	1, 2, 3, 4, 5	
S80 (07-)	2007	ECM	D5244T4	●	●	●	●	●	●	58, 59, 60, 61, 62, 63, 90, 64	

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S80 (07-)	2007	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 2, 3, 4, 5	
S80 (07-)	2007	ECM	B8444S	●	●	●	●	●	●	9	
S80 (07-)	2007	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 2, 3, 4, 5	
S80 (07-)	2007	TCM	TF-80SC	●	●	●	●	●	●	1, 2, 3, 4, 5	
S80 (07-)	2007	ECM	B6324S	●	●	●	●	●	●	9	
S80 (07-)	2007	TCM	TF-80SC	●	●	●	●	●	●	1, 2, 3, 4, 5	
S80 (07-)	2007	BCM		●	●	●	●	●	●	10	
S80 (07-)	2007	FSM		●	●	●	●	●	○		
S80 (07-)	2007	IAM		●	●	●	●	○	○		
S80 (07-)	2007	PAC		●	●	●	●	●	○		
S80 (07-)	2007	RDAR		●	●	●	●	○	○		
S80 (07-)	2007	ICM		●	●	●	●	●	●		
S80 (07-)	2007	SRS		●	●	●	●	●	○	25, 26, 27	
S80 (07-)	2007	PBM		●	●	●	●	●	○	43	
S80 (07-)	2007	CEM		●	●	●	●	●	●	35, 39	
S80 (07-)	2007	BPM		●	●	●	●	●	○		
S80 (07-)	2007	DIM		●	●	●	●	●	○	47, 48, 49, 50, 51, 52	
S80 (07-)	2007	MMM		●	●	●	●	○	○		
V40	2004	Petrol	B4164S2	●	●	●	○	●	●	113, 1	
V40	2004	Petrol	B4184S10	●	●	●	○	●	●	113, 1	
V40	2004	Petrol	B4184S2	●	●	●	○	●	●	113, 1	
V40	2004	Petrol	B4184S3	●	●	●	○	●	●	113, 1	
V40	2004	Petrol	B4184S9	●	●	●	○	●	●	113, 1	
V40	2004	Petrol	B4184SJ	●	●	●	○	●	●	117	
V40	2004	Petrol	B4204S2	●	●	●	○	●	●	113, 1	
V40	2004	Petrol	B4204T3	●	●	●	○	●	●	118, 1	
V40	2004	Diesel	D4192T3 (Anti-spin system)	●	●	●	○	●	●		
V40	2004	Diesel	D4192T4 (Anti-spin system)	●	●	●	○	●	●		
V40	2004	Anti-spin system	Anti-spin system	●	●	●	○	●	○		
V40	2004	DIM	DIM	●	●	●	○	●	●	121, 122, 81, 125, 126	

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V40	2004	Gas discharge light module	Gas discharge light module	●	●	●	○	●	●		
V40	2004	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
V40	2004	TCM	AW55-50/51SN	●	●	●	○	●	●	130, 131	
V40	2004	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
V40	2004	CCM	CCM	●	●	●	○	●	●	132, 133, 81	
V40	2004	CPM	CPM	●	●	●	○	●	○	21	
V40	2004	SRS	SRS	●	●	●	○	●	○		
V40	2003	Petrol	B4164S2	●	●	●	○	●	●	113, 1	
V40	2003	Petrol	B4184S10	●	●	●	○	●	●	113, 1	
V40	2003	Petrol	B4184S2	●	●	●	○	●	●	113, 1	
V40	2003	Petrol	B4184S3	●	●	●	○	●	●	113, 1	
V40	2003	Petrol	B4184S9	●	●	●	○	●	●	113, 1	
V40	2003	Petrol	B4184SJ	●	●	●	○	●	●	117	
V40	2003	Petrol	B4204S2	●	●	●	○	●	●	113, 1	
V40	2003	Petrol	B4204T3	●	●	●	○	●	●	118, 1	
V40	2003	Petrol	B4204T5	●	●	●	○	●	●	118, 1	
V40	2003	Diesel	D4192T3 (Anti-spin system)	●	●	●	○	●	○		
V40	2003	Diesel	D4192T4 (Anti-spin system)	●	●	●	○	●	○		
V40	2003	Anti-spin system	Anti-spin system	●	●	●	○	●	○		
V40	2003	DIM	DIM	●	●	●	○	●	●	121, 122, 81, 125, 126	
V40	2003	Gas discharge light module	Gas discharge light module	●	●	●	○	●	●		
V40	2003	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
V40	2003	TCM	AW55-50/51SN	●	●	●	○	●	●	130, 131	
V40	2003	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
V40	2003	CCM	CCM	●	●	●	○	●	●	132, 133, 81	
V40	2003	CPM	CPM	●	●	●	○	●	○	21	
V40	2003	SRS	SRS	●	●	●	○	●	○		
V40	2002	Petrol	B4164S2	●	●	●	○	●	●	113, 1	

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V40	2002	Petrol	B4184S10	●	●	●	○	●	●	113, 1	
V40	2002	Petrol	B4184S2	●	●	●	○	●	●	113, 1	
V40	2002	Petrol	B4184S3	●	●	●	○	●	●	113, 1	
V40	2002	Petrol	B4184S9	●	●	●	○	●	●	113, 1	
V40	2002	Petrol	B4184SJ	●	●	●	○	●	●	117	
V40	2002	Petrol	B4204S2	●	●	●	○	●	●	113, 1	
V40	2002	Petrol	B4204T3	●	●	●	○	●	●	118, 1	
V40	2002	Petrol	B4204T5	●	●	●	○	●	●	118, 1	
V40	2002	Diesel	D4192T3 (Anti-spin system)	●	●	●	○	●	○		
V40	2002	Diesel	D4192T4 (Anti-spin system)	●	●	●	○	●	○		
V40	2002	Anti-spin system	Anti-spin system	●	●	●	○	●	○		
V40	2002	DIM	DIM	●	●	●	○	●	●	121, 122, 81, 125, 126	
V40	2002	Gas discharge light module	Gas discharge light module	●	●	●	○	●	●		
V40	2002	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
V40	2002	TCM	AW55-50/51SN	●	●	●	○	●	●	130, 131	
V40	2002	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
V40	2002	CCM	CCM	●	●	●	○	●	●	132, 133, 81	
V40	2002	CPM	CPM	●	●	●	○	●	○	21	
V40	2002	SRS	SRS	●	●	●	○	●	○		
V40	2001	Petrol	B4164S2	●	●	●	○	●	●	113, 1	
V40	2001	Petrol	B4184S10	●	●	●	○	●	●	113, 1	
V40	2001	Petrol	B4184S2	●	●	●	○	●	●	113, 1	
V40	2001	Petrol	B4184S3	●	●	●	○	●	●	113, 1	
V40	2001	Petrol	B4184S9	●	●	●	○	●	●	113, 1	
V40	2001	Petrol	B4184SJ	●	●	●	○	●	●	117	
V40	2001	Petrol	B4184SM	●	●	●	○	●	●	134, 135	
V40	2001	Petrol	B4204S2	●	●	●	○	●	●	113, 1	
V40	2001	Petrol	B4204T3	●	●	●	○	●	●	118, 1	
V40	2001	Petrol	B4204T5	●	●	●	○	●	●	118, 1	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V40	2001	Diesel	D4192T3 (Anti-spin system)	●	●	●	○	●	○		
V40	2001	Diesel	D4192T4 (Anti-spin system)	●	●	●	○	●	○		
V40	2001	Anti-spin system	<u>Anti-spin system</u>	●	●	●	○	●	○		
V40	2001	DIM	DIM	●	●	●	○	●	●	121, 122, 81, 125, 126	
V40	2001	Gas discharge light module	Gas discharge light module	●	●	●	○	●	●		
V40	2001	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
V40	2001	TCM	AW55-50/51SN	●	●	●	○	●	●	130, 131	
V40	2001	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
V40	2001	CCM	CCM	●	●	●	○	●	●	132, 133, 81	
V40	2001	CPM	CPM	●	●	●	○	●	○	21	
V40	2001	SRS	SRS	●	●	●	○	●	○		
V40	2000	Petrol	B4164S2	●	●	●	○	●	●		
V40	2000	Petrol	B4184S2	●	●	●	○	●	●		
V40	2000	Petrol	B4184S3	●	●	●	○	●	●		
V40	2000	Petrol	B4184SM	●	●	●	○	●	●	134, 135	
V40	2000	Petrol	B4194T2	●	●	●	○	●	●		
V40	2000	Petrol	B4204S2	●	●	●	○	●	●		
V40	2000	Petrol	B4204T2	●	●	●	○	●	●		
V40	2000	Diesel	D4192T2 (Anti-spin system)	●	●	●	○	●	○		
V40	2000	Anti-spin system	<u>Anti-spin system</u>	●	●	●	○	●	○		
V40	2000	DIM	DIM	●	●	●	○	●	●	121, 122, 81, 125, 126	
V40	2000	Lock and	Lock and alarm	●	●	●	○	●	○	80, 81, 40	
V40	2000	TCM	AW50-42	●	●	●	○	●	●		
V40	2000	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
V40	2000	CCM	CCM	●	●	●	○	●	○		
V40	2000	CPM	CPM	●	●	●	○	●	○	21	
V40	2000	SRS	SRS	●	●	●	○	○	○		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V40	1999	Petrol	B4164S (Anti-spin system)	●	●	●	○	●	○		
V40	1999	Petrol	B4184S (Anti-spin system)	●	●	●	○	●	○		
V40	1999	Petrol	B4184SM	●	●	●	○	●	●	134, 135	
V40	1999	Petrol	B4194T	●	●	●	○	●	●	113	
V40	1999	Petrol	B4204S (Anti-spin system)	●	●	●	○	●	○		
V40	1999	Petrol	B4204T	●	●	●	○	●	●	113	
V40	1999	Diesel	D4192T (Anti-spin system)	●	●	●	○	●	○		
V40	1999	Diesel	D4192T2 (Anti-spin system)	●	●	●	○	●	○		
V40	1999	DIM	DIM	●	●	●	○	●	●	125, 126	
V40	1999	Lock and	Lock and alarm	●	●	●	○	●	●	139	
V40	1999	TCM	AW50-42	●	●	●	○	●	●		
V40	1999	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
V40	1999	CCM	CCM	●	●	●	○	●	○		
V40	1999	CPM	CPM	●	●	●	○	●	○	21	
V40	1999	SRS	SRS	●	●	●	○	○	○		
V50	2005	Petrol	B4164S3	●	●	●	●	●	●		
V50	2005	Petrol	B4184S11	●	●	●	●	●	●		
V50	2005	Petrol	B5244S4	●	●	●	●	●	●	88, 6, 95	
V50	2005	Petrol	B5244S5	●	●	●	●	●	●	88, 6, 95	
V50	2005	Petrol	B5254T3	●	●	●	●	●	●	1, 2, 3, 4, 5, 6	
V50	2005	Diesel	D4164T	●	●	●	○	●	●	96, 97, 98, 99	
V50	2005	Diesel	D4204T	●	●	●	●	●	●	96, 100, 99, 97	
V50	2005	Diesel	D4204T2	●	●	●	●	●	●	96, 100, 99, 97	
V50	2005	AFM	AFM	●	●	●	●	●	○		
V50	2005	AEM	AEM	●	●	●	●	●	●		
V50	2005	AUD	AUD	●	●	●	●	○	○		
V50	2005	CEM	CEM	●	●	●	●	●	●	110, 27, 29, 31	
V50	2005	DIM	DIM	●	●	●	●	●	●	103, 35, 37, 104	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V50	2005	ICM	ICM	●	●	●	●	●	●		
V50	2005	IAM	IAM	●	●	●	●	●	●		
V50	2005	KVM	KVM	●	●	●	●	●	●		
V50	2005	MPM	MPM	●	●	●	●	●	●		
V50	2005	MMM	MMM	●	●	●	●	●	●		
V50	2005	PAM	PAM	●	●	●	●	●	○		
V50	2005	PHM	PHM	●	●	●	●	●	○		
V50	2005	SWM	SWM	●	●	●	○	●	○		
V50	2005	SUB	SUB	●	●	●	●	○	○		
V50	2005	TMC	TMC	●	●	●	●	●	○		
V50	2005	TCM	AW50/51AWD	●	●	●	●	●	●		
V50	2005	TCM	AW55-50/51SN	●	●	●	●	●	●		
V50	2005	ABS/BCM	ABS/BCM	●	●	●	●	●	●		
V50	2005	EPS	EPS	●	●	●	○	●	○		
V50	2005	CCM	CCM	●	●	●	●	●	○	44	
V50	2005	DDM	DDM	●	●	●	○	●	●	46	
V50	2005	PDM	PDM	●	●	●	○	●	●	46	
V50	2005	PSM	PSM	●	●	●	●	●	●	109	
V50	2005	SRS	SRS	●	●	●	●	●	○		
V50	2005	TRM	TRM	●	●	●	●	●	○		
V50	2005	DEM	DEM	●	●	●	●	●	○		
V50	2005	GPS	GPS	●	●	●	●	●	○		
V50	2004	Petrol	B5244S4	●	●	●	●	●	●	88, 6, 95	
V50	2004	Petrol	B5244S5	●	●	●	●	●	●	88, 6, 95	
V50	2004	Petrol	B5254T3	●	●	●	●	●	●	1, 2, 3, 4, 5, 6	
V50	2004	Diesel	D4204T	●	●	●	●	●	●	96, 100, 97	
V50	2004	Diesel	D4204T2	●	●	●	●	●	●	96, 100, 97	
V50	2004	AFM	AFM	●	●	●	●	●	○		
V50	2004	AEM	AEM	●	●	●	●	●	●		
V50	2004	AUD	AUD	●	●	●	●	○	○		
V50	2004	CEM	CEM	●	●	●	○	●	●	110, 27	
V50	2004	DIM	DIM	●	●	●	●	●	●	103, 35, 37, 104	
V50	2004	ICM	ICM	●	●	●	●	●	●		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V50	2004	MPM	MPM	●	●	●	●	●	●		
V50	2004	MMM	MMM	●	●	●	●	●	●		
V50	2004	PHM	PHM	●	●	●	●	●	○		
V50	2004	SWM	SWM	●	●	●	○	●	○		
V50	2004	SUB	SUB	●	●	●	●	○	○		
V50	2004	TMC	TMC	●	●	●	●	●	○		
V50	2004	TCM	AW55-50/51SN	●	●	●	●	●	●		
V50	2004	ABS/BCM	ABS/BCM	●	●	●	●	●	●		
V50	2004	CCM	CCM	●	●	●	●	●	○	44	
V50	2004	DDM	DDM	●	●	●	○	●	●	46, 109	
V50	2004	PDM	PDM	●	●	●	○	●	●	46	
V50	2004	PSM	PSM	●	●	●	●	●	●	109	
V50	2004	SRS	SRS	●	●	●	●	●	○		
V50	2004	TRM	TRM	●	●	●	●	●	○		
V50	2004	EPS	EPS	●	●	●	○	●	○		
V50	2004	GPS	GPS	●	●	●	●	●	○		
V50	2009	TCM	MPS6	●	●	●	●	●	○		
V50	2009	DEM	M66 AWD	●	●	●	●	●	○		
V50	2009	ECM	D5244T9	●	●	●	●	●	●		
V50	2009	ECM	D5244T8	●	●	●	●	●	●		
V50	2009	ECM	D5244T13	●	●	●	●	●	●		
V50	2009	ECM	D4204T	●	●	●	●	●	●	71, 9, 141, 69	
V50	2009	ADM	D4204T	●	●	●	●	●	○		
V50	2009	ECM	D4204T	●	●	●	●	●	●	71, 9, 141, 69	
V50	2009	ADM	D4164T	●	●	●	●	●	○		
V50	2009	ECM	D4164T	●	●	●	●	●	●	69, 141	
V50	2009	ECM	B5254T7	●	●	●	●	●	●	74	
V50	2009	ECM	B5244S7	●	●	●	●	●	●	9	
V50	2009	ECM	B5244S5	●	●	●	●	●	●	9	
V50	2009	ECM	B5244S4	●	●	●	●	●	●	9	
V50	2009	ECM	B4204S3	●	●	●	●	●	●	9	
V50	2009	ECM	B4184S8	●	●	●	●	●	●	9	
V50	2009	ECM	B4184S11	●	●	●	●	●	●	9	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V50	2009	ECM	B4164S3	●	●	●	●	●	●	9	
V50	2009	TCM	AW55-50/51SN	●	●	●	●	●	●	83, 111, 1, 140, 4, 100, 101	
V50	2009	DEM	AW50/51 AWD	●	●	●	●	●	○		
V50	2009	TCM	AW50/51 AWD	●	●	●	●	●	●	83, 111, 1, 140, 4, 100, 101	
V50	2009	PSM		●	●	●	●	●	●	145	
V50	2009	AEM		●	●	●	●	●	●	146	
V50	2009	KVM		●	●	●	●	●	●	147	
V50	2009	RDAR		●	●	●	●	●	○		
V50	2009	PHM		●	●	●	●	●	○		
V50	2009	CPM		●	●	●	●	●	●		
V50	2009	AUD		●	●	●	●	○	○		
V50	2009	BPM		●	●	●	●	●	○		
V50	2009	PAM		●	●	●	●	●	○		
V50	2009	SRS		●	●	●	●	●	○	95	
V50	2009	DDM		●	●	●	●	●	●	149, 150	
V50	2009	PDM		●	●	●	●	●	●	149, 150	
V50	2009	AUU		●	●	●	●	●	○		
V50	2009	HCM		●	●	●	●	●	○	23	
V50	2009	BCM		●	●	●	●	●	○	146, 111	
V50	2009	CCM		●	●	●	●	○	○	30, 113, 152, 32, 153	
V50	2009	SWM		●	●	●	●	●	○		
V50	2009	TRM		●	●	●	●	●	○		
V50	2009	EPS		●	●	●	●	●	○		
V50	2009	IAM		●	●	●	●	●	●		
V50	2009	CEM		●	●	●	●	●	●	154, 156, 94, 158, 159, 160, 162, 95	
V50	2009	DIM		●	●	●	●	●	●	48, 161, 118, 46, 165, 51	
V50	2009	ICM		●	●	●	●	●	●	166, 167, 168	
V50	2009	MMM		●	●	●	●	○	○		
V50	2008	TCM	MPS6	●	●	●	●	●	○		
V50	2008	DEM	M66 AWD	●	●	●	●	●	○		
V50	2008	ECM	D5244T9	●	●	●	●	●	●		
V50	2008	ECM	D5244T8	●	●	●	●	●	●		
V50	2008	ECM	D5244T13	●	●	●	●	●	●		

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V50	2008	ECM	D4204T	●	●	●	●	●	●	71, 9, 141, 69	
V50	2008	ADM	D4204T	●	●	●	●	●	○		
V50	2008	ECM	D4204T	●	●	●	●	●	●	71, 9, 141, 69	
V50	2008	ADM	D4164T	●	●	●	●	●	○		
V50	2008	ECM	D4164T	●	●	●	●	●	●	69, 141	
V50	2008	ECM	B5254T7	●	●	●	●	●	●	74	
V50	2008	ECM	B5244S7	●	●	●	●	●	●	9	
V50	2008	ECM	B5244S5	●	●	●	●	●	●	9	
V50	2008	ECM	B5244S4	●	●	●	●	●	●	9	
V50	2008	ECM	B4204S3	●	●	●	●	●	●	9	
V50	2008	ECM	B4184S8	●	●	●	●	●	●	9	
V50	2008	ECM	B4184S11	●	●	●	●	●	●	9	
V50	2008	ECM	B4164S3	●	●	●	●	●	●	9	
V50	2008	TCM	AW55-50/51SN	●	●	●	●	●	●	83, 111, 1, 140, 4, 100, 101	
V50	2008	DEM	AW50/51 AWD	●	●	●	●	●	○		
V50	2008	TCM	AW50/51 AWD	●	●	●	●	●	●	83, 111, 1, 140, 4, 100, 101	
V50	2008	BCM		●	●	●	●	●	○	146, 111	
V50	2008	PSM		●	●	●	●	●	●	145	
V50	2008	AEM		●	●	●	●	●	●	146	
V50	2008	KVM		●	●	●	●	●	●	147	
V50	2008	RDAR		●	●	●	●	●	○		
V50	2008	CPM		●	●	●	●	●	●		
V50	2008	AUD		●	●	●	●	○	○		
V50	2008	PAM		●	●	●	●	●	○		
V50	2008	SRS		●	●	●	●	●	○	95	
V50	2008	DDM		●	●	●	●	●	●	149, 150	
V50	2008	PDM		●	●	●	●	●	●	149, 150	
V50	2008	AUU		●	●	●	●	●	○		
V50	2008	HCM		●	●	●	●	●	○	23	
V50	2008	CCM		●	●	●	●	●	○	30, 113, 152, 32, 153	
V50	2008	PHM		●	●	●	●	●	○		
V50	2008	CEM		●	●	●	●	●	●	154, 156, 94, 158, 159, 160, 162, 95	
V50	2008	DIM		●	●	●	●	●	●	48, 161, 118, 46, 165, 51	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V50	2008	SWM		●	●	●	●	●	○		
V50	2008	TRM		●	●	●	●	●	○		
V50	2008	EPS		●	●	●	●	●	○		
V50	2008	IAM		●	●	●	●	●	●		
V50	2008	ICM		●	●	●	●	●	●	166, 167, 168	
V50	2008	MMM		●	●	●	●	○	○		
V50	2007	DEM	M66 AWD	●	●	●	●	●	○		
V50	2007	ECM	D5244T9	●	●	●	●	●	●		
V50	2007	ECM	D5244T8	●	●	●	●	●	●		
V50	2007	ADM	D4204T	●	●	●	●	●	○		
V50	2007	ECM	D4204T	●	●	●	●	●	●	71, 9, 141, 69	
V50	2007	ADM	D4164T	●	●	●	●	●	○		
V50	2007	ECM	D4164T	●	●	●	●	●	●	69, 141, 169	
V50	2007	ECM	B5254T3	●	●	●	●	●	●	74	
V50	2007	ECM	B5244S7	●	●	●	●	●	●	9	
V50	2007	ECM	B5244S5	●	●	●	●	●	●	9	
V50	2007	ECM	B5244S4	●	●	●	●	●	●	9	
V50	2007	ECM	B4204S3	●	●	●	●	●	●	9	
V50	2007	ECM	B4184S8	●	●	●	●	●	●	9	
V50	2007	ECM	B4184S11	●	●	●	●	●	●	9	
V50	2007	ECM	B4164S3	●	●	●	●	●	●	9	
V50	2007	TCM	AW55-50/51SN	●	●	●	●	●	●	83, 111, 1, 140, 4, 100, 101	
V50	2007	DEM	AW50/51 AWD	●	●	●	●	●	○		
V50	2007	TCM	AW50/51 AWD	●	●	●	●	●	●	83, 111, 1, 140, 4, 100, 101	
V50	2007	GPS		●	●	●	●	●	○		
V50	2007	BCM		●	●	●	●	●	○	146, 111	
V50	2007	PSM		●	●	●	●	●	●	145	
V50	2007	TMC		●	●	●	●	●	○		
V50	2007	SWM		●	●	●	●	●	○		
V50	2007	KVM		●	●	●	●	●	●	147	
V50	2007	AEM		●	●	●	●	●	●	146	
V50	2007	PHM		●	●	●	●	●	○		
V50	2007	TRM		●	●	●	●	●	○		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V50	2007	CEM		●	●	●	●	●	●	154, 156, 94, 158, 159, 160, 162, 95	
V50	2007	MMM		●	●	●	●	○	○		
V50	2007	RDAR		●	●	●	●	●	○		
V50	2007	CPM		●	●	●	●	●	●		
V50	2007	IAM		●	●	●	●	●	●		
V50	2007	AUD		●	●	●	●	○	○		
V50	2007	PAM		●	●	●	●	●	○		
V50	2007	DDM		●	●	●	●	●	●	149, 150	
V50	2007	PDM		●	●	●	●	●	●	149, 150	
V50	2007	SRS		●	●	●	●	●	○	95	
V50	2007	CCM		●	●	●	●	●	○	30, 113, 152, 32, 153	
V50	2007	DIM		●	●	●	●	●	●	48, 161, 118, 46, 165	
V50	2007	ICM		●	●	●	●	●	●	166, 167	
V50	2007	EPS		●	●	●	●	●	○		
V50	2006	DEM	M66 AWD	●	●	●	●	●	○		
V50	2006	ECM	D5244T8	●	●	●	●	●	●		
V50	2006	ADM	D4204T2	●	●	●	●	●	○		
V50	2006	ECM	D4204T2	●	●	●	●	●	●	71, 9, 141, 69	
V50	2006	ADM	D4204T	●	●	●	●	●	○		
V50	2006	ECM	D4204T	●	●	●	●	●	●	71, 9, 141, 69	
V50	2006	ADM	D4164T	●	●	●	●	●	○		
V50	2006	ECM	D4164T	●	●	●	●	●	●	69, 141, 169	
V50	2006	ECM	B5254T3	●	●	●	●	●	●	74	
V50	2006	ECM	B5244S7	●	●	●	●	●	●	9	
V50	2006	ECM	B5244S5	●	●	●	●	●	●	9	
V50	2006	ECM	B5244S4	●	●	●	●	●	●	9	
V50	2006	ECM	B4184S8	●	●	●	●	●	●	9	
V50	2006	ECM	B4184S11	●	●	●	●	●	●	9	
V50	2006	ECM	B4164S3	●	●	●	●	●	●	9	
V50	2006	TCM	AW55-50/51SN	●	●	●	●	●	●	170, 111, 82, 140, 4, 100, 101	
V50	2006	DEM	AW50/51 AWD	●	●	●	●	●	○		
V50	2006	TCM	AW50/51 AWD	●	●	●	●	●	●	170, 111, 82, 140, 4, 100, 101	
V50	2006	DIM		●	●	●	●	●	●	48, 161, 46, 165	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V50	2006	GPS		●	●	●	●	●	○		
V50	2006	DDM		●	●	●	●	●	●	149, 150	
V50	2006	PDM		●	●	●	●	●	●	149, 150	
V50	2006	BCM		●	●	●	●	●	○	146, 111	
V50	2006	PSM		●	●	●	●	●	●	145	
V50	2006	TMC		●	●	●	●	●	○		
V50	2006	SWM		●	●	●	●	●	○		
V50	2006	KVM		●	●	●	●	●	●	147	
V50	2006	AEM		●	●	●	●	●	●	146	
V50	2006	ICM		●	●	●	●	●	●	166	
V50	2006	IAM		●	●	●	●	●	●		
V50	2006	PHM		●	●	●	●	●	○		
V50	2006	TRM		●	●	●	●	●	○		
V50	2006	PAM		●	●	●	●	●	○		
V50	2006	CEM		●	●	●	●	●	●	154, 156, 94, 158, 159, 160, 162, 95	
V50	2006	MMM		●	●	●	●	○	○		
V50	2006	CPM		●	●	●	●	●	●		
V50	2006	CCM		●	●	●	●	●	○	30, 113, 152, 32, 153	
V50	2006	AUD		●	●	●	●	○	○		
V50	2006	SRS		●	●	●	●	●	○	95	
V50	2006	EPS		●	●	●	●	●	○		
V70 (00-08)	2008	DEM	TF-80SC AWD	●	●	●	●	●	○		
V70 (00-08)	2008	TCM	TF-80SC	●	●	●	●	●	●	81, 82, 83, 84, 85	
V70 (00-08)	2008	DEM	M66 AWD	●	●	●	●	●	○		
V70 (00-08)	2008	ECM	D5244T7	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
V70 (00-08)	2008	ECM	D5244T5	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
V70 (00-08)	2008	ECM	B5254T2	●	●	●	●	●	●	74	
V70 (00-08)	2008	ETM	B5244SG	●	○	○	○	●	○		
V70 (00-08)	2008	ECM	B5244SG	●	●	●	●	●	●		
V70 (00-08)	2008	ECM	B5244S2	●	●	●	●	●	●		
V70 (00-08)	2008	ECM	B5244S	●	●	●	●	●	●		
V70 (00-08)	2008	DEM	AW55-50/51SN	●	●	●	●	●	○		
V70 (00-08)	2008	TCM	AW55-50/51SN	●	●	●	●	●	●	100, 101, 102, 103, 125	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 (00-08)	2008	DEM	AW50/51 AWD	●	●	●	●	●	○		
V70 (00-08)	2008	TCM	AW50/51 AWD	●	●	●	●	●	●	100, 101, 102, 103, 125	
V70 (00-08)	2008	PHM		●	●	●	●	●	○		
V70 (00-08)	2008	AUM		●	●	●	●	●	○		
V70 (00-08)	2008	BCM		●	●	●	●	●	●	86, 87	
V70 (00-08)	2008	SRS		●	●	●	●	●	○	95	
V70 (00-08)	2008	PSM		●	●	●	●	●	●	107	
V70 (00-08)	2008	DDM		●	●	●	●	●	●	107, 108	
V70 (00-08)	2008	PDM		●	●	●	●	●	●	108	
V70 (00-08)	2008	SUM		●	●	●	●	●	●		
V70 (00-08)	2008	AEM		●	●	●	●	●	●		
V70 (00-08)	2008	REM		●	●	●	●	●	●		
V70 (00-08)	2008	CPM		●	○	○	○	●	○	111, 112	
V70 (00-08)	2008	CEM		●	●	●	●	●	●	91, 92, 94, 95, 96	
V70 (00-08)	2008	HCM		●	●	●	●	●	○		
V70 (00-08)	2008	RTI		●	●	●	●	○	○		
V70 (00-08)	2008	SAS		●	●	●	●	●	○		
V70 (00-08)	2008	AUU		●	●	●	●	●	○		
V70 (00-08)	2008	CCM		●	●	●	●	●	○	30, 113, 114, 29, 32, 115	
V70 (00-08)	2008	DIM		●	●	●	●	●	●	116, 117, 28, 46, 47, 118	
V70 (00-08)	2008	UEM		●	●	●	●	●	●		
V70 (00-08)	2007	DEM	TF-80SC AWD	●	●	●	●	●	○		
V70 (00-08)	2007	DEM	M66 AWD	●	●	●	●	●	○		
V70 (00-08)	2007	DEM	M58	●	●	●	●	●	○		
V70 (00-08)	2007	ECM	D5244T7	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
V70 (00-08)	2007	TCM	TF-80SC	●	●	●	●	●	●	81, 82, 83, 84, 85	
V70 (00-08)	2007	ECM	D5244T5	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
V70 (00-08)	2007	TCM	TF-80SC AWD	●	●	●	●	●	●	81, 82, 83, 84, 85	
V70 (00-08)	2007	TCM	TF-80SC	●	●	●	●	●	●	81, 82, 83, 84, 85	
V70 (00-08)	2007	ECM	D5244T4	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
V70 (00-08)	2007	TCM	TF-80SC AWD	●	●	●	●	●	●	81, 82, 83, 84, 85	
V70 (00-08)	2007	ECM	B5254T4	●	●	●	●	●	●	74	
V70 (00-08)	2007	ECM	B5254T2	●	●	●	●	●	●	74	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 (00-08)	2007	ECM	B5244T5	●	●	●	●	●	●	74	
V70 (00-08)	2007	ETM	B5244SG	●	○	○	○	●	○		
V70 (00-08)	2007	ECM	B5244SG	●	●	●	●	●	●		
V70 (00-08)	2007	ECM	B5244S2	●	●	●	●	●	●		
V70 (00-08)	2007	ECM	B5244S	●	●	●	●	●	●		
V70 (00-08)	2007	ECM	B5204T5	●	●	●	●	●	●	74	
V70 (00-08)	2007	TCM	AW55-50/51SN	●	●	●	●	●	●	100, 101, 102, 103, 125	
V70 (00-08)	2007	TCM	AW50/51 AWD	●	●	●	●	●	●	100, 101, 102, 103, 125	
V70 (00-08)	2007	DEM	AW50/51 AWD	●	●	●	●	●	○		
V70 (00-08)	2007	PHM		●	●	●	●	●	○		
V70 (00-08)	2007	AUM		●	●	●	●	●	○		
V70 (00-08)	2007	BCM		●	●	●	●	●	●	86, 87	
V70 (00-08)	2007	SRS		●	●	●	●	●	○	95	
V70 (00-08)	2007	PSM		●	●	●	●	●	●	107	
V70 (00-08)	2007	DDM		●	●	●	●	●	●	107, 108	
V70 (00-08)	2007	PDM		●	●	●	●	●	●	108	
V70 (00-08)	2007	SUM		●	●	●	●	●	●		
V70 (00-08)	2007	AEM		●	●	●	●	●	●		
V70 (00-08)	2007	REM		●	●	●	●	●	●		
V70 (00-08)	2007	CPM		●	○	○	○	●	○	111, 112	
V70 (00-08)	2007	CEM		●	●	●	●	●	●	91, 92, 94, 95, 96	
V70 (00-08)	2007	HCM		●	●	●	●	●	○		
V70 (00-08)	2007	CCM		●	●	●	●	●	○	30, 113, 114, 29, 32, 115	
V70 (00-08)	2007	RTI		●	●	●	●	○	○		
V70 (00-08)	2007	SAS		●	●	●	●	●	○		
V70 (00-08)	2007	DIM		●	●	●	●	●	●	116, 117, 28, 46, 47, 118	
V70 (00-08)	2007	UEM		●	●	●	●	●	●		
V70 (00-08)	2006	DEM	TF-80SC AWD	●	●	●	●	●	○		
V70 (00-08)	2006	TCM	TF-80SC	●	●	●	●	●	●	81, 82, 83, 84, 85	
V70 (00-08)	2006	DEM	M66 AWD	●	●	●	●	●	○		
V70 (00-08)	2006	DEM	M58	●	●	●	●	●	○		
V70 (00-08)	2006	ECM	D5244T7	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
V70 (00-08)	2006	ECM	D5244T6	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 (00-08)	2006	ECM	D5244T5	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
V70 (00-08)	2006	TCM	TF-80SC AWD	●	●	●	●	●	●	81, 82, 83, 84, 85	
V70 (00-08)	2006	ECM	D5244T4	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
V70 (00-08)	2006	ECM	D5244T2	●	●	●	●	●	●		
V70 (00-08)	2006	ECM	D5244T	●	●	●	●	●	●		
V70 (00-08)	2006	TCM	TF-80SC AWD	●	●	●	●	●	●	81, 82, 83, 84, 85	
V70 (00-08)	2006	ECM	B5254T4	●	●	●	●	●	●	74	
V70 (00-08)	2006	ECM	B5254T2	●	●	●	●	●	●	74	
V70 (00-08)	2006	ECM	B5244T5	●	●	●	●	●	●	74	
V70 (00-08)	2006	ETM	B5244SG	●	○	○	○	●	○		
V70 (00-08)	2006	ECM	B5244SG	●	●	●	●	●	●		
V70 (00-08)	2006	ECM	B5244S6	●	●	●	●	●	●		
V70 (00-08)	2006	ECM	B5244S2	●	●	●	●	●	●		
V70 (00-08)	2006	ECM	B5244S	●	●	●	●	●	●	74	
V70 (00-08)	2006	ECM	B5204T5	●	●	●	●	●	●	74	
V70 (00-08)	2006	TCM	AW55-50/51SN	●	●	●	●	●	●	100, 101, 102, 103, 125	
V70 (00-08)	2006	TCM	AW50/51 AWD	●	●	●	●	●	●	100, 101, 102, 103, 125	
V70 (00-08)	2006	DEM	AW50/51 AWD	●	●	●	●	●	○		
V70 (00-08)	2006	REM		●	●	●	●	●	●		
V70 (00-08)	2006	AUM		●	●	●	●	●	○		
V70 (00-08)	2006	BCM		●	●	●	●	●	●	86, 87	
V70 (00-08)	2006	SRS		●	●	●	●	●	○	95	
V70 (00-08)	2006	PSM		●	●	●	●	●	●	107	
V70 (00-08)	2006	DDM		●	●	●	●	●	●	107, 108	
V70 (00-08)	2006	PDM		●	●	●	●	●	●	108	
V70 (00-08)	2006	SUM		●	●	●	●	●	●		
V70 (00-08)	2006	AEM		●	●	●	●	●	●		
V70 (00-08)	2006	PHM		●	●	●	●	●	○		
V70 (00-08)	2006	DIM		●	●	●	●	●	●	116, 117, 28, 46, 47	
V70 (00-08)	2006	CPM		●	○	○	○	●	○	111, 112	
V70 (00-08)	2006	UEM		●	●	●	●	●	●	119, 120, 128, 122, 123, 124	
V70 (00-08)	2006	CEM		●	●	●	●	●	●	91, 92, 94, 95	
V70 (00-08)	2006	CCM		●	●	●	●	●	○	30, 113, 114, 29, 32, 115	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 (00-08)	2006	RTI		●	●	●	●	○	○		
V70 (00-08)	2006	SAS		●	●	●	●	●	○		
V70 (08-)	2009	DEM	TF-80SC AWD	●	●	●	●	●	●		
V70 (08-)	2009	DEM	M66 AWD	●	●	●	●	●	●		
V70 (08-)	2009	TCM	TF-80SC	●	●	●	●	●	●	1, 2, 3, 4, 5	
V70 (08-)	2009	ECM	D5244T5	●	●	●	●	●	●	58, 59, 60, 61, 62, 63, 90, 64	
V70 (08-)	2009	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 2, 3, 4, 5	
V70 (08-)	2009	TCM	TF-80SC	●	●	●	●	●	●	1, 2, 3, 4, 5	
V70 (08-)	2009	ECM	D5244T4	●	●	●	●	●	●	58, 59, 60, 61, 62, 63, 90, 64	
V70 (08-)	2009	ECM	D4204T	●	●	●	●	●	●	69, 70, 71	
V70 (08-)	2009	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 2, 3, 4, 5	
V70 (08-)	2009	TCM	TF-80SC	●	●	●	●	●	●	1, 2, 3, 4, 5	
V70 (08-)	2009	ECM	B6324S	●	●	●	●	●	●	9	
V70 (08-)	2009	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 2, 3, 4, 5	
V70 (08-)	2009	ECM	B6304T2	●	●	●	●	●	●	9	
V70 (08-)	2009	TCM	TF-80SC	●	●	●	●	●	●	1, 2, 3, 4, 5	
V70 (08-)	2009	ECM	B5254T8	●	●	●	●	●	●	74, 79	
V70 (08-)	2009	TCM	TF-80SC	●	●	●	●	●	●	1, 2, 3, 4, 5	
V70 (08-)	2009	ECM	B5254T6	●	●	●	●	●	●	74, 79	
V70 (08-)	2009	ECM	B4204S4	●	●	●	●	●	●	79	
V70 (08-)	2009	ECM	B4204S3	●	●	●	●	●	●	79	
V70 (08-)	2009	POT		●	●	●	●	○	○		
V70 (08-)	2009	SUM		●	●	●	●	●	●	10	
V70 (08-)	2009	IAM		●	●	●	●	○	○		
V70 (08-)	2009	PSM		●	●	●	●	●	●		
V70 (08-)	2009	HLDF		●	●	●	●	●	○		
V70 (08-)	2009	AUU		●	●	●	●	●	○		
V70 (08-)	2009	DDM		●	●	●	●	●	●	12, 13	
V70 (08-)	2009	PDM		●	●	●	●	●	●	12, 13	
V70 (08-)	2009	PAM		●	●	●	●	●	○	14	
V70 (08-)	2009	KVM		●	●	●	●	●	○	16, 17	
V70 (08-)	2009	AUD		●	●	●	●	○	○		
V70 (08-)	2009	CPM		●	●	●	●	●	●		

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 (08-)	2009	SUB		●	●	●	●	○	○		
V70 (08-)	2009	HCM		●	●	●	●	●	○	23	
V70 (08-)	2009	SRS		●	●	●	●	●	○	25, 26, 27	
V70 (08-)	2009	BCM		●	●	●	●	●	●	10	
V70 (08-)	2009	SAS		●	●	●	●	●	○		
V70 (08-)	2009	CCM		●	●	●	●	●	●	28, 29, 30, 31, 32	
V70 (08-)	2009	CEM		●	●	●	●	●	●	35, 39	
V70 (08-)	2009	TRM		●	●	●	●	●	○		
V70 (08-)	2009	PBM		●	●	●	●	●	○	43	
V70 (08-)	2009	FSM		●	●	●	●	●	○		
V70 (08-)	2009	DIM		●	●	●	●	●	○	47, 48, 49, 50, 51, 52	
V70 (08-)	2009	PAC		●	●	●	●	●	○		
V70 (08-)	2009	RDAR		●	●	●	●	○	○		
V70 (08-)	2009	MMM		●	●	●	●	○	○		
V70 (08-)	2009	ICM		●	●	●	●	●	●		
V70 (08-)	2009	BPM		●	●	●	●	●	○		
V70 (08-)	2009	PHM		●	●	●	●	●	○		
V70 (08-)	2008	DEM	TF-80SC AWD	●	●	●	●	●	●		
V70 (08-)	2008	DEM	M66 AWD	●	●	●	●	●	●		
V70 (08-)	2008	TCM	TF-80SC	●	●	●	●	●	●	1, 2, 3, 4, 5	
V70 (08-)	2008	ECM	D5244T5	●	●	●	●	●	●	58, 59, 60, 61, 62, 63, 90, 64	
V70 (08-)	2008	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 2, 3, 4, 5	
V70 (08-)	2008	TCM	TF-80SC	●	●	●	●	●	●	1, 2, 3, 4, 5	
V70 (08-)	2008	ECM	D5244T4	●	●	●	●	●	●	58, 59, 60, 61, 62, 63, 90, 64	
V70 (08-)	2008	ECM	D4204T	●	●	●	●	●	●	69, 70, 71	
V70 (08-)	2008	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 2, 3, 4, 5	
V70 (08-)	2008	TCM	TF-80SC	●	●	●	●	●	●	1, 2, 3, 4, 5	
V70 (08-)	2008	ECM	B6324S	●	●	●	●	●	●	9	
V70 (08-)	2008	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 2, 3, 4, 5	
V70 (08-)	2008	ECM	B6304T2	●	●	●	●	●	●	9	
V70 (08-)	2008	TCM	TF-80SC	●	●	●	●	●	●	1, 2, 3, 4, 5	
V70 (08-)	2008	ECM	B5254T6	●	●	●	●	●	●	74, 79	
V70 (08-)	2008	ECM	B4204S4	●	●	●	●	●	●	79	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 (08-)	2008	ECM	B4204S3	●	●	●	●	●	●	79	
V70 (08-)	2008	POT		●	●	●	●	○	○		
V70 (08-)	2008	SUM		●	●	●	●	●	●	10	
V70 (08-)	2008	IAM		●	●	●	●	○	○		
V70 (08-)	2008	PSM		●	●	●	●	●	●		
V70 (08-)	2008	RDAR		●	●	●	●	○	○		
V70 (08-)	2008	HLDF		●	●	●	●	●	○		
V70 (08-)	2008	AUU		●	●	●	●	●	○		
V70 (08-)	2008	DDM		●	●	●	●	●	●	12, 13	
V70 (08-)	2008	PDM		●	●	●	●	●	●	12, 13	
V70 (08-)	2008	PAM		●	●	●	●	●	○	14	
V70 (08-)	2008	KVM		●	●	●	●	●	○	16, 17	
V70 (08-)	2008	AUD		●	●	●	●	○	○		
V70 (08-)	2008	PHM		●	●	●	●	●	○		
V70 (08-)	2008	CPM		●	●	●	●	●	●		
V70 (08-)	2008	SUB		●	●	●	●	○	○		
V70 (08-)	2008	HCM		●	●	●	●	●	○	23	
V70 (08-)	2008	SRS		●	●	●	●	●	○	25, 26, 27	
V70 (08-)	2008	BCM		●	●	●	●	●	●	80	
V70 (08-)	2008	SAS		●	●	●	●	●	○		
V70 (08-)	2008	CEM		●	●	●	●	●	●	35, 39	
V70 (08-)	2008	DIM		●	●	●	●	●	○	47, 48, 49, 50, 51, 52	
V70 (08-)	2008	CCM		●	●	●	●	●	●	28, 29, 30, 31, 32	
V70 (08-)	2008	TRM		●	●	●	●	●	○		
V70 (08-)	2008	PBM		●	●	●	●	●	○	43	
V70 (08-)	2008	BPM		●	●	●	●	●	○		
V70 (08-)	2008	MMM		●	●	●	●	○	○		
V70 (08-)	2008	FSM		●	●	●	●	●	○		
V70 (08-)	2008	ICM		●	●	●	●	●	●		
V70 (08-)	2008	PAC		●	●	●	●	●	○		
V70 XC(01-)) /XC70(-07)	2007	DEM	TF-80SC AWD	●	●	●	●	●	○		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 XC(01-)/XC70(-07)	2007	DEM	M66 AWD	●	●	●	●	●	○		
V70 XC(01-)/XC70(-07)	2007	DEM	M58	●	●	●	●	●	○		
V70 XC(01-)/XC70(-07)	2007	TCM	TF-80SC AWD	●	●	●	●	●	●	81, 82, 83, 84, 85	
V70 XC(01-)/XC70(-07)	2007	ECM	D5244T4	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
V70 XC(01-)/XC70(-07)	2007	ECM	B5254T2	●	●	●	●	●	●	74	
V70 XC(01-)/XC70(-07)	2007	DEM	AW50/51 AWD	●	●	●	●	●	○		
V70 XC(01-)/XC70(-07)	2007	TCM	AW50/51 AWD	●	●	●	●	●	●	100, 101, 102, 103, 125	
V70 XC(01-)/XC70(-07)	2007	PHM		●	●	●	●	●	○		
V70 XC(01-)/XC70(-07)	2007	AUM		●	●	●	●	●	○		
V70 XC(01-)/XC70(-07)	2007	BCM		●	●	●	●	●	●	86, 87	
V70 XC(01-)/XC70(-07)	2007	SRS		●	●	●	●	●	○	95	
V70 XC(01-)/XC70(-07)	2007	PSM		●	●	●	●	●	●	107	
V70 XC(01-)/XC70(-07)	2007	DDM		●	●	●	●	●	●	107, 108	
V70 XC(01-)/XC70(-07)	2007	PDM		●	●	●	●	●	●	108	
V70 XC(01-)/XC70(-07)	2007	SUM		●	●	●	●	●	●		
V70 XC(01-)/XC70(-07)	2007	AEM		●	●	●	●	●	●		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 XC(01-)/XC70(-07)	2007	REM		●	●	●	●	●	●		
V70 XC(01-)/XC70(-07)	2007	CPM		●	○	○	○	●	○	111, 112	
V70 XC(01-)/XC70(-07)	2007	CEM		●	●	●	●	●	●	91, 92, 94, 95, 96	
V70 XC(01-)/XC70(-07)	2007	HCM		●	●	●	●	●	○		
V70 XC(01-)/XC70(-07)	2007	CCM		●	●	●	●	●	○	30, 113, 114, 29, 32, 115	
V70 XC(01-)/XC70(-07)	2007	RTI		●	●	●	●	○	○		
V70 XC(01-)/XC70(-07)	2007	SAS		●	●	●	●	●	○		
V70 XC(01-)/XC70(-07)	2007	DIM		●	●	●	●	●	●	116, 117, 28, 46, 47, 118	
V70 XC(01-)/XC70(-07)	2007	UEM		●	●	●	●	●	●		
V70 XC(01-)/XC70(-07)	2006	TCM	TF-80SC AWD	●	●	●	●	●	●	81, 82, 83, 84, 85	
V70 XC(01-)/XC70(-07)	2006	DEM	TF-80SC AWD	●	●	●	●	●	○		
V70 XC(01-)/XC70(-07)	2006	DEM	M66 AWD	●	●	●	●	●	○		
V70 XC(01-)/XC70(-07)	2006	DEM	M58	●	●	●	●	●	○		
V70 XC(01-)/XC70(-07)	2006	ECM	D5244T4	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
V70 XC(01-)/XC70(-07)	2006	ECM	D5244T	●	●	●	●	●	●		
V70 XC(01-)/XC70(-07)	2006	ECM	B5254T2	●	●	●	●	●	●	74	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 XC(01-)/XC70(-07)	2006	ECM	B5244T4	●	●	●	●	●	●	74	
V70 XC(01-)/XC70(-07)	2006	TCM	AW55-50/51SN	●	●	●	●	●	●	100, 101, 102, 103, 125	
V70 XC(01-)/XC70(-07)	2006	TCM	AW50/51 AWD	●	●	●	●	●	●	100, 101, 102, 103, 125	
V70 XC(01-)/XC70(-07)	2006	DEM	AW50/51 AWD	●	●	●	●	●	○		
V70 XC(01-)/XC70(-07)	2006	REM		●	●	●	●	●	●		
V70 XC(01-)/XC70(-07)	2006	AUM		●	●	●	●	●	○		
V70 XC(01-)/XC70(-07)	2006	BCM		●	●	●	●	●	●	86, 87	
V70 XC(01-)/XC70(-07)	2006	SRS		●	●	●	●	●	○	95	
V70 XC(01-)/XC70(-07)	2006	PSM		●	●	●	●	●	●	107	
V70 XC(01-)/XC70(-07)	2006	DDM		●	●	●	●	●	●	107, 108	
V70 XC(01-)/XC70(-07)	2006	PDM		●	●	●	●	●	●	108	
V70 XC(01-)/XC70(-07)	2006	SUM		●	●	●	●	●	●		
V70 XC(01-)/XC70(-07)	2006	AEM		●	●	●	●	●	●		
V70 XC(01-)/XC70(-07)	2006	PHM		●	●	●	●	●	○		
V70 XC(01-)/XC70(-07)	2006	DIM		●	●	●	●	●	●	116, 117, 28, 46, 47	
V70 XC(01-)/XC70(-07)	2006	CPM		●	○	○	○	●	○	111, 112	

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 XC(01-)/XC70(-07)	2006	UEM		●	●	●	●	●	●	119, 120, 128, 122, 123, 124	
V70 XC(01-)/XC70(-07)	2006	CEM		●	●	●	●	●	●	91, 92, 94, 95	
V70 XC(01-)/XC70(-07)	2006	CCM		●	●	●	●	●	○	30, 113, 114, 29, 32, 115	
V70 XC(01-)/XC70(-07)	2006	RTI		●	●	●	●	○	○		
V70 XC(01-)/XC70(-07)	2006	SAS		●	●	●	●	●	○		
V70 XC(-00)	2000	Petrol	B5244T	●	●	●	●	●	●	1, 50	Elec. Ident.
V70 XC(-00)	2000	Combined instrument	Combined instrument	●	●	●	○	●	●	72, 73, 37, 32	
V70 XC(-00)	2000	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
V70 XC(-00)	2000	RTI	RTI	●	●	●	○	●	●		
V70 XC(-00)	2000	TCM	AW42AWD	●	●	●	○	●	●	10, 11	
V70 XC(-00)	2000	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
V70 XC(-00)	2000	CCM	CCM	●	●	●	○	●	○		
V70 XC(-00)	2000	CPM	CPM	●	●	●	○	●	○		
V70 XC(-00)	2000	Power seat module, left	Power seat module, left	●	●	●	○	●	●		
V70 XC(-00)	2000	Power seat module, Right	Power seat module, Right	●	●	●	○	●	●		
V70 XC(-00)	2000	SRS	SRS	●	●	●	○	●	○		
V70 XC(-00)	1999	Petrol	B5204T3	●	●	●	●	●	●	1, 50	Elec. Ident.
V70 XC(-00)	1999	Petrol	B5254T	●	●	●	●	●	●	1, 93	Elec. Ident.
V70 XC(-00)	1999	Combined instrument	Combined instrument	●	●	●	○	●	●	72, 73, 37, 32	
V70 XC(-00)	1999	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
V70 XC(-00)	1999	RTI	RTI	●	●	●	○	●	●		
V70 XC(-00)	1999	TCM	AW42AWD	●	●	●	○	●	●		
V70 XC(-00)	1999	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
V70 XC(-00)	1999	CCM	CCM	●	●	●	○	●	○		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 XC(-00)	1999	CPM	CPM	●	●	●	○	●	○		
V70 XC(-00)	1999	Power seat module, left	Power seat module, left	●	●	●	○	●	●		
V70 XC(-00)	1999	Power seat module, Right	Power seat module, Right	●	●	●	○	●	●		
V70 XC(-00)	1999	SRS	SRS	●	●	●	○	●	○		
V70 XC(01-)/XC70	2005	Petrol	B5244T4	●	●	●	●	●	●	1, 2, 3, 4, 5	
V70 XC(01-)/XC70	2005	Petrol	B5254T2	●	●	●	●	●	●	1, 2, 3, 4, 5, 6	
V70 XC(01-)/XC70	2005	Diesel	D5244T	●	●	●	○	●	●	7	
V70 XC(01-)/XC70	2005	AEM	AEM	●	●	●	●	●	●		
V70 XC(01-)/XC70	2005	AUM	AUM	●	●	●	●	●	○		
V70 XC(01-)/XC70	2005	CEM	CEM	●	●	●	●	●	●	27, 28, 150, 151, 29, 30, 31, 32	
V70 XC(01-)/XC70	2005	DIM	DIM	●	●	●	●	●	●	33, 35, 36, 37	
V70 XC(01-)/XC70	2005	PHM	PHM	●	●	●	●	●	○		
V70 XC(01-)/XC70	2005	REM	REM	●	●	●	●	●	●	39, 40	
V70 XC(01-)/XC70	2005	RTI	RTI	●	●	●	●	○	○		
V70 XC(01-)/XC70	2005	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24, 25	
V70 XC(01-)/XC70	2005	TCM	AW50/51AWD	●	●	●	●	●	●	10, 11	
V70 XC(01-)/XC70	2005	DEM	DEM	●	●	●	●	●	○		

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

[illegible]

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

[illegible]



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 XC(01-)/XC70	2003	Petrol	B5254T2	●	●	●	●	●	●	1, 2, 3, 4, 50	
V70 XC(01-)/XC70	2003	Diesel	D5244T	●	●	●	○	●	●	7	
V70 XC(01-)/XC70	2003	AEM	AEM	●	●	●	●	●	●		
V70 XC(01-)/XC70	2003	AUM	AUM	●	●	●	●	●	○		
V70 XC(01-)/XC70	2003	CEM	CEM	●	●	●	●	●	●	27, 51, 40, 30, 32	Immobiliser(Live Data)
V70 XC(01-)/XC70	2003	DIM	DIM	●	●	●	●	●	●	33, 35, 53, 37	
V70 XC(01-)/XC70	2003	PHM	PHM	●	●	●	●	●	○		
V70 XC(01-)/XC70	2003	REM	REM	●	●	●	●	●	●	55	
V70 XC(01-)/XC70	2003	RTI	RTI	●	●	●	●	○	○		
V70 XC(01-)/XC70	2003	SWM	SWM	●	●	●	●	●	○		
V70 XC(01-)/XC70	2003	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24	
V70 XC(01-)/XC70	2003	TCM	AW50/51AWD	●	●	●	●	●	●	10, 11	
V70 XC(01-)/XC70	2003	DEM	DEM	●	●	●	○	●	○		
V70 XC(01-)/XC70	2003	ABS/BCM	ABS/BCM	●	●	●	●	●	●	62, 63	
V70 XC(01-)/XC70	2003	SAS	SAS	●	●	●	○	●	○		
V70 XC(01-)/XC70	2003	CCM	CCM	●	●	●	●	●	○	41, 56, 56, 58	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 XC(01-)/XC70	2003	DDM	DDM	●	●	●	●	●	●	46, 47, 48	
V70 XC(01-)/XC70	2003	PDM	PDM	●	●	●	●	●	●	47, 59	
V70 XC(01-)/XC70	2003	PSM	PSM	●	●	●	●	●	●	48, 60	
V70 XC(01-)/XC70	2003	SRS	SRS	●	●	●	●	●	○		
V70 XC(01-)/XC70	2002	Petrol	B5234T7	●	●	●	●	●	●	1, 2, 3, 50	
V70 XC(01-)/XC70	2002	Petrol	B5244T3	●	●	●	●	●	●	1, 2, 3, 50	
V70 XC(01-)/XC70	2002	AEM	AEM	●	●	●	●	●	●		
V70 XC(01-)/XC70	2002	AUM	AUM	●	●	●	●	●	○		
V70 XC(01-)/XC70	2002	CEM	CEM	●	●	●	●	●	●	27, 51, 40, 30, 32	Immobiliser(Live Data)
V70 XC(01-)/XC70	2002	DIM	DIM	●	●	●	●	●	●	33, 35, 53, 37	
V70 XC(01-)/XC70	2002	PHM	PHM	●	●	●	●	●	○		
V70 XC(01-)/XC70	2002	REM	REM	●	●	●	●	●	●	55	
V70 XC(01-)/XC70	2002	RTI	RTI	●	●	●	●	○	○		
V70 XC(01-)/XC70	2002	SWM	SWM	●	●	●	●	●	○		
V70 XC(01-)/XC70	2002	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24	
V70 XC(01-)/XC70	2002	TCM	AW50/51AWD	●	●	●	●	●	●	10, 11	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 XC(01-)/XC70	2002	ABS/BCM	ABS/BCM	●	●	●	●	●	●	62, 63	
V70 XC(01-)/XC70	2002	SAS	SAS	●	●	●	○	●	○		
V70 XC(01-)/XC70	2002	CCM	CCM	●	●	●	●	●	○	41, 56, 56, 58	
V70 XC(01-)/XC70	2002	DDM	DDM	●	●	●	●	●	●	59	
V70 XC(01-)/XC70	2002	PDM	PDM	●	●	●	●	●	●	59	
V70 XC(01-)/XC70	2002	PSM	PSM	●	●	●	●	●	●	48, 60	
V70 XC(01-)/XC70	2002	SRS	SRS	●	●	●	●	●	○		
V70 XC(01-)/XC70	2001	Petrol	B5234T7	●	●	●	●	●	●	1, 50	Elec. Ident.
V70 XC(01-)/XC70	2001	Petrol	B5244T3	●	●	●	●	●	●	1, 50	Elec. Ident.
V70 XC(01-)/XC70	2001	AEM	AEM	●	●	●	●	●	●		
V70 XC(01-)/XC70	2001	AUM	AUM	●	●	●	●	○	○		
V70 XC(01-)/XC70	2001	CEM	CEM	●	●	●	●	●	●	27, 51, 40, 30, 32	Immobiliser(Live Data)
V70 XC(01-)/XC70	2001	DIM	DIM	●	●	●	●	●	●	33, 35, 53, 37	
V70 XC(01-)/XC70	2001	PHM	PHM	●	●	●	●	●	○		
V70 XC(01-)/XC70	2001	REM	REM	●	●	●	●	●	●		
V70 XC(01-)/XC70	2001	RTI	RTI	●	●	●	●	○	○		

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 XC(01-)/XC70	2001	SWM	SWM	●	●	●	●	●	○		
V70 XC(01-)/XC70	2001	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24	
V70 XC(01-)/XC70	2001	TCM	AW50/51AWD	●	●	●	●	●	●	10, 11	
V70 XC(01-)/XC70	2001	ABS/BCM	ABS/BCM	●	●	●	●	●	●		DSTC(Live Data); DSTC(Active Test)
V70 XC(01-)/XC70	2001	SAS	SAS	●	●	●	○	●	○		
V70 XC(01-)/XC70	2001	CCM	CCM	●	●	●	●	●	○	41, 56, 56, 58	
V70 XC(01-)/XC70	2001	DDM	DDM	●	●	●	●	●	●	47, 59	
V70 XC(01-)/XC70	2001	PDM	PDM	●	●	●	●	●	●	47, 59	
V70 XC(01-)/XC70	2001	PSM	PSM	●	●	●	●	●	●	48, 60	
V70 XC(01-)/XC70	2001	SRS	SRS	●	●	●	●	●	○		
V70(-00)	2000	Petrol	B5204T3	●	●	●	●	●	●	1, 50	Elec. Ident.
V70(-00)	2000	Petrol	B5204T4	●	●	●	●	●	●	1, 50	Elec. Ident.
V70(-00)	2000	Petrol	B5234T3	●	●	●	●	●	●	1, 50	Elec. Ident.
V70(-00)	2000	Petrol	B5234T7	●	●	●	●	●	●	1, 50	Elec. Ident.
V70(-00)	2000	Petrol	B5244S	●	●	●	○	●	●	88, 6, 89	Extend DTC; Elec. Ident.
V70(-00)	2000	Petrol	B5244S2	●	●	●	○	●	●	88, 6, 89	Extend DTC; Elec. Ident.
V70(-00)	2000	Petrol	B5244SG	●	●	●	○	●	○		Elec. Ident.
V70(-00)	2000	Petrol	B5244SG2	●	●	●	○	●	○		Elec. Ident.
V70(-00)	2000	Petrol	B5244T	●	●	●	●	●	●	1, 50	Elec. Ident.
V70(-00)	2000	Petrol	B5244T2	●	●	●	●	●	●	1, 50	Elec. Ident.
V70(-00)	2000	Diesel	D5252T MSA 15.8	●	○	○	○	●	●	91, 92	

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70(-00)	2000	Combined instrument	Combined instrument	●	●	●	○	●	●	72, 73, 37, 32	
V70(-00)	2000	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
V70(-00)	2000	RTI	RTI	●	●	●	○	●	●		
V70(-00)	2000	TCM	AW42AWD	●	●	●	○	●	●	10, 11	
V70(-00)	2000	TCM	AW50/51AWD	●	●	●	○	●	●	10, 11	
V70(-00)	2000	TCM	AW50-42	●	●	●	○	●	●	10, 11	
V70(-00)	2000	TCM	AW55-50/51SN	●	●	●	○	●	●	10, 11	
V70(-00)	2000	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
V70(-00)	2000	CCM	CCM	●	●	●	○	●	○		
V70(-00)	2000	CPM	CPM	●	●	●	○	●	○		
V70(-00)	2000	Power seat module, left	Power seat module, left	●	●	●	○	●	●		
V70(-00)	2000	Power seat module, right	Power seat module, Right	●	●	●	○	●	●		
V70(-00)	2000	SRS	SRS	●	●	●	○	●	○		
V70(-00)	1999	Petrol	B5204T3	●	●	●	●	●	●	1, 50	Elec. Ident.
V70(-00)	1999	Petrol	B5204T4	●	●	●	●	●	●	1, 93	Elec. Ident.
V70(-00)	1999	Petrol	B5234T3	●	●	●	●	●	●	1, 93	Elec. Ident.
V70(-00)	1999	Petrol	B5234T7	●	●	●	●	●	●	1, 93	Elec. Ident.
V70(-00)	1999	Petrol	B5234T8	●	●	●	○	●	●	1, 93	Elec. Ident.
V70(-00)	1999	Petrol	B5254S DENSO	●	●	●	○	●	●	88, 6, 89	Extend DTC; Elec. Ident.
V70(-00)	1999	Petrol	B5254T	●	●	●	●	●	●	1, 93	Elec. Ident.
V70(-00)	1999	Diesel	D5252T MSA 15.7	●	●	●	○	●	●		
V70(-00)	1999	Diesel	D5252T MSA 15.8	●	○	○	○	●	●	91, 92	
V70(-00)	1999	Combined instrument	Combined instrument	●	●	●	○	●	●	72, 73, 37, 32	
V70(-00)	1999	Lock and	Lock and alarm	●	●	●	○	●	●	80, 81, 40	
V70(-00)	1999	RTI	RTI	●	●	●	○	●	●		
V70(-00)	1999	TCM	AW42AWD	●	●	●	○	●	●		
V70(-00)	1999	TCM	AW50-42	●	●	●	○	●	●		
V70(-00)	1999	ABS/BCM	ABS/BCM	●	●	●	○	●	●		

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70(-00)	1999	CCM	CCM	●	●	●	○	●	○		
V70(-00)	1999	CPM	CPM	●	●	●	○	●	○		
V70(-00)	1999	Power seat module, left	Power seat module, left	●	●	●	○	●	●		
V70(-00)	1999	Power seat module, right	Power seat module, Right	●	●	●	○	●	●		
V70(-00)	1999	SRS	SRS	●	●	●	○	●	○		
V70(00-)	2005	Petrol	B5204T5	●	●	●	●	●	●	2, 3, 4, 5	
V70(00-)	2005	Petrol	B5244S	●	●	●	●	●	●	88, 6	
V70(00-)	2005	Petrol	B5244S2	●	●	●	●	●	●		
V70(00-)	2005	Petrol	B5244SG	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
V70(00-)	2005	Petrol	B5244SG2	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
V70(00-)	2005	Petrol	B5244T4	●	●	●	●	●	●	1, 2, 3, 4, 5	
V70(00-)	2005	Petrol	B5244T5	●	●	●	●	●	●	1, 2, 3, 4, 5, 6	
V70(00-)	2005	Petrol	B5254T2	●	●	●	●	●	●	1, 2, 3, 4, 5, 6	
V70(00-)	2005	Petrol	B5254T4	●	●	●	●	●	●	1, 2, 3, 4, 5, 6	
V70(00-)	2005	Diesel	D5244T	●	●	●	○	●	●	7	
V70(00-)	2005	Diesel	D5244T2	●	●	●	○	●	●	7	
V70(00-)	2005	Diesel	D5244T3	●	●	●	○	●	●	7	
V70(00-)	2005	AEM	AEM	●	●	●	●	●	●		
V70(00-)	2005	AUM	AUM	●	●	●	●	●	○		
V70(00-)	2005	CEM	CEM	●	●	●	●	●	●	27, 28, 150, 151, 29, 30, 31, 32	
V70(00-)	2005	DIM	DIM	●	●	●	●	●	●	33, 35, 36, 37	
V70(00-)	2005	PHM	PHM	●	●	●	●	●	○		
V70(00-)	2005	REM	REM	●	●	●	●	●	●	39, 40	
V70(00-)	2005	RTI	RTI	●	●	●	●	○	○		
V70(00-)	2005	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24, 25	
V70(00-)	2005	TCM	AW50/51AWD	●	●	●	●	●	●	10, 11	
V70(00-)	2005	TCM	AW55-50/51SN	●	●	●	●	●	●	10, 11	

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 (00-)	2005	DEM	DEM	●	●	●	●	●	○		
V70 (00-)	2005	DEM	DEM	●	●	●	●	●	○		
V70 (00-)	2005	ABS/BCM	ABS/BCM	●	●	●	●	●	●	62, 63	
V70 (00-)	2005	SAS	SAS	●	●	●	●	●	○		
V70 (00-)	2005	SUM	SUM	●	●	●	●	●	○		
V70 (00-)	2005	CCM	CCM	●	●	●	●	●	○	43, 44	
V70 (00-)	2005	DDM	DDM	●	●	●	●	●	●	46, 47, 48	
V70 (00-)	2005	PDM	PDM	●	●	●	●	●	●	46	
V70 (00-)	2005	PSM	PSM	●	●	●	●	●	●	48	
V70 (00-)	2005	SRS	SRS	●	●	●	●	●	○		
V70 (00-)	2004	Petrol	B5204T5	●	●	●	●	●	●	1, 2, 3, 4, 50	
V70 (00-)	2004	Petrol	B5234T3	●	●	●	●	●	●	1, 2, 3, 4, 50	
V70 (00-)	2004	Petrol	B5234T7	●	●	●	●	●	●	1, 2, 3, 4, 50	
V70 (00-)	2004	Petrol	B5244S	●	●	●	●	●	●	88, 6	
V70 (00-)	2004	Petrol	B5244S2	●	●	●	●	●	●		
V70 (00-)	2004	Petrol	B5244SG	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
V70 (00-)	2004	Petrol	B5244SG2	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
V70 (00-)	2004	Petrol	B5254T2	●	●	●	●	●	●	1, 2, 3, 4, 50	
V70 (00-)	2004	Petrol	B5254T4	●	●	●	●	●	●	1, 2, 3, 4, 5, 50	
V70 (00-)	2004	Diesel	D5244T	●	●	●	○	●	●	7	
V70 (00-)	2004	Diesel	D5244T2	●	●	●	○	●	●	7	
V70 (00-)	2004	AEM	AEM	●	●	●	●	●	●		
V70 (00-)	2004	AUM	AUM	●	●	●	●	●	○		
V70 (00-)	2004	CEM	CEM	●	●	●	●	●	●	27, 51, 40, 30, 32	Immobliser (Live Data)
V70 (00-)	2004	DIM	DIM	●	●	●	●	●	●	33, 35, 53, 37	
V70 (00-)	2004	PHM	PHM	●	●	●	●	●	○		
V70 (00-)	2004	REM	REM	●	●	●	●	●	●	55	
V70 (00-)	2004	RTI	RTI	●	●	●	●	○	○		
V70 (00-)	2004	SWM	SWM	●	●	●	●	●	○		

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 (00-)	2004	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24	
V70 (00-)	2004	TCM	AW50/51AWD	●	●	●	●	●	●	10, 11	
V70 (00-)	2004	TCM	AW55-50/51SN	●	●	●	●	●	●	10, 11	
V70 (00-)	2004	ABS/BCM	ABS/BCM	●	●	●	●	●	●	62, 63	
V70 (00-)	2004	SAS	SAS	●	●	●	○	●	○		
V70 (00-)	2004	SUM	SUM	●	●	●	●	●	○		
V70 (00-)	2004	CCM	CCM	●	●	●	●	●	○	41, 56, 56, 58	
V70 (00-)	2004	DDM	DDM	●	●	●	●	●	●	46, 47, 48	
V70 (00-)	2004	PDM	PDM	●	●	●	●	●	●	47, 59	
V70 (00-)	2004	PSM	PSM	●	●	●	●	●	●	48, 60	
V70 (00-)	2004	SRS	SRS	●	●	●	●	●	○		
V70 (00-)	2004	DEM	DEM	●	●	●	○	●	○		
V70 (00-)	2004	DEM	DEM	●	●	●	○	●	○		
V70 (00-)	2003	Petrol	B5204T5	●	●	●	●	●	●	1, 2, 3, 4, 50	
V70 (00-)	2003	Petrol	B5234T3	●	●	●	●	●	●	1, 2, 3, 4, 50	
V70 (00-)	2003	Petrol	B5234T7	●	●	●	●	●	●	1, 2, 3, 4, 50	
V70 (00-)	2003	Petrol	B5244S	●	●	●	●	●	●	88, 6	
V70 (00-)	2003	Petrol	B5244S2	●	●	●	●	●	●		
V70 (00-)	2003	Petrol	B5244SG	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
V70 (00-)	2003	Petrol	B5244SG2	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
V70 (00-)	2003	Petrol	B5244T3	●	●	●	●	●	●	1, 2, 3, 4, 50	
V70 (00-)	2003	Petrol	B5254T2	●	●	●	●	●	●	1, 2, 3, 4, 50	
V70 (00-)	2003	Diesel	D5244T	●	●	●	○	●	●	7	
V70 (00-)	2003	Diesel	D5244T2	●	●	●	○	●	●	7	
V70 (00-)	2003	AEM	AEM	●	●	●	●	●	●		
V70 (00-)	2003	AUM	AUM	●	●	●	●	●	○		
V70 (00-)	2003	CEM	CEM	●	●	●	●	●	●	27, 51, 40, 30, 32	Immobiliser (Live Data)
V70 (00-)	2003	DIM	DIM	●	●	●	●	●	●	33, 35, 53, 37	
V70 (00-)	2003	PHM	PHM	●	●	●	●	●	○		

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 (00-)	2003	REM	REM	●	●	●	●	●	●	55	
V70 (00-)	2003	RTI	RTI	●	●	●	●	○	○		
V70 (00-)	2003	SWM	SWM	●	●	●	●	●	○		
V70 (00-)	2003	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24	
V70 (00-)	2003	TCM	AW50/51AWD	●	●	●	●	●	●	10, 11	
V70 (00-)	2003	TCM	AW55-50/51SN	●	●	●	●	●	●	10, 11	
V70 (00-)	2003	ABS/BCM	ABS/BCM	●	●	●	●	●	●	62, 63	
V70 (00-)	2003	SAS	SAS	●	●	●	○	●	○		
V70 (00-)	2003	CCM	CCM	●	●	●	●	●	○	41, 56, 56, 58	
V70 (00-)	2003	DDM	DDM	●	●	●	●	●	●	46, 47, 48	
V70 (00-)	2003	PDM	PDM	●	●	●	●	●	●	47, 59	
V70 (00-)	2003	PSM	PSM	●	●	●	●	●	●	48, 60	
V70 (00-)	2003	SRS	SRS	●	●	●	●	●	○		
V70 (00-)	2003	DEM	DEM	●	●	●	○	●	○		
V70 (00-)	2002	Petrol	B5204T5	●	●	●	●	●	●	1, 2, 3, 50	
V70 (00-)	2002	Petrol	B5234T3	●	●	●	●	●	●	1, 2, 3, 50	
V70 (00-)	2002	Petrol	B5234T7	●	●	●	●	●	●	1, 2, 3, 4, 50	
V70 (00-)	2002	Petrol	B5244S	●	●	●	●	●	●	88, 6, 89	Extend DTC; Elec. Ident. ; Block DTC
V70 (00-)	2002	Petrol	B5244S2	●	●	●	●	●	●	6, 89	Extend DTC; Elec. Ident. ; Block DTC
V70 (00-)	2002	Petrol	B5244SG	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
V70 (00-)	2002	Petrol	B5244SG2	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
V70 (00-)	2002	Petrol	B5244T3	●	●	●	●	●	●	1, 2, 3, 50	
V70 (00-)	2002	Diesel	D5244T	●	●	●	○	●	●	90, 7	
V70 (00-)	2002	Diesel	D5244T2	●	●	●	○	●	●	90, 7	
V70 (00-)	2002	AEM	AEM	●	●	●	●	●	●		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 (00-)	2002	AUM	AUM	●	●	●	●	●	○		
V70 (00-)	2002	CEM	CEM	●	●	●	●	●	●	27, 51, 40, 30, 32	Immobiliser(Live Data)
V70 (00-)	2002	DIM	DIM	●	●	●	●	●	●	33, 35, 53, 37	
V70 (00-)	2002	PHM	PHM	●	●	●	●	●	○		
V70 (00-)	2002	REM	REM	●	●	●	●	●	●	55	
V70 (00-)	2002	RTI	RTI	●	●	●	●	○	○		
V70 (00-)	2002	SWM	SWM	●	●	●	●	●	○		
V70 (00-)	2002	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24	
V70 (00-)	2002	TCM	AW50/51AWD	●	●	●	●	●	●	10, 11	
V70 (00-)	2002	TCM	AW55-50/51SN	●	●	●	●	●	●	10, 11	
V70 (00-)	2002	ABS/BCM	ABS/BCM	●	●	●	●	●	●	62, 63	
V70 (00-)	2002	SAS	SAS	●	●	●	○	●	○		
V70 (00-)	2002	CCM	CCM	●	●	●	●	●	○	41, 56, 56, 58	
V70 (00-)	2002	DDM	DDM	●	●	●	●	●	●	59	
V70 (00-)	2002	PDM	PDM	●	●	●	●	●	●	59	
V70 (00-)	2002	PSM	PSM	●	●	●	●	●	●	48, 60	
V70 (00-)	2002	SRS	SRS	●	●	●	●	●	○		
V70 (00-)	2001	Petrol	B5204T5	●	●	●	●	●	●	1, 50	Elec. Ident.
V70 (00-)	2001	Petrol	B5234T3	●	●	●	●	●	●	1, 50	Elec. Ident.
V70 (00-)	2001	Petrol	B5234T7	●	●	●	●	●	●	1, 50	Elec. Ident.
V70 (00-)	2001	Petrol	B5244S	●	●	●	●	●	●	88, 6, 89	Extend DTC; Elec. Ident. ; Block DTC
V70 (00-)	2001	Petrol	B5244S2	●	●	●	●	●	●	6, 89	Extend DTC; Elec. Ident. ; Block DTC
V70 (00-)	2001	Petrol	B5244SG	●	●	●	●	●	●	89	Extend DTC; Elec. Ident. ; Block DTC
V70 (00-)	2001	Petrol	B5244T3	●	●	●	●	●	●	1, 50	Elec. Ident.
V70 (00-)	2001	Diesel	D5244T	●	●	●	○	●	●	90, 7	
V70 (00-)	2001	Diesel	D5252T MSA 15.8	●	○	○	●	●	●	91, 92	
V70 (00-)	2001	AEM	AEM	●	●	●	●	●	●		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 (00-)	2001	AUM	AUM	●	●	●	●	●	○		
V70 (00-)	2001	CEM	CEM	●	●	●	●	●	●	27, 51, 40, 30, 32	Immobiliser(Live Data)
V70 (00-)	2001	DIM	DIM	●	●	●	●	●	●	33, 35, 53, 37	
V70 (00-)	2001	PHM	PHM	●	●	●	●	●	○		
V70 (00-)	2001	REM	REM	●	●	●	●	●	●		
V70 (00-)	2001	RTI	RTI	●	●	●	●	○	○		
V70 (00-)	2001	SWM	SWM	●	●	●	●	●	○		
V70 (00-)	2001	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24	
V70 (00-)	2001	TCM	AW50/51AWD	●	●	●	○	●	●	10, 11	
V70 (00-)	2001	TCM	AW55-50/51SN	●	●	●	●	●	●	10, 11	
V70 (00-)	2001	ABS/BCM	ABS/BCM	●	●	●	●	●	●		
V70 (00-)	2001	SAS	SAS	●	●	●	○	●	○		
V70 (00-)	2001	CCM	CCM	●	●	●	●	●	○	41, 56, 56, 58	
V70 (00-)	2001	DDM	DDM	●	●	●	●	●	●	47, 59	
V70 (00-)	2001	PDM	PDM	●	●	●	●	●	●	47, 59	
V70 (00-)	2001	PSM	PSM	●	●	●	●	●	●	48, 60	
V70 (00-)	2001	SRS	SRS	●	●	●	●	●	○		
V70 (00-)	2000	Petrol	B5204T5	●	●	●	●	●	●	1, 50	Elec. Ident.
V70 (00-)	2000	Petrol	B5234T3	●	●	●	●	●	●	1, 50	Elec. Ident.
V70 (00-)	2000	Petrol	B5244T3	●	●	●	●	●	●	1, 50	Elec. Ident.
V70 (00-)	2000	Diesel	D5252T MSA 15.8	●	○	○	●	●	●	91, 92	
V70 (00-)	2000	AUM	AUM	●	●	●	●	●	○		
V70 (00-)	2000	CEM	CEM	●	●	●	●	●	●	27, 21, 32	Immobiliser(Live Data)
V70 (00-)	2000	DIM	DIM	●	●	●	●	●	●	33, 35, 53, 37	
V70 (00-)	2000	PHM	PHM	●	●	●	●	○	○		
V70 (00-)	2000	REM	REM	●	●	●	●	●	●		
V70 (00-)	2000	RTI	RTI	●	●	●	●	○	○		
V70 (00-)	2000	SWM	SWM	●	●	●	●	●	○		
V70 (00-)	2000	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24	
V70 (00-)	2000	TCM	AW50/51AWD	●	●	●	●	●	●	10, 11	
V70 (00-)	2000	TCM	AW55-50/51SN	●	●	●	●	●	●	10, 11	
V70 (00-)	2000	ABS/BCM	ABS/BCM	●	●	●	●	●	●		DSTC(Live Data); DSTC(Active Test)



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 (00-)	2000	SAS	SAS	●	●	●	○	●	○		
V70 (00-)	2000	CCM	CCM	●	●	●	●	●	○	41, 56, 56, 58	
V70 (00-)	2000	DDM	DDM	●	●	●	●	●	●	47, 59	
V70 (00-)	2000	PDM	PDM	●	●	●	●	●	●	47, 59	
V70 (00-)	2000	PSM	PSM	●	●	●	●	●	●	48, 60	
V70 (00-)	2000	SRS	SRS	●	●	●	●	●	○		
XC60	2009	DEM	TF-80SC AWD	●	●	●	●	●	●		
XC60	2009	DEM	M66 AWD	●	●	●	●	●	●		
XC60	2009	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 2, 3, 4, 5	
XC60	2009	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 2, 3, 4, 5	
XC60	2009	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 2, 3, 4, 5	
XC60	2009	SUM		●	●	●	●	●	●	10	
XC60	2009	PSM		●	●	●	●	●	●		
XC60	2009	AUU		●	●	●	●	●	○		
XC60	2009	DDM		●	●	●	●	●	●	12, 13	
XC60	2009	PDM		●	●	●	●	●	●	12, 13	
XC60	2009	PAM		●	●	●	●	●	○	14	
XC60	2009	KVM		●	●	●	●	●	○	16, 17	
XC60	2009	AUD		●	●	●	●	○	○		
XC60	2009	CPM		●	●	●	●	●	●		
XC60	2009	SUB		●	●	●	●	○	○		
XC60	2009	BCM		●	●	●	●	●	●	10	
XC60	2009	SAS		●	●	●	●	●	○		
XC60	2009	TRM		●	●	●	●	●	○		
XC60	2009	PBM		●	●	●	●	●	○	43	
XC60	2009	MMM		●	●	●	●	○	○		
XC60	2009	PHM		●	●	●	●	●	○		
XC60	2009	ECM	D5244T5	●	●	●	●	●	●		
XC60	2009	ECM	D5244T4	●	●	●	●	●	●		
XC60	2009	ECM	B6304T2	●	●	●	●	●	●	9	
XC60	2009	CVM		●	●	●	●	○	○		
XC60	2009	HCM		●	●	●	●	●	○	83	
XC60	2009	BPM		●	●	●	●	●	○		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
XC60	2009	CEM		●	●	●	●	●	●	35, 39	
XC60	2009	CCM		●	●	●	●	●	●	28, 29, 30, 31, 32	
XC60	2009	ICM		●	●	●	●	●	●		
XC60	2009	POT		●	●	●	●	●	○		
XC60	2009	HLDF		●	●	●	●	●	○		
XC60	2009	IAM		●	●	●	●	○	○		
XC60	2009	DIM		●	●	●	●	●	○	47, 48, 49, 50, 51, 52	
XC60	2009	DABM		●	●	●	●	○	○		
XC60	2009	RDAR		●	●	●	●	●	○		
XC60	2009	SRS		●	●	●	●	●	○	25, 26, 27	
XC60	2009	FSM		●	●	●	●	●	○		
XC60	2009	PAC		●	●	●	●	●	○		
XC70 (08-)	2009	DEM	TF-80SC AWD	●	●	●	●	●	●		
XC70 (08-)	2009	DEM	M66 AWD	●	●	●	●	●	●		
XC70 (08-)	2009	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 2, 3, 4, 5	
XC70 (08-)	2009	ECM	D5244T5	●	●	●	●	●	●	58, 59, 60, 61, 62, 63, 90, 64	
XC70 (08-)	2009	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 2, 3, 4, 5	
XC70 (08-)	2009	ECM	D5244T4	●	●	●	●	●	●	58, 59, 60, 61, 62, 63, 90, 64	
XC70 (08-)	2009	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 2, 3, 4, 5	
XC70 (08-)	2009	ECM	B6324S	●	●	●	●	●	●	9	
XC70 (08-)	2009	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 2, 3, 4, 5	
XC70 (08-)	2009	ECM	B6304T2	●	●	●	●	●	●	9	
XC70 (08-)	2009	POT		●	●	●	●	○	○		
XC70 (08-)	2009	SUM		●	●	●	●	●	●	10	
XC70 (08-)	2009	IAM		●	●	●	●	○	○		
XC70 (08-)	2009	PSM		●	●	●	●	●	●		
XC70 (08-)	2009	HLDF		●	●	●	●	●	○		
XC70 (08-)	2009	AUU		●	●	●	●	●	○		
XC70 (08-)	2009	DDM		●	●	●	●	●	●	12, 13	
XC70 (08-)	2009	PDM		●	●	●	●	●	●	12, 13	
XC70 (08-)	2009	PAM		●	●	●	●	●	○	14	
XC70 (08-)	2009	KVM		●	●	●	●	●	○	16, 17	
XC70 (08-)	2009	AUD		●	●	●	●	○	○		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
XC70 (08-)	2009	CPM		●	●	●	●	●	●		
XC70 (08-)	2009	SUB		●	●	●	●	○	○		
XC70 (08-)	2009	HCM		●	●	●	●	●	○	23	
XC70 (08-)	2009	SRS		●	●	●	●	●	○	25, 26, 27	
XC70 (08-)	2009	BCM		●	●	●	●	●	●	10	
XC70 (08-)	2009	SAS		●	●	●	●	●	○		
XC70 (08-)	2009	CCM		●	●	●	●	●	●	28, 29, 30, 31, 32	
XC70 (08-)	2009	CEM		●	●	●	●	●	●	35, 39	
XC70 (08-)	2009	TRM		●	●	●	●	●	○		
XC70 (08-)	2009	PBM		●	●	●	●	●	○	43	
XC70 (08-)	2009	FSM		●	●	●	●	●	○		
XC70 (08-)	2009	DIM		●	●	●	●	●	○	47, 48, 49, 50, 51, 52	
XC70 (08-)	2009	PAC		●	●	●	●	●	○		
XC70 (08-)	2009	RDAR		●	●	●	●	○	○		
XC70 (08-)	2009	MMM		●	●	●	●	○	○		
XC70 (08-)	2009	ICM		●	●	●	●	●	●		
XC70 (08-)	2009	BPM		●	●	●	●	●	○		
XC70 (08-)	2009	PHM		●	●	●	●	●	○		
XC70 (08-)	2008	DEM	TF-80SC AWD	●	●	●	●	●	●		
XC70 (08-)	2008	DEM	M66 AWD	●	●	●	●	●	●		
XC70 (08-)	2008	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 2, 3, 4, 5	
XC70 (08-)	2008	ECM	D5244T5	●	●	●	●	●	●	58, 59, 60, 61, 62, 63, 90, 64	
XC70 (08-)	2008	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 2, 3, 4, 5	
XC70 (08-)	2008	ECM	D5244T4	●	●	●	●	●	●	58, 59, 60, 61, 62, 63, 90, 64	
XC70 (08-)	2008	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 2, 3, 4, 5	
XC70 (08-)	2008	ECM	B6324S	●	●	●	●	●	●	9	
XC70 (08-)	2008	POT		●	●	●	●	○	○		
XC70 (08-)	2008	SUM		●	●	●	●	●	●	10	
XC70 (08-)	2008	IAM		●	●	●	●	○	○		
XC70 (08-)	2008	PSM		●	●	●	●	●	●		
XC70 (08-)	2008	RDAR		●	●	●	●	○	○		
XC70 (08-)	2008	HLDF		●	●	●	●	●	○		
XC70 (08-)	2008	AUU		●	●	●	●	●	○		

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
XC70 (08-)	2008	DDM		●	●	●	●	●	●	12, 13	
XC70 (08-)	2008	PDM		●	●	●	●	●	●	12, 13	
XC70 (08-)	2008	PAM		●	●	●	●	●	○	14	
XC70 (08-)	2008	KVM		●	●	●	●	●	○	16, 17	
XC70 (08-)	2008	AUD		●	●	●	●	○	○		
XC70 (08-)	2008	PHM		●	●	●	●	●	○		
XC70 (08-)	2008	CPM		●	●	●	●	●	●		
XC70 (08-)	2008	SUB		●	●	●	●	○	○		
XC70 (08-)	2008	HCM		●	●	●	●	●	○	23	
XC70 (08-)	2008	SRS		●	●	●	●	●	○	25, 26, 27	
XC70 (08-)	2008	BCM		●	●	●	●	●	●	80	
XC70 (08-)	2008	SAS		●	●	●	●	●	○		
XC70 (08-)	2008	CEM		●	●	●	●	●	●	35, 39	
XC70 (08-)	2008	DIM		●	●	●	●	●	○	47, 48, 49, 50, 51, 52	
XC70 (08-)	2008	CCM		●	●	●	●	●	●	28, 29, 30, 31, 32	
XC70 (08-)	2008	TRM		●	●	●	●	●	○		
XC70 (08-)	2008	PBM		●	●	●	●	●	○	43	
XC70 (08-)	2008	BPM		●	●	●	●	●	○		
XC70 (08-)	2008	MMM		●	●	●	●	○	○		
XC70 (08-)	2008	FSM		●	●	●	●	●	○		
XC70 (08-)	2008	ICM		●	●	●	●	●	●		
XC70 (08-)	2008	PAC		●	●	●	●	●	○		
XC90	2005	AEM	AEM	●	●	●	●	●	●		
XC90	2005	ATM	ATM	●	●	●	○	●	○		
XC90	2005	AUD	AUD	●	●	●	●	○	○		
XC90	2005	MP2	MP2	●	●	●	●	●	●		
XC90	2005	CEM	CEM	●	●	●	●	●	●	27, 28, 150, 151, 29, 30, 31, 32	Immobiliser(Live Data)
XC90	2005	DIM	DIM	●	●	●	●	●	●	33, 34, 35, 36, 37	
XC90	2005	ICM	ICM	●	●	●	●	●	●		
XC90	2005	MP1	MP1	●	●	●	●	●	●		
XC90	2005	MMM	MMM	●	●	●	●	○	○		
XC90	2005	PHM	PHM	●	●	●	●	●	○		
XC90	2005	REM	REM	●	●	●	●	●	●	39, 40	

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
XC90	2005	SAS	SAS	●	●	●	●	●	○		
XC90	2005	SAS	SAS	●	●	●	●	●	○		
XC90	2005	CCM	CCM	●	●	●	●	●	○	43, 44	
XC90	2005	DDM	DDM	●	●	●	●	●	●	46, 47, 48	
XC90	2005	PDM	PDM	●	●	●	●	●	●	46, 47	
XC90	2005	PSM	PSM	●	●	●	●	●	●	48	
XC90	2004	Petrol	B5254T2	●	●	●	●	●	●	1, 2, 3, 4, 50	
XC90	2004	Petrol	B6294T	●	●	●	●	●	●	1, 2, 3, 4, 50	
XC90	2004	Diesel	D5244T	●	●	●	○	●	●	7	
XC90	2004	AEM	AEM	●	●	●	●	●	●		
XC90	2004	ATM	ATM	●	●	●	○	●	○		
XC90	2004	AUD	AUD	●	●	●	●	○	○		
XC90	2004	MP2	MP2	●	●	●	●	●	●		
XC90	2004	CEM	CEM	●	●	●	●	●	●	27, 51, 40, 30, 32	Immobliser(Live Data)
XC90	2004	DIM	DIM	●	●	●	●	●	●	33, 34, 35, 36, 37	
XC90	2004	ICM	ICM	●	●	●	●	●	●		
XC90	2004	MP1	MP1	●	●	●	●	●	●		
XC90	2004	MMM	MMM	●	●	●	●	○	○		
XC90	2004	PHM	PHM	●	●	●	●	○	○		
XC90	2004	REM	REM	●	●	●	●	●	●	55	
XC90	2004	SWM	SWM	●	●	●	●	●	○		
XC90	2004	SUB	SUB	●	●	●	●	○	○		
XC90	2004	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24	
XC90	2004	TCM	4T65AWD	●	●	●	●	●	●	10, 11	
XC90	2004	TCM	AW50/51AWD	●	●	●	●	●	●	10, 11	
XC90	2004	DEM	DEM	●	●	●	○	●	○		
XC90	2004	ABS/BCM	ABS/BCM	●	●	●	●	●	●	62, 63	
XC90	2004	SAS	SAS	●	●	●	○	●	○		
XC90	2004	CCM	CCM	●	●	●	●	●	○	41, 56, 56, 58	
XC90	2004	DDM	DDM	●	●	●	●	●	●	46, 47, 48	
XC90	2004	PDM	PDM	●	●	●	●	●	●	47, 59	
XC90	2004	PSM	PSM	●	●	●	●	●	●	48, 60	
XC90	2004	SRS	SRS	●	●	●	●	●	○		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
XC90	2003	Petrol	B5254T2	●	●	●	●	●	●	1, 2, 3, 4, 50	
XC90	2003	Petrol	B6294T	●	●	●	●	●	●	1, 2, 3, 4, 50	
XC90	2003	Diesel	D5244T	●	●	●	○	●	●	7	
XC90	2003	AEM	AEM	●	●	●	●	●	●		
XC90	2003	ATM	ATM	●	●	●	○	●	○		
XC90	2003	AUD	AUD	●	●	●	●	○	○		
XC90	2003	MP2	MP2	●	●	●	●	●	●		
XC90	2003	CEM	CEM	●	●	●	●	●	●	27, 51, 40, 30, 32	Immobliser(Live Data)
XC90	2003	DIM	DIM	●	●	●	●	●	●	33, 34, 35, 36, 37	
XC90	2003	ICM	ICM	●	●	●	●	●	●		
XC90	2003	MP1	MP1	●	●	●	●	●	●		
XC90	2003	MMM	MMM	●	●	●	●	○	○		
XC90	2003	PHM	PHM	●	●	●	●	●	○		
XC90	2003	REM	REM	●	●	●	●	●	●	55	
XC90	2003	SWM	SWM	●	●	●	●	●	○		
XC90	2003	SUB	SUB	●	●	●	●	○	○		
XC90	2003	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24	
XC90	2003	TCM	4T65AWD	●	●	●	●	●	●	10, 11	
XC90	2003	TCM	AW50/51AWD	●	●	●	●	●	●	10, 11	
XC90	2003	ABS/BCM	ABS/BCM	●	●	●	●	●	●	62, 63	
XC90	2003	SAS	SAS	●	●	●	○	●	○		
XC90	2003	CCM	CCM	●	●	●	●	●	○	41, 56, 56, 58	
XC90	2003	DDM	DDM	●	●	●	●	●	●	46, 47, 48	
XC90	2003	PDM	PDM	●	●	●	●	●	●	47, 59	
XC90	2003	PSM	PSM	●	●	●	●	●	●	48, 60	
XC90	2003	SRS	SRS	●	●	●	●	●	○		
XC90	2003	DEM	DEM	●	●	●	○	●	○		
XC90	2009	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 3, 81, 84, 85	
XC90	2009	DEM	TF-80SC AWD	●	●	●	●	●	○		
XC90	2009	DEM	M66 AWD	●	●	●	●	●	○		
XC90	2009	BCM	D5244T5	●	●	●	●	●	●	86, 87	
XC90	2009	SAS	D5244T5	●	●	●	●	●	○		
XC90	2009	HCM	D5244T5	●	●	●	●	●	○		

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
XC90	2009	ECM	D5244T5	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
XC90	2009	CEM	D5244T5	●	●	●	●	●	●	91, 92, 94, 95, 96	
XC90	2009	TCM	TF-80SC AWD	●	●	●	●	●	●	81, 82, 83, 84, 85	
XC90	2009	DEM	TF-80SC AWD	●	●	●	●	●	○		
XC90	2009	DEM	M66 AWD	●	●	●	●	●	○		
XC90	2009	BCM	D5244T4	●	●	●	●	●	●	86, 87	
XC90	2009	SAS	D5244T4	●	●	●	●	●	○		
XC90	2009	HCM	D5244T4	●	●	●	●	●	○		
XC90	2009	CEM	D5244T4	●	●	●	●	●	●	91, 92, 94, 95, 96	
XC90	2009	ECM	D5244T4	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
XC90	2009	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 3, 81, 84, 85	
XC90	2009	DEM	TF-80SC AWD	●	●	●	●	●	●		
XC90	2009	BCM	B8444S	●	●	●	●	●	●	86, 87	
XC90	2009	ECM	B8444S	●	●	●	●	●	●		
XC90	2009	SAS	B8444S	●	●	●	●	●	○		
XC90	2009	HCM	B8444S	●	●	●	●	●	●		
XC90	2009	CEM	B8444S	●	●	●	●	●	●	91, 92, 94, 95, 96	
XC90	2009	TCM	TF-80SC AWD	●	●	●	●	●	●	81, 82, 83, 84, 85	
XC90	2009	DEM	TF-80SC AWD	●	●	●	●	●	●		
XC90	2009	BCM	B6324S	●	●	●	●	●	●	86, 87	
XC90	2009	SAS	B6324S	●	●	●	●	●	○		
XC90	2009	HCM	B6324S	●	●	●	●	●	●		
XC90	2009	ECM	B6324S	●	●	●	●	●	●	9	
XC90	2009	CEM	B6324S	●	●	●	●	●	●	91, 92, 94, 95, 96	
XC90	2009	DEM	TF-80SC AWD	●	●	●	●	●	○		
XC90	2009	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 3, 81, 84, 85	
XC90	2009	BCM	B5254T2	●	●	●	●	●	●	86, 87	
XC90	2009	SAS	B5254T2	●	●	●	●	●	○		
XC90	2009	ECM	B5254T2	●	●	●	●	●	●	74	
XC90	2009	HCM	B5254T2	●	●	●	●	●	○		
XC90	2009	CEM	B5254T2	●	●	●	●	●	●	91, 92, 94, 95, 96	
XC90	2009	GPS		●	●	●	●	●	○		
XC90	2009	SRS		●	●	●	●	●	○	95	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
XC90	2009	PSM		●	●	●	●	●	●	107	
XC90	2009	DDM		●	●	●	●	●	●	107, 108	
XC90	2009	PDM		●	●	●	●	●	●	108	
XC90	2009	AEM		●	●	●	●	●	●		
XC90	2009	REM		●	●	●	●	●	●		
XC90	2009	CPM		●	○	○	○	●	○	111, 112	
XC90	2009	RDAR		●	●	●	●	●	○		
XC90	2009	AUD		●	●	●	●	○	○		
XC90	2009	PAC		●	○	○	○	○	○		
XC90	2009	AUU		●	●	●	●	●	○		
XC90	2009	CCM		●	●	●	●	●	○	30, 113, 114, 29, 32, 115	
XC90	2009	DIM		●	●	●	●	●	●	116, 117, 28, 46, 47, 118	
XC90	2009	UEM		●	●	●	●	●	●	119, 120, 128, 122, 123, 124	
XC90	2009	IAM		●	●	●	●	●	●		
XC90	2009	ICM		●	●	●	●	●	●		
XC90	2009	MMM		●	●	●	●	○	○		
XC90	2009	PHM		●	●	●	●	●	○		
XC90	2009	TCM	TF-80SC	●	●	●	●	●	●	1, 2, 3, 4, 85	
XC90	2008	TCM	TF-80SC AWD	●	●	●	●	●	●	81, 82, 83, 84, 85	
XC90	2008	DEM	TF-80SC AWD	●	●	●	●	●	○		
XC90	2008	DEM	M66 AWD	●	●	●	●	●	○		
XC90	2008	BCM	D5244T5	●	●	●	●	●	●	86, 87	
XC90	2008	CEM	D5244T5	●	●	●	●	●	●	91, 92, 94, 95, 96	
XC90	2008	HCM	D5244T5	●	●	●	●	●	○		
XC90	2008	SAS	D5244T5	●	●	●	●	●	○		
XC90	2008	ECM	D5244T5	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
XC90	2008	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 3, 81, 84, 85	
XC90	2008	DEM	TF-80SC AWD	●	●	●	●	●	○		
XC90	2008	DEM	M66 AWD	●	●	●	●	●	○		
XC90	2008	BCM	D5244T4	●	●	●	●	●	●	86, 87	
XC90	2008	CEM	D5244T4	●	●	●	●	●	●	91, 92, 94, 95, 96	
XC90	2008	HCM	D5244T4	●	●	●	●	●	○		
XC90	2008	SAS	D5244T4	●	●	●	●	●	○		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
XC90	2008	ECM	D5244T4	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
XC90	2008	TCM	TF-80SC AWD	●	●	●	●	●	●	81, 82, 83, 84, 85	
XC90	2008	DEM	TF-80SC AWD	●	●	●	●	●	●		
XC90	2008	BCM	B8444S	●	●	●	●	●	●	86, 87	
XC90	2008	ECM	B8444S	●	●	●	●	●	●		
XC90	2008	SAS	B8444S	●	●	●	●	●	○		
XC90	2008	CEM	B8444S	●	●	●	●	●	●	91, 92, 94, 95, 96	
XC90	2008	HCM	B8444S	●	●	●	●	●	○		
XC90	2008	DEM	TF-80SC AWD	●	●	●	●	●	●		
XC90	2008	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 3, 81, 84, 85	
XC90	2008	BCM	B6324S	●	●	●	●	●	●	86, 87	
XC90	2008	SAS	B6324S	●	●	●	●	●	○		
XC90	2008	CEM	B6324S	●	●	●	●	●	●	91, 92, 94, 95, 96	
XC90	2008	HCM	B6324S	●	●	●	●	●	○		
XC90	2008	ECM	B6324S	●	●	●	●	●	●	9	
XC90	2008	DEM	TF-80SC AWD	●	●	●	●	●	○		
XC90	2008	TCM	TF-80SC AWD	●	●	●	●	●	●	81, 82, 83, 84, 85	
XC90	2008	BCM	B5254T2	●	●	●	●	●	●	86, 87	
XC90	2008	CEM	B5254T2	●	●	●	●	●	●	91, 92, 94, 95, 96	
XC90	2008	HCM	B5254T2	●	●	●	●	●	○		
XC90	2008	SAS	B5254T2	●	●	●	●	●	○		
XC90	2008	ECM	B5254T2	●	●	●	●	●	●	74	
XC90	2008	GPS		●	●	●	●	●	○		
XC90	2008	SRS		●	●	●	●	●	○	95	
XC90	2008	PSM		●	●	●	●	●	●	107	
XC90	2008	DDM		●	●	●	●	●	●	107, 108	
XC90	2008	PDM		●	●	●	●	●	●	108	
XC90	2008	AEM		●	●	●	●	●	●		
XC90	2008	REM		●	●	●	●	●	●		
XC90	2008	CPM		●	○	○	○	●	○	111, 112	
XC90	2008	RDAR		●	●	●	●	●	○		
XC90	2008	IAM		●	●	●	●	●	●		
XC90	2008	AUD		●	●	●	●	○	○		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
XC90	2008	PAC		●	○	○	○	○	○		
XC90	2008	AUU		●	●	●	●	●	○		
XC90	2008	PHM		●	●	●	●	●	○		
XC90	2008	CCM		●	●	●	●	●	○	30, 113, 114, 29, 32, 115	
XC90	2008	DIM		●	●	●	●	●	●	116, 117, 28, 46, 47, 118	
XC90	2008	UEM		●	●	●	●	●	●	119, 120, 128, 122, 123, 124	
XC90	2008	ICM		●	●	●	●	●	●		
XC90	2008	MMM		●	●	●	●	○	○		
XC90	2008	TCM	TF-80SC	●	●	●	●	●	●	1, 2, 3, 4, 85	
XC90	2007	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 3, 81, 84, 85	
XC90	2007	DEM	TF-80SC AWD	●	●	●	●	●	○		
XC90	2007	DEM	M66 AWD	●	●	●	●	●	○		
XC90	2007	BCM	D5244T4	●	●	●	●	●	●	86, 87	
XC90	2007	CEM	D5244T4	●	●	●	●	●	●	91, 92, 94, 95, 96	
XC90	2007	HCM	D5244T4	●	●	●	●	●	○		
XC90	2007	SAS	D5244T4	●	●	●	●	●	○		
XC90	2007	ECM	D5244T4	●	●	●	●	●	●	58, 59, 89, 60, 61, 62, 63, 64	
XC90	2007	TCM	TF-80SC AWD	●	●	●	●	●	●	81, 82, 83, 84, 85	
XC90	2007	DEM	TF-80SC AWD	●	●	●	●	●	●		
XC90	2007	BCM	B8444S	●	●	●	●	●	●	86, 87	
XC90	2007	SAS	B8444S	●	●	●	●	●	○		
XC90	2007	CEM	B8444S	●	●	●	●	●	●	91, 92, 94, 95, 96	
XC90	2007	HCM	B8444S	●	●	●	●	●	○		
XC90	2007	ECM	B8444S	●	●	●	●	●	●		
XC90	2007	DEM	TF-80SC AWD	●	●	●	●	●	●		
XC90	2007	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 3, 81, 84, 85	
XC90	2007	BCM	B6324S	●	●	●	●	●	●	86, 87	
XC90	2007	SAS	B6324S	●	●	●	●	●	○		
XC90	2007	CEM	B6324S	●	●	●	●	●	●	91, 92, 94, 95, 96	
XC90	2007	HCM	B6324S	●	●	●	●	●	○		
XC90	2007	ECM	B6324S	●	●	●	●	●	●	9	
XC90	2007	DEM	M66 AWD	●	●	●	●	●	○		
XC90	2007	TCM	AW55-50/51SN	●	●	●	●	●	●	100, 101, 102, 103, 125	

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
XC90	2007	DEM	AW50/51 AWD	●	●	●	●	●	○		
XC90	2007	TCM	TF-80SC AWD	●	●	●	●	●	●	81, 82, 83, 84, 85	
XC90	2007	BCM	B5254T2	●	●	●	●	●	●	86, 87	
XC90	2007	CEM	B5254T2	●	●	●	●	●	●	91, 92, 94, 95, 96	
XC90	2007	HCM	B5254T2	●	●	●	●	●	○		
XC90	2007	SAS	B5254T2	●	●	●	●	●	○		
XC90	2007	ECM	B5254T2	●	●	●	●	●	●	74	
XC90	2007	GPS		●	●	●	●	●	○		
XC90	2007	SRS		●	●	●	●	●	○	95	
XC90	2007	PSM		●	●	●	●	●	●	107	
XC90	2007	DDM		●	●	●	●	●	●	107, 108	
XC90	2007	PDM		●	●	●	●	●	●	108	
XC90	2007	AEM		●	●	●	●	●	●		
XC90	2007	PHM		●	●	●	●	●	○		
XC90	2007	REM		●	●	●	●	●	●		
XC90	2007	CPM		●	○	○	○	●	○	111, 112	
XC90	2007	RDAR		●	●	●	●	●	○		
XC90	2007	CCM		●	●	●	●	●	○	30, 113, 114, 29, 32, 115	
XC90	2007	IAM		●	●	●	●	●	●		
XC90	2007	AUD		●	●	●	●	○	○		
XC90	2007	PAC		●	○	○	○	○	○		
XC90	2007	MMM		●	●	●	●	○	○		
XC90	2007	AUU		●	●	●	●	●	○		
XC90	2007	DIM		●	●	●	●	●	●	116, 117, 28, 46, 47, 118	
XC90	2007	UEM		●	●	●	●	●	●	119, 120, 128, 122, 123, 124	
XC90	2007	ICM		●	●	●	●	●	●		
XC90	2007	TCM	TF-80SC	●	●	●	●	●	●	1, 2, 3, 4, 85	
XC90	2006	TCM	TF-80SC AWD	●	●	●	●	●	●	1, 3, 81, 84, 85	
XC90	2006	DEM	TF-80SC AWD	●	●	●	●	●	○		
XC90	2006	DEM	M66 AWD	●	●	●	●	●	○		
XC90	2006	BCM	D5244T4	●	●	●	●	●	●	86, 87	
XC90	2006	CEM	D5244T4	●	●	●	●	●	●	91, 92, 94, 95	
XC90	2006	SAS	D5244T4	●	●	●	●	●	○		

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
XC90	2006	PDM		●	●	●	●	●	●	108	
XC90	2006	AEM		●	●	●	●	●	●		
XC90	2006	AUD		●	●	●	●	○	○		
XC90	2006	ICM		●	●	●	●	●	●		
XC90	2006	PHM		●	●	●	●	●	○		
XC90	2006	DIM		●	●	●	●	●	●	116, 117, 28, 46, 47	
XC90	2006	CPM		●	○	○	○	●	○	111, 112	
XC90	2006	UEM		●	●	●	●	●	●	119, 120, 128, 122, 123, 124	
XC90	2006	CCM		●	●	●	●	●	○	30, 113, 114, 29, 32, 115	
XC90	2006	MMM		●	●	●	●	○	○		
XC90	2005	Petrol	B5254T2	●	●	●	●	●	●	1, 2, 3, 4, 5, 6	
XC90	2005	Petrol	B6294T	●	●	●	●	●	●	1, 2, 3, 4, 5, 6	
XC90	2005	Petrol	B8444S	●	●	●	○	●	●		
XC90	2005	Diesel	D5244T	●	●	●	○	●	●	7	
XC90	2005	TCM	4T65AWD	●	●	●	●	●	●	10, 11	
XC90	2005	TCM	AW50/51AWD	●	●	●	●	●	●	10, 11	
XC90	2005	DEM	DEM	●	●	●	●	●	○		
XC90	2005	TCM	TF-80SC AWD	●	●	●	●	●	●		
XC90	2005	ABS/BCM	ABS/BCM	●	●	●	●	●	●		
XC90	2005	SUB	SUB	●	●	●	●	○	○		
XC90	2005	SRS	SRS	●	●	●	●	●	○		
XC90	2005	UEM	UEM	●	●	●	●	●	●	21, 22, 23, 24, 25	
V90	1998	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
V90	1998	Immobilizer	IMM	●	●	●	○	●	○		
V90	1998	Petrol	ECM	●	●	●	○	●	○		
V90	1998	CI	CI	●	○	○	○	○	○	0 0001	
V90	1998	PSL	PSL	●	●	●	○	●	○		
V90	1998	PSR	PSR	●	●	●	○	●	●		
V90	1998	RTI	RTI	●	●	●	○	●	●		
V90	1998	SRS	SRS	●	●	●	○	●	○		
V90	1998	TCM	AW30-40	●	●	●	○	●	○		
V90	1997	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
V90	1997	Immobilizer	IMM	●	●	●	○	●	○		



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V90	1997	Petrol	ECM	●	●	●	○	●	○		
V90	1997	CI	CI	●	○	○	○	○	○	0 0001	
V90	1997	PSL	PSL	●	●	●	○	●	○		
V90	1997	PSR	PSR	●	●	●	○	●	●		
V90	1997	RTI	RTI	●	●	●	○	●	●		
V90	1997	SRS	SRS	●	●	●	○	●	○		
V90	1997	TCM	AW30-40	●	●	●	○	●	○		
V70(-00)	1998	ABS/BCM	ABS/BCM	●	●	●	○	●	○		
V70(-00)	1998	ECM	D5252T MSA 15.7	●	●	●	○	●	○		
V70(-00)	1998	Motronic 4.4	ECM	●	●	●	○	●	○		
V70(-00)	1998	Immobilizer	IMM	●	●	●	○	●	○		
V70(-00)	1998	CI	CI	●	●	●	○	●	○	0 0001	
V70(-00)	1998	VGLA	VGLA	●	●	●	○	○	○		
V70(-00)	1998	PSL	PSL	●	●	●	○	●	○		
V70(-00)	1998	PSR	PSR	●	●	●	○	●	●		
V70(-00)	1998	CPM	CPM	●	●	●	○	●	●		
V70(-00)	1998	RTI	RTI	●	●	●	○	●	●		
V70(-00)	1998	SRS	SRS	●	●	●	○	●	○		
V70(-00)	1998	TCM	AW42AWD	●	●	●	○	●	○		
V70(-00)	1997	ABS/BCM	ABS/BCM	●	●	●	○	●	○		
V70(-00)	1997	ECM	D5252T MSA 15.7	●	●	●	○	●	○		
V70(-00)	1997	Motronic 4.4	ECM	●	●	●	○	●	○		
V70(-00)	1997	Immobilizer	IMM	●	●	●	○	●	○		
V70(-00)	1997	CI	CI	●	●	●	○	●	○	0 0001	
V70(-00)	1997	VGLA	VGLA	●	●	●	○	○	○		
V70(-00)	1997	PSL	PSL	●	●	●	○	●	○		
V70(-00)	1997	PSR	PSR	●	●	●	○	●	●		
V70(-00)	1997	CPM	CPM	●	●	●	○	●	●		
V70(-00)	1997	RTI	RTI	●	●	●	○	●	●		
V70(-00)	1997	SRS	SRS	●	●	●	○	●	○		
V70(-00)	1997	TCM	AW42AWD	●	●	●	○	●	○		
V70 XC(-00)	1998	ABS/BCM	ABS/BCM	●	●	●	○	●	○		
V70 XC(-00)	1998	CI	CI	●	●	●	○	●	○	0 0001	



MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V70 XC(-00)	1998	VGLA	VGLA	●	●	●	○	○	○		
V70 XC(-00)	1998	PSL	PSL	●	●	●	○	●	○		
V70 XC(-00)	1998	PSR	PSR	●	●	●	○	●	●		
V70 XC(-00)	1998	Immobilizer	IMM	●	●	●	○	●	○		
V70 XC(-00)	1998	ECM	D5252T MSA 15.7	●	●	●	○	●	○		
V70 XC(-00)	1998	RTI	RTI	●	●	●	○	●	●		
V70 XC(-00)	1998	SRS	SRS	●	●	●	○	●	○		
V70 XC(-00)	1998	TCM	AW42AWD	●	●	●	○	●	○		
V40	1998	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
V40	1998	CI	CI	●	●	●	○	●	●	0 0001	
V40	1998	Immobilizer	IMM	●	●	●	○	●	●		
V40	1998	VGLA	VGLA	●	●	●	○	●	●		
V40	1998	CPM	CPM	●	●	●	○	●	●		
V40	1998	DSA	DSA	●	●	●	○	●	●		
V40	1998	SRS	SRS	●	●	●	○	●	○		
V40	1998	TCM	AW50-42	●	●	●	○	●	○		
V40	1998	CCM	CCM	●	●	●	○	●	●		
V40	1998	RTI	RTI	●	●	●	○	●	●		
V40	1997	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
V40	1997	CI	CI	●	●	●	○	●	●	0 0001	
V40	1997	Immobilizer	IMM	●	●	●	○	●	●		
V40	1997	VGLA	VGLA	●	●	●	○	●	●		
V40	1997	CPM	CPM	●	●	●	○	●	●		
V40	1997	DSA	DSA	●	●	●	○	●	●		
V40	1997	SRS	SRS	●	●	●	○	●	○		
V40	1997	TCM	AW50-42	●	●	●	○	●	○		
V40	1997	CCM	CCM	●	●	●	○	●	●		
V40	1997	RTI	RTI	●	●	●	○	●	●		
V40	1996	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
V40	1996	CI	CI	●	●	●	○	●	●	0 0001	
V40	1996	Immobilizer	IMM	●	●	●	○	●	●		
V40	1996	VGLA	VGLA	●	●	●	○	●	●		
V40	1996	CPM	CPM	●	●	●	○	●	●		

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
V40	1996	DSA	DSA	●	●	●	○	●	●		
V40	1996	SRS	SRS	●	●	●	○	●	○		
V40	1996	TCM	AW50-42	●	●	●	○	●	○		
V40	1996	CCM	CCM	●	●	●	○	●	●		
V40	1996	RTI	RTI	●	●	●	○	●	●		
S90	1998	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
S90	1998	Immobilizer	IMM	●	●	●	○	●	○		
S90	1998	CI	CI	●	○	○	○	○	○	0 0001	
S90	1998	PSL	PSL	●	●	●	○	●	○		
S90	1998	PSR	PSR	●	●	●	○	●	●		
S90	1998	Engine 1	ECM	●	●	●	○	●	○		
S90	1998	SRS	SRS	●	●	●	○	●	○		
S90	1998	RTI	RTI	●	●	●	○	●	●		
S90	1998	TCM	AW30-43	●	●	●	○	●	○		
S90	1997	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
S90	1997	Immobilizer	IMM	●	●	●	○	●	○		
S90	1997	CI	CI	●	○	○	○	○	○	0 0001	
S90	1997	PSL	PSL	●	●	●	○	●	○		
S90	1997	PSR	PSR	●	●	●	○	●	○		
S90	1997	Engine 1	ECM	●	●	●	○	●	○		
S90	1997	SRS	SRS	●	●	●	○	●	○		
S90	1997	RTI	RTI	●	●	●	○	●	●		
S90	1997	TCM	AW30-43	●	●	●	○	●	○		
S70	1998	ABS/BCM	ABS/BCM	●	●	●	○	●	○		
S70	1998	Motronic 4.4	ECM	●	●	●	○	●	○		
S70	1998	ECM	D5252T MSA 15.7	●	●	●	○	●	○		
S70	1998	Engine 1	ECM	●	●	●	○	●	○		
S70	1998	Immobilizer	IMM	●	●	●	○	●	○		
S70	1998	CI	CI	●	○	○	○	○	○	0 0001	
S70	1998	VGLA	VGLA	●	●	●	○	○	○		
S70	1998	PSL	PSL	●	●	●	○	●	○		
S70	1998	PSR	PSR	●	●	●	○	●	○		
S70	1998	CPM	CPM	●	●	●	○	●	●		

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S70	1998	RTI	RTI	●	●	●	○	●	●		
S70	1998	SRS	SRS	●	●	●	○	●	○		
S70	1998	TCM	AW50-42	●	●	●	○	●	○		
S70	1997	ABS/BCM	ABS/BCM	●	●	●	○	●	○		
S70	1997	Petrol	ECM	●	●	●	○	●	○		
S70	1997	Motronic 4.4	ECM	●	●	●	○	●	○		
S70	1997	ECM	D5252T MSA 15.7	●	●	●	○	●	○		
S70	1997	Immobilizer	IMM	●	●	●	○	●	○		
S70	1997	CI	CI	●	○	○	○	○	○	0 0001	
S70	1997	VGLA	VGLA	●	●	●	○	○	○		
S70	1997	PSL	PSL	●	●	●	○	●	○		
S70	1997	PSR	PSR	●	●	●	○	●	○		
S70	1997	CPM	CPM	●	●	●	○	●	●		
S70	1997	RTI	RTI	●	●	●	○	●	●		
S70	1997	SRS	SRS	●	●	●	○	●	○		
S70	1997	TCM	AW50-42	●	●	●	○	●	○		
S40(-04)	1998	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
S40(-04)	1998	CI	CI	●	●	●	○	●	●	0 0001	
S40(-04)	1998	immobilizer	IMM	●	●	●	○	●	●		
S40(-04)	1998	VGLA	VGLA	●	●	●	○	●	●		
S40(-04)	1998	CPM	CPM	●	●	●	○	●	●		
S40(-04)	1998	DSA	DSA	●	●	●	○	●	●		
S40(-04)	1998	CCM	CCM	●	●	●	○	●	●		
S40(-04)	1998	RTI	RTI	●	●	●	○	●	●		
S40(-04)	1998	SRS	SRS	●	●	●	○	●	○		
S40(-04)	1998	TCM	AW50-42	●	●	●	○	●	○		
S40(-04)	1997	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
S40(-04)	1997	CI	CI	●	●	●	○	●	●	0 0001	
S40(-04)	1997	immobilizer	IMM	●	●	●	○	●	●		
S40(-04)	1997	VGLA	VGLA	●	●	●	○	●	●		
S40(-04)	1997	CPM	CPM	●	●	●	○	●	●		
S40(-04)	1997	DSA	DSA	●	●	●	○	●	●		
S40(-04)	1997	CCM	CCM	●	●	●	○	●	●		

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
S40(-04)	1997	RTI	RTI	●	●	●	○	●	●		
S40(-04)	1997	SRS	SRS	●	●	●	○	●	○		
S40(-04)	1997	TCM	AW50-42	●	●	●	○	●	○		
S40(-04)	1996	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
S40(-04)	1996	CI	CI	●	●	●	○	●	●	0 0001	
S40(-04)	1996	immobilizer	IMM	●	●	●	○	●	●		
S40(-04)	1996	VGLA	VGLA	●	●	●	○	●	●		
S40(-04)	1996	CPM	CPM	●	●	●	○	●	●		
S40(-04)	1996	DSA	DSA	●	●	●	○	●	●		
S40(-04)	1996	CCM	CCM	●	●	●	○	●	●		
S40(-04)	1996	RTI	RTI	●	●	●	○	●	●		
S40(-04)	1996	SRS	SRS	●	●	●	○	●	○		
S40(-04)	1996	TCM	AW50-42	●	●	●	○	●	○		
960	1997	Petrol	ECM	●	●	●	○	●	○		
960	1997	CI	CI	●	●	●	○	●	●	0 0001	
960	1997	immobilizer	IMM	●	●	●	○	●	○		
960	1997	PSL	PSL	●	●	●	○	●	○		
960	1997	PSR	PSR	●	●	●	○	●	○		
960	1997	TCM	AW30-43	●	●	●	○	●	○		
960	1997	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
960	1997	SRS	SRS	●	●	●	○	●	○		
960	1996	Petrol	ECM	●	●	●	○	●	○		
960	1996	CI	CI	●	●	●	○	●	●	0 0001	
960	1996	immobilizer	IMM	●	●	●	○	●	○		
960	1996	PSL	PSL	●	●	●	○	●	○		
960	1996	PSR	PSR	●	●	●	○	●	○		
960	1996	TCM	AW30-43	●	●	●	○	●	○		
960	1996	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
960	1996	SRS	SRS	●	●	●	○	●	○		
960	1995	Petrol	ECM	●	●	●	○	●	○		
960	1995	CI	CI	●	●	●	○	●	●	0 0001	
960	1995	immobilizer	IMM	●	●	●	○	●	○		
960	1995	PSL	PSL	●	●	●	○	●	○		

MaxiDAS_Volvo_V5.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle	Year	System	Type	ECU Info.	Read DTC	Clear DTC	FFD	Live Data	Active Test	Special Function	Other
960	1995	PSR	PSR	●	●	●	○	●	○		
960	1995	TCM	AW30-43	●	●	●	○	●	○		
960	1995	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
960	1995	SRS	SRS	●	●	●	○	●	○		
850	1997	Motronic 4.4	ECM	●	●	●	○	●	●		
850	1997	CI	CI	●	●	●	○	●	●	0 0001	
850	1997	immobilizer	IMM	●	●	●	○	●	○		
850	1997	PSL	PSL	●	●	●	○	●	○		
850	1997	PSR	PSR	●	●	●	○	●	○		
850	1997	TCM	AW50-42	●	●	●	○	●	●		
850	1997	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
850	1997	SRS	SRS	●	●	●	○	●	○		
850	1996	CI	CI	●	●	●	○	●	●	0 0001	
850	1996	Immobilizer	IMM	●	●	●	○	●	○		
850	1996	PSL	PSL	●	●	●	○	●	○		
850	1996	PSR	PSR	●	●	●	○	●	○		
850	1996	Motronic 4.4	ECM	●	●	●	○	●	●		
850	1996	TCM	AW50-42	●	●	●	○	●	●		
850	1996	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
850	1996	SRS	SRS	●	●	●	○	●	○		
850	1995	CI	CI	●	●	●	○	●	●	0 0001	
850	1995	Immobilizer	IMM	●	●	●	○	●	○		
850	1995	PSL	PSL	●	●	●	○	●	○		
850	1995	PSR	PSR	●	●	●	○	●	○		
850	1995	Petrol	ECM	●	●	●	○	●	●		
850	1995	TCM	AW50-42	●	●	●	○	●	●		
850	1995	ABS/BCM	ABS/BCM	●	●	●	○	●	●		
850	1995	SRS	SRS	●	●	●	○	●	○		

Special Function

ID	Description
0_0001	Resetting the service reminder lamp(SRL)
1	Readiness Code
2	Adaptation of the throttle unit
3	Quick test of exhaust camshaft control
4	Quick test of intake camshaft control
5	Quick test of the fuel pump (FP)
6	Quick test of the fuel tank system (USA/CDN)
7	Programming optimizing parameters
8	Activating TEST MODE
9	Control module adaption
10	Reset adaptation to zero
11	Resetting the counter for-Gearbox oil change
12	Resetting adaptation
13	Calibration of gear position sensor
14	Resetting the oil counter
15	Calibration the system
16	Calibrating the occupant weight sensor(OWS)
17	Configuring the number of seats
18	Storing the ID number for the occupant weight sensor (OWS)
19	Activating and reading off sun roof parameters
20	Add or Remove remote controls
21	Programming the control unit
22	Configuration of the siren
23	Replacing the control module
24	Reading the programmed values
25	Quick test of the tire pressure sensor
26	Logging detailed diagnostic data
27	Reading data for vehicle configuration
28	Programming the control module, central electronic module(CEM)
29	Quick test of alternator fuction
30	Resetting factory settings
31	Resetting low voltage counters
32	Resetting car
33	Testing all displays and lamps in instrument
34	Programming the audible acknowledgement signal, seat belt reminder
35	Programming the driver information module(DIM)
36	Reading off programmed values
37	Resetting the service reminder indicator(SRI)
38	Resetting the carphone code
39	Caibrating the position sensor for Bi-Xenon lamps
40	Reading off the alarm cause
41	Programming the climate control module (CCM)
42	Checking LIN bus
43	Reading off programmed parameters
44	Identifying the Damper Motor Module (DMM)
45	Programming the additional and parking heater
46	Initializing the window position
47	Programming soft stop
48	Programming the remote control setting
49	Checking current values

Special Function

ID	Description
50	Quick test of the fuel tank system
51	Programming the control module
52	Installing/removing key
53	Read-out of programmed values in driver information module (DIM)
54	Reading off static data
55	Calibrating the Bi-Xenon lamp position sensor
56	Self-adjustment of damper motor end stops
57	Adjusting parameter, ECC
58	Read-out of programmed values in driver information module
59	Window position set-up
60	programming the seat temperature
61	Calibration(DSTC)
62	Checking brake light switch adjustment
63	Calibration
64	Reading the user information
65	Activating/deactivating Volvo on Call
66	Volvo On Call service check
67	Reinstalling the spare battery
68	Calibrating the system
69	Add or Remove key
70	Resetting the SRL (Service Reminder Lamp) to zero
71	Program functionality
72	Programming combined instrument panel
73	Reading off programmed values in the combined instrument panel
74	Add/Erase keys
75	Erase the VIN code
76	Initiate immobilizer control module
77	Programming lock type
78	Programming new control module
79	Programming remote control
80	Checking the number of remote controls
81	Reading off the programmed values
82	Reading the static data
83	System test
84	Programming the ECC control module
85	Self-adjusting of shutter motor end position
86	Updating the electronic climate control module (ECC)
87	Resetting "Transmission oil replacement" counter
88	Readiness Code (USA/CDN)
89	Reading off the diagnostic operating cycle
90	Programming fuel pump (FP) start diesel
91	Programming the idle speed
92	Check and adjust dynamic pump setting
93	Quick fuel tank system test
94	IUMPR read out (USA/CDN)
95	Testing the fuel pump (FP)
96	Programming the optimizing parameters
97	Adaptation of the exhaust gas recirculation (EGR) valve
98	Combustion of soot particles
99	Resetting the odometer particle trap

Special Function

ID	Description
100	Resetting the adaptation values
101	Reading off the configuration
102	Programming of global opening/closing of windows
103	Testing all displays and lamps in the driver information module (DIM)
104	Indicates programmed values
105	Programming the infotainment control module(ICM)
106	Programming customer parameters
107	Calibration (cars with DSTC)
108	Calibration of the climate control module(CCM)
109	Programming remote control setting
110	Calibration of position sensor, GDL lamps
111	Calibration of position sensor
112	Resetting counter oil
113	Reading off VIN LEARNED
114	Programming a new control module
115	Programming the cruise control
116	Programming a new control unit
117	Positioning of accelerator pedal sensor
118	Continuous variable valve timing (CVVT) test
119	Activating the DSA warning lamp
120	Activating torque reduction
121	Modify the settings in the combined instrument panel
122	Programming the outside temperature display
123	Programming the trip computer function
124	Programming a new combined instrument panel
125	Resetting the mileage, new car
126	Resetting the service reminder lamp(SRL)
127	Calibrating the control module
128	Programming the alarm function
129	Programming the remote control function
130	Resetting the Transmission fluid change counter
131	Resetting the adaptation
132	Programming the climate control module
133	Self-adjustment of damper motor end positions
134	Idling speed adjustment
135	Positioning the throttle position sensor
136	Activating self-adjustment
137	Updating the climate control module
138	Updating the combined instrument panel for diesel engines
139	Reading cause of alarms
140	Programming and calibration
150	Installing low beam reduction US/CDN
151	Programming the control module, central electronic module(CEM) US/CDN
152	Programming the combined instrument panel
1	Resetting adaptation
2	resetting the "Transmission fluid change" counter
3	Calibration of gear position sensor
4	Activating gear indication
5	Control module adaptation
6	Readiness Code(USA/CDN)

Special Function

ID	Description
7	Reading off IUMPR(USA/CDN)
8	Quick test of fuel tank system(USA/CDM)
9	Resetting the adaptation values
10	Calibration
11	Activation
12	Initializing the window in the front door
13	Initializing the window in the rear door
14	Programming of Parking Assistance Module (PAM)
15	Checking all antennas
16	Check the communication with the remote control receiver
17	Remote control
18	Test of internal memory
19	Activation of quick-lock motors
20	Quick test of function of the additional/parking heater
21	Cooling of the cooling system
22	Activating components
23	Calibration of position sensor
24	Activation
25	Powering the SRS system
26	Calibrating the occupant weight sensor (OWS)
27	Checking the PAD-light
28	Reading off programmed values
29	Programming the calimate control module (CCM)
30	Calibrating the Climate Control Module (CCM)
31	Identifying components on the LIN network that belong to climate control system (CCM)
32	Reading out electronic damper motor, actual/preset range and tolerance limit
33	Programming the evaporator, climate control module (CCM)
34	Pre-delivery service for new car
35	Workshop test (TPMS)
36	Quick test of alternator funtion
37	Read-out and resetting alco-lock
38	Checking the control module before replacement
39	Reading off alarm cause
40	Reading off power supply positon
41	Check the brake light switch and brake pedal control switch adjustment
42	Calibration angle sensor
43	Activation snd service
44	Activating the internal test procedures
45	Calibration of radar and camera
46	Programming the driver information module(DIM)
47	Resetting the service reminder indicator(SRI)
48	Testing all indicator and lamp in the driver information module (DIM)
49	Read-out of fuel volume
50	Programming loudest audible signal, seat belt reminder
51	Programming seatbelt reminder in backseat
52	Programming text message, seatbelt reminder
53	Activation of installation image
54	Programming control module
55	Communication on MOST
56	Open-circuit in the MOST cable

Special Function

ID	Description
57	Reinstalling the reserve battery
58	Resetting counter particle filter
59	Adaptation of differential pressure sensor particle filter
60	Adaptation of throttle module
61	Adaptation of swivel channel throttle
62	Adaptation of mass airflow sensor
63	Adaptation of turbo control motor
64	Adaptation of mass airflow sensor
65	Combustion of soot particles
66	Checking injectors
67	Quick-test injectors
68	Combustion of soot particles,particle trap
69	Adaptation of the exhaust gas recirculation (EGR) valve
70	Resetting the adaptation values
71	Programming the optimizing parameters
72	Quick test of fuel tank system
73	Readiness Code
74	Adaptation of the throttle unit
75	Quick test of exhaust camshaft control
76	Quick test of intake camshaft control
77	Quick test of the fuel pump (FP)
78	Checking/adjusting ethanol content
79	Resetting the adaptation values
80	Calibration
81	Resetting the counter for Transmission oil, change
82	Resetting adaptation
83	Calibration of position sensor
84	Activation gear indication
85	Activation of adaption
86	Calibration (only vehicles with DSTC)
87	Checking brake light switch adjustment
88	Quick-test of HCM
89	Resetting counter oil
90	Adaptation of fuel pressure control valve
91	Programming control module
92	Quick test of alternator funtion
93	Resetting factory settings
94	Resetting low voltage counters
95	Resetting crash mode
96	Programming of short flash sequence
97	Pre-delivery service for new car
98	Reading off the alarm cause
99	Testing the fuel pump (FP)
100	Activating TEST MODE
101	Control module adaptation
102	Resetting the adaptation
103	Activating gear indication
104	Configuring the number of seats
105	Storing the ID number for the occupant weight sensor (OWS)
106	Checking current values

Special Function

ID	Description
107	Programming the remote control setting
108	Initiazing the window position
109	Programming soft stop
110	Calibrating the position for Bi-Xenon lamps
111	Activating components and functions
112	Programming the additional and parking heater
113	Identifying the Damper Motor Module (DMM)
114	Reading off the programmed parameters in the climate control module (CCM)
115	Compartment fan afterblow, status
116	Testing all needles and lamps in the dashboard
117	Programming the audible acknowledgement signal, seat belt reminder
118	Display of DSTC message
119	Activating and reading off sun roof parameter
120	Programming the control module
121	Configuring the number of siren
122	Replacing the control module
123	Reading the programmed values
124	Read out the stored ID numbers for the tyre pressure sensors
125	Resetting Gearbox fluid change counter
126	Programming optimising parameters
127	Activating/reading out components/functions
128	Configuration of the siren
129	Activating/deactivating Volvo On Call
130	Service check forVolvo On Call
131	Resetting the carphone code
132	Reading the user information
133	Calibrating the system
134	Checking the Four-C(Continuouslyly Controlled Chassis Concept)keypad unit
135	ETM test
136	Extended diagnostic trouble code (DTC)reading
137	Reading off blocks of diagnostic trouble codes(DTCS)
138	Reading off the diagnostic operating cycle
139	Extended fault-tracing for the diagnostic trouble code(DTC),Engine control module (ECM)
140	Resetting the Transmission fluid change counter
141	Resetting the odometer particle trap
142	Checking the additive level
143	Refilling the feed hose with additive
144	Resetting the tank level gauge
145	Programming remote control setting
146	Reading off the configuration
147	Read out of the number of programmed remote keys
148	Utlasning artikel/serienr RFR
149	Initializing the window position
150	Checking the window in the rear door
151	Calibration (cars with DSTC)
152	Programming the seat temperature
153	Reading out detected/expected control modules/sensors
154	Calibration of position sensor, GDL lamps
155	Programming of global opening/closing of windows
156	Programming of rear window wiper when reversing

Special Function

ID	Description
157	Setting clock deviation
158	Ignition switch key position
159	Read-out of part number remotes receiver and siren
160	Position sensor xenon lamp
161	Resetting the service reminder indicator (SRI)
162	Reading off and programming vehicle mode
164	Resetting counter by-passing alcolock
165	Indicates programmed values
166	Programming the infotainment control module (ICM)
167	Programming other settings
168	Programming the clock
169	Adaption reset,control valve inlet(throttle)
170	Calibration of position sensor
171	Calibrating the position sensor for Bi-Xenon lamps
172	Finding the predefined service position
173	Unlocking catches
174	Calibration of position sensor
175	Loading assistance adjustment
176	Restart the Convertible Roof Module (CRM)
177	Reading off diagnostic data
178	Initializing the front seat position